



# TaoTronics TT-BA07 Battery Replacement

This guide will help you to remove and replace the battery from the device.

Written By: Niko Fabian



---

## INTRODUCTION

If the battery will not hold any charge or if no power is going through to the device you will have to change the battery.



### TOOLS:


- [Metal Spudger Set](#) (1)
-

## Step 1 — Battery




- Remove the rubber pad from the bottom of the device by using the nylon spudger to pry the glue holding it together. Then use the spudger to remove the rubber pad.

## Step 2

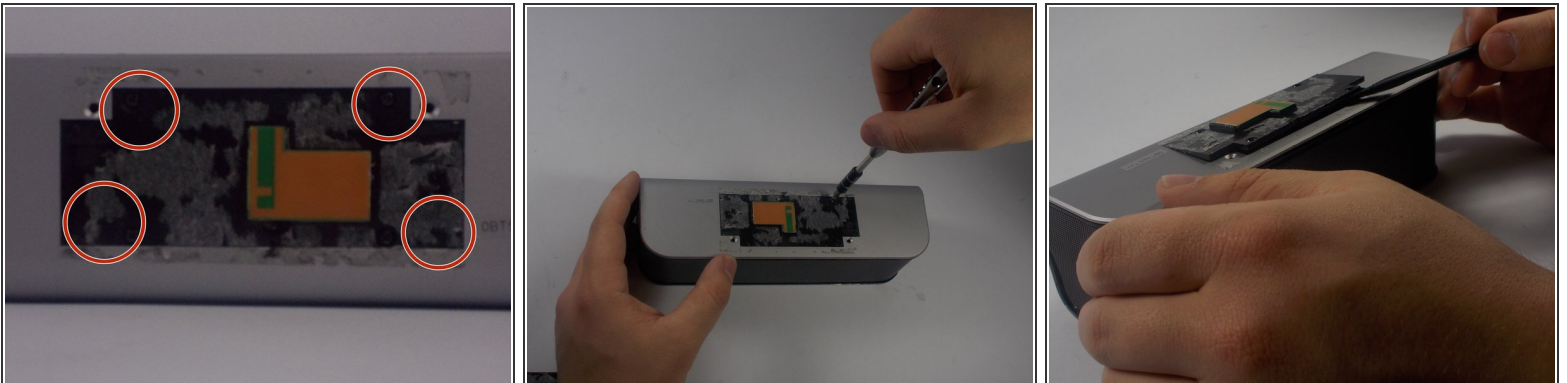


- Unscrew the four 6mm screws located under pad using the PH0 screwdriver head and lift plastic cover using the nylon spudger. Be careful not to sever the wire that leads to the circuit board.

### Step 3

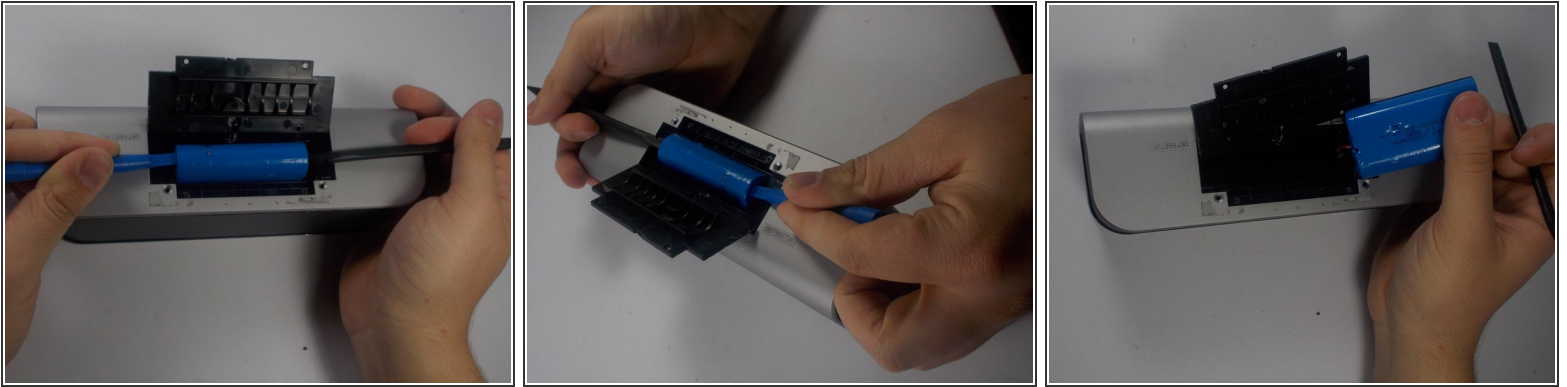


- Use the nylon spudger and the plastic opening tool to lift up the battery from the casing. Use the spudger on one side and the plastic opening tool on the other.

### Step 4

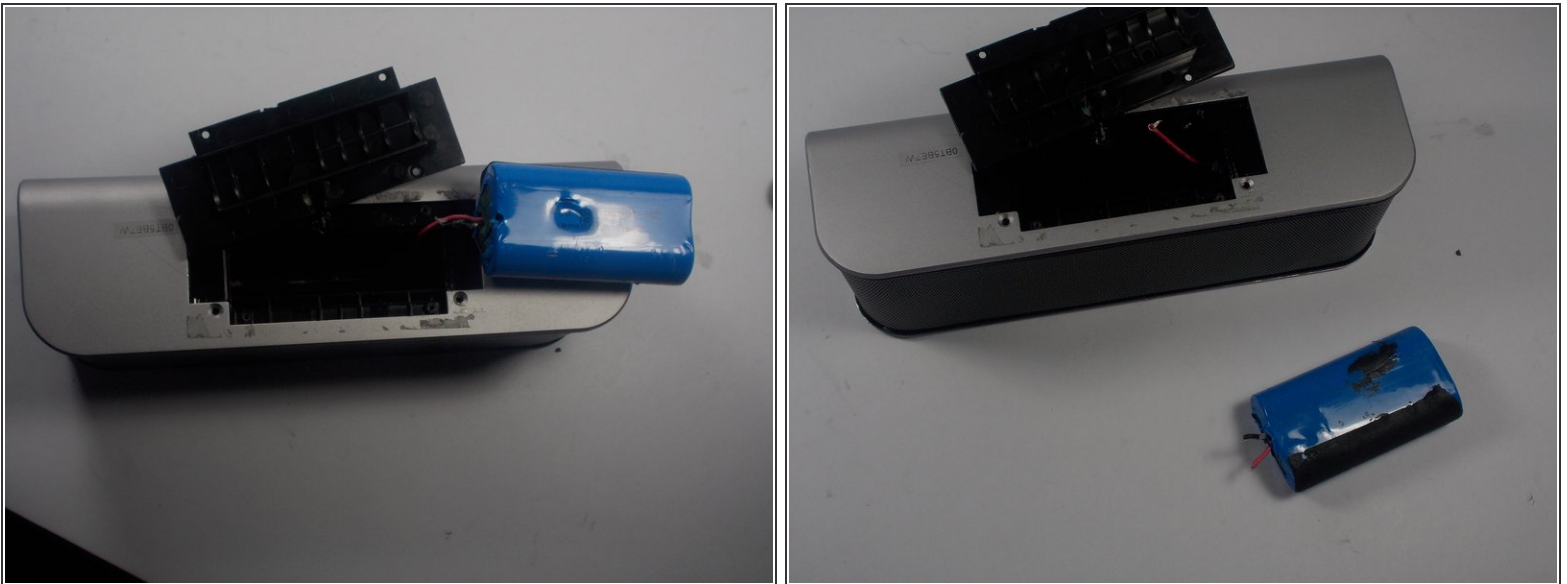

 You may damage your device in this step and may ruin your battery in the process.

- To remove battery, cut the wires that connect to the battery.
  - To reconnect battery, solder wires back onto new battery.
-  For soldering help, check out iFixit's [How to Solder and Desolder Connections](#) guide.

To reassemble your device, follow these instructions in reverse order.