



Nikon Coolpix L340 Memory Card Replacement

This guide will walk you through the process of replacing a memory card if it is not working properly or if you are inserting one for the first time.

Written By: Kelly Kryzak



INTRODUCTION

Follow this step by step guide for memory card replacement.

Step 1 — Memory Card



- Turn the camera so that the flash is facing downward- you are now looking at the bottom of the camera.
- If the camera lens is pointing towards you, there should be a small lever on the right hand side.
- Take this lever and push it away from your body, while simultaneously pulling upwards.

Step 2



- Gently press down on the memory card until you hear a click, then release the pressure to eject the card and slowly pull it upwards out of the slot.

To reassemble your device, follow these instructions in reverse order.