



Pentax Optio WG-2 Shutter and Power Button Replacement

Replace the power and shutter buttons of your Pentax Optio WG-2.

Written By: Matthew Bessette



INTRODUCTION

Use this guide to replace the power and shutter buttons of the Pentax Optio WG-2.




TOOLS:

- [Tweezers](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Shutter and Power Button



- Use your finger to peel the grip off the top of the camera.
- For best results, start from the right side of the camera, opposite from the buttons.

 Once the grip is removed, you will most likely lose the water-tight seal.

Step 2

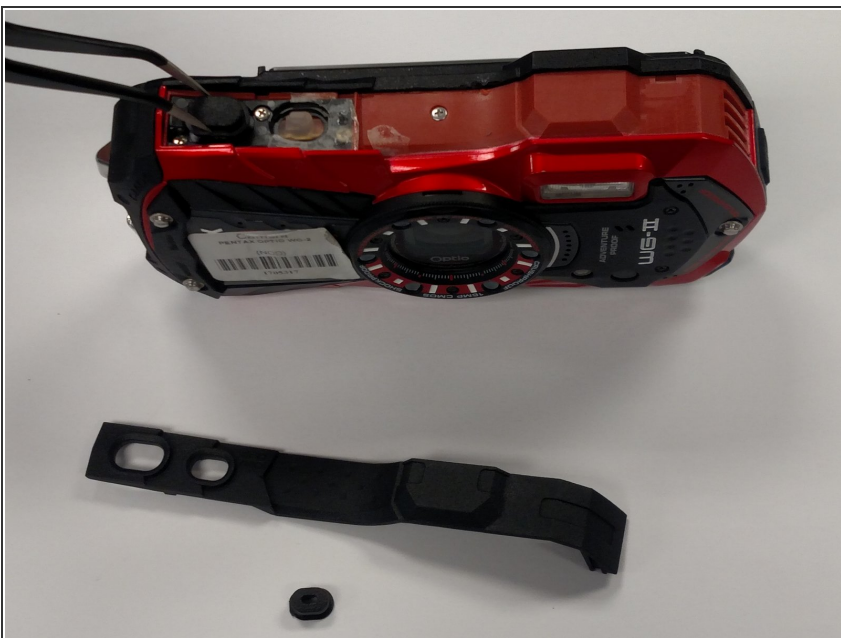

- Use the tweezers to remove the two buttons from the top of the camera.
- ⓘ The buttons may fall out while removing the grip.

To reassemble your device, follow these instructions in reverse order.