



Sony Handycam HDR-CX220 Battery Replacement

Replace your camcorder Battery to make your camera function again!

Written By: Keven



INTRODUCTION

This step is very quick and easy. It is used when the battery needs to be replaced or removed.

Step 1 — Battery



- Push in the battery indicator.

Step 2



- Slide the battery out of the slot.
- ★ To put the battery back in, line up the battery's metal part with the camera's and slide it in.

To reassemble your device, follow these instructions in reverse order.