




# Toshiba Satellite Click 2 Pro Heat Sync Fan Replacement

In the guide you will learn how to remove the fan from the Toshiba Satellite Click Pro.

Written By: Paul DeOrsey

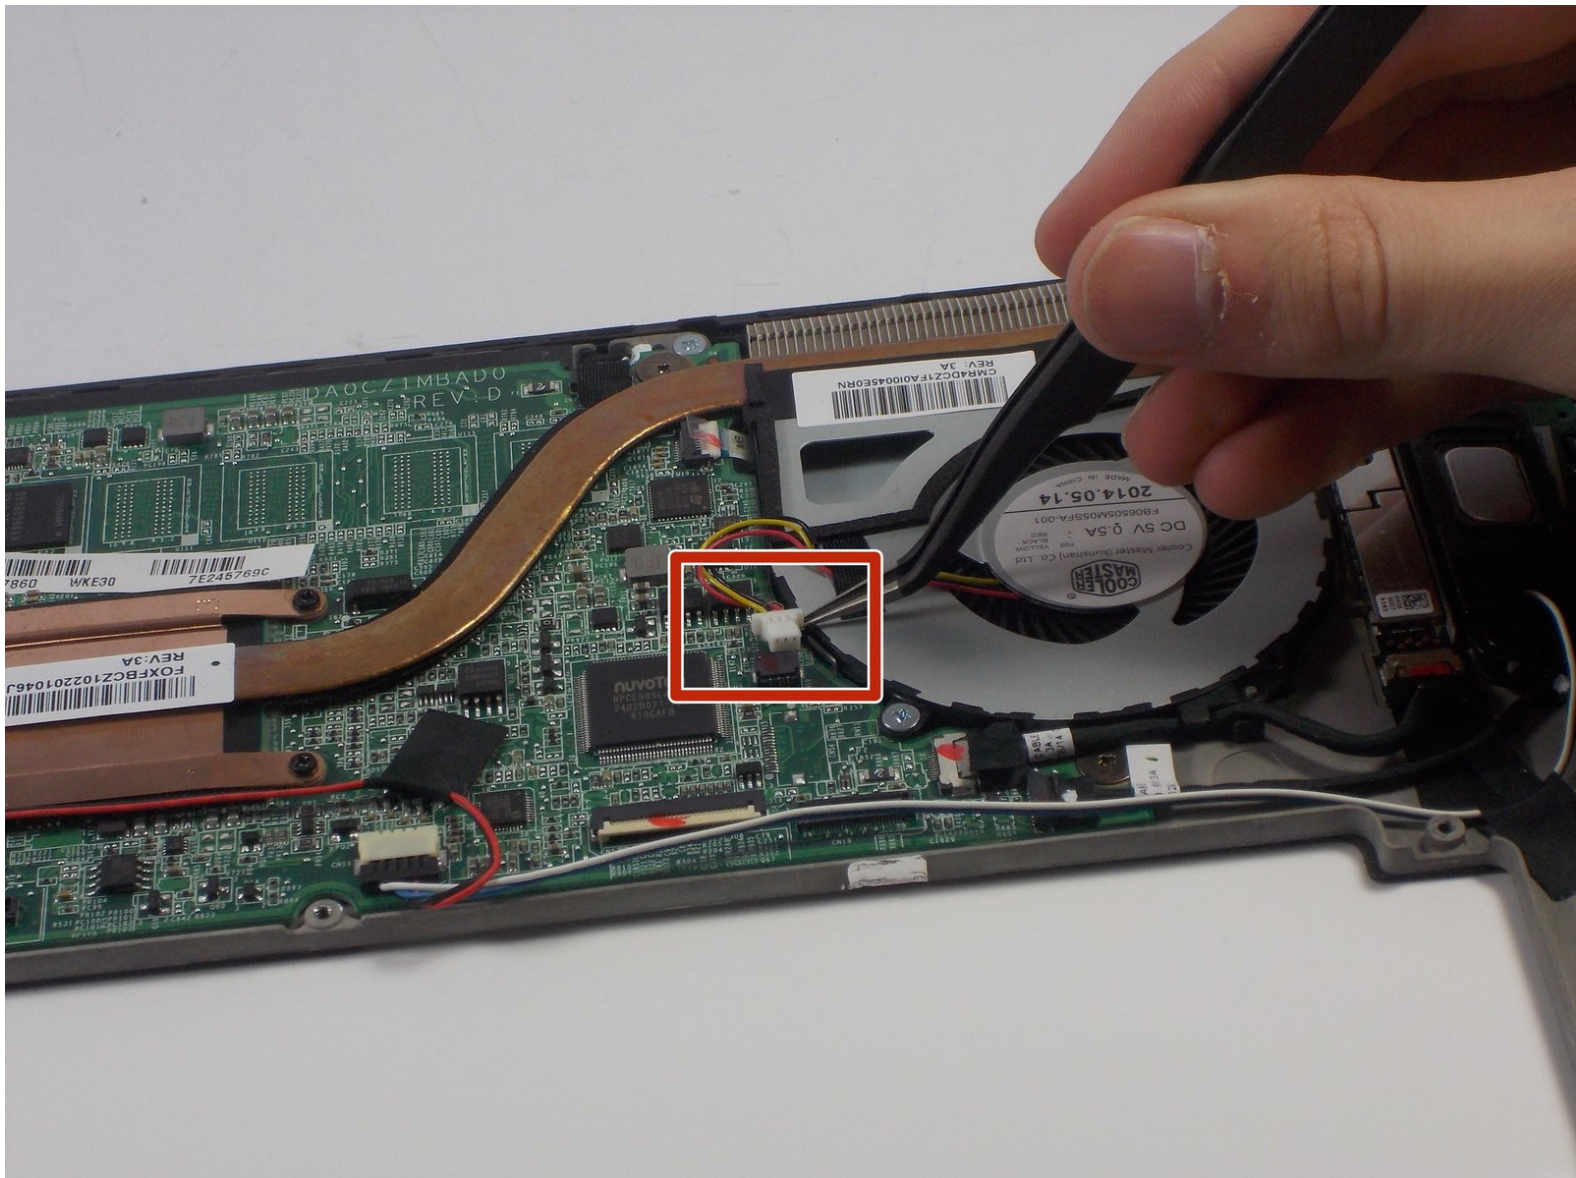

---

## INTRODUCTION

Before you attempt to follow this guide make sure you have all the required tools needed for the removal of the fan. This may be challenging to be complete. Make sure you follow each step as it is listed.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Battery



**!** Working on your device while it is turned on may result in electric shock. Make sure to shut down and unplug your device before you begin.

- Push down on the tablet sides until you feel a click, then pull up.
- i** This will separate the tablet from the detachable base, make sure to hold down the keyboard for easier detachment.


## Step 2

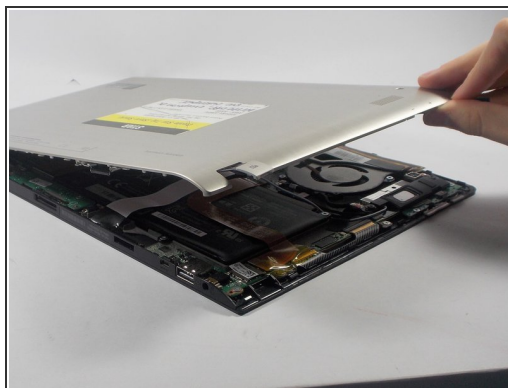

- Remove the base of the tablet from the screen using a plastic opening tool.
- i** Make sure to separate the base evenly on both sides when removing it from the screen.




## Step 3

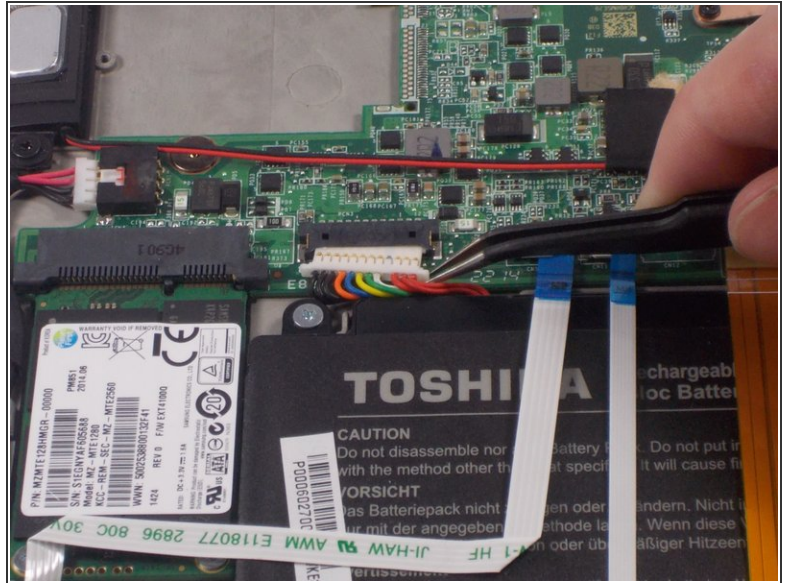

- Remove the battery power connector using ESD safe tweezers.


## Step 4

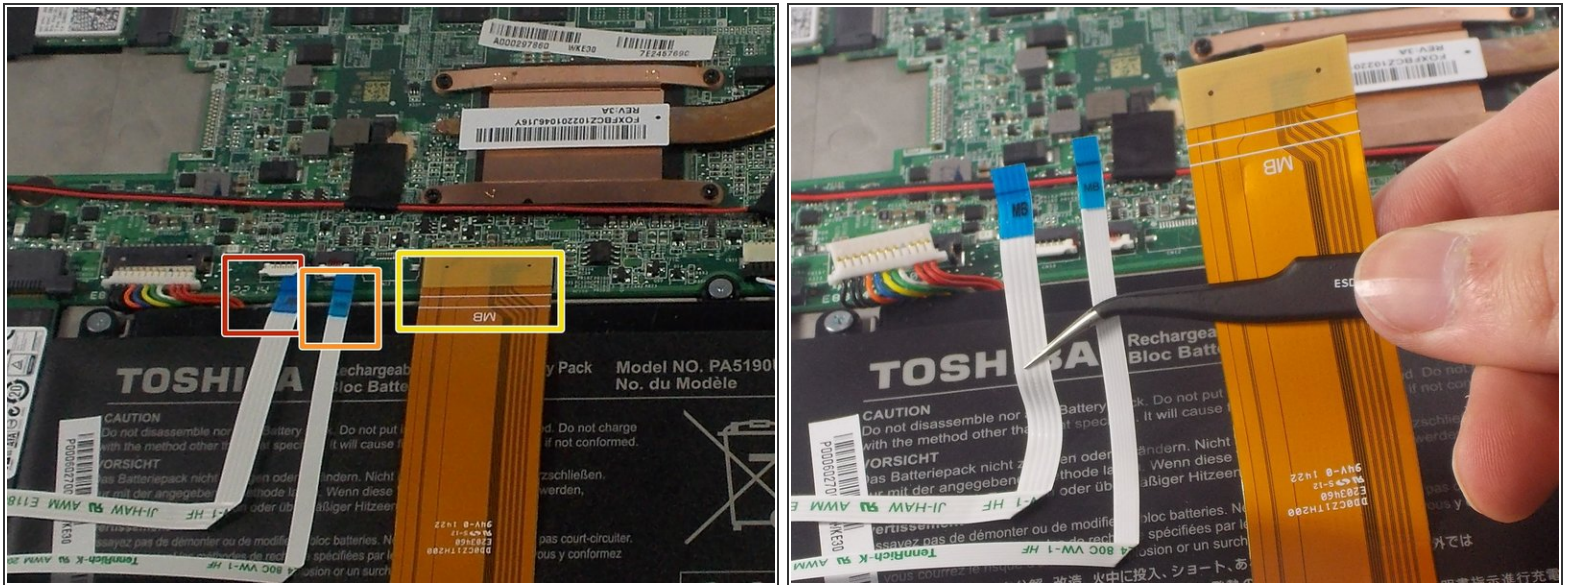

- Remove the LED ribbon cable using ESD safe tweezers.
- Remove the SIM card ribbon cable using ESD safe tweezers.
- Remove the Docking connector ribbon cable using plastic opening tool.
- ⓘ The ribbons may be stuck to the battery so make sure to peel off gently to prevent damage.
- ⚠ Make sure to flip up the white connector attached to the LED and Sim Card ribbons before removing them .




## Step 5

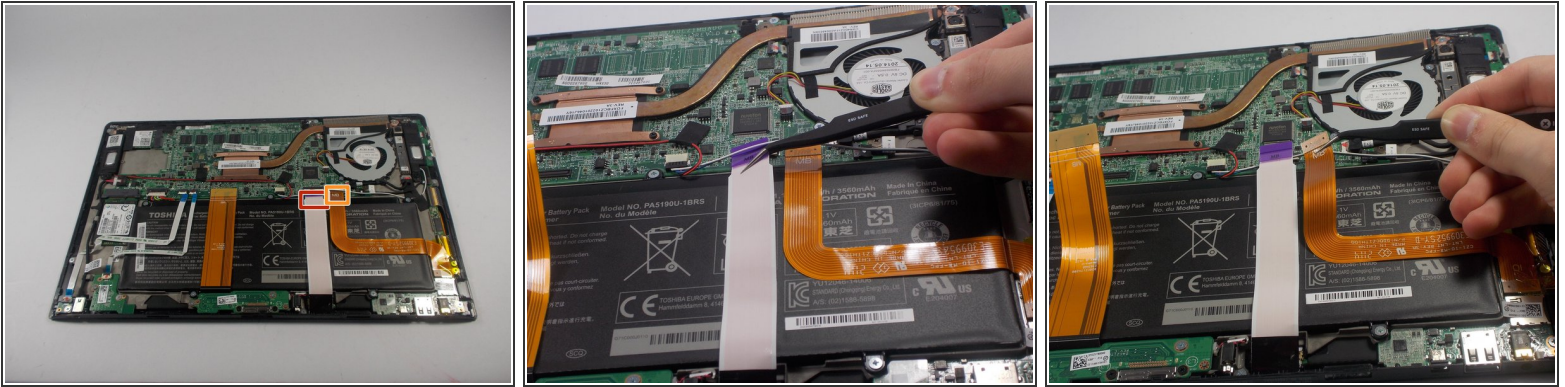


- Remove the LCD Display ribbon cable using a plastic opening tool.
- Remove the I/O ribbon cable using a plastic opening tool.
- ⓘ The ribbons may be stuck to the battery so make sure to peel them off gently to prevent damage.

## Step 6

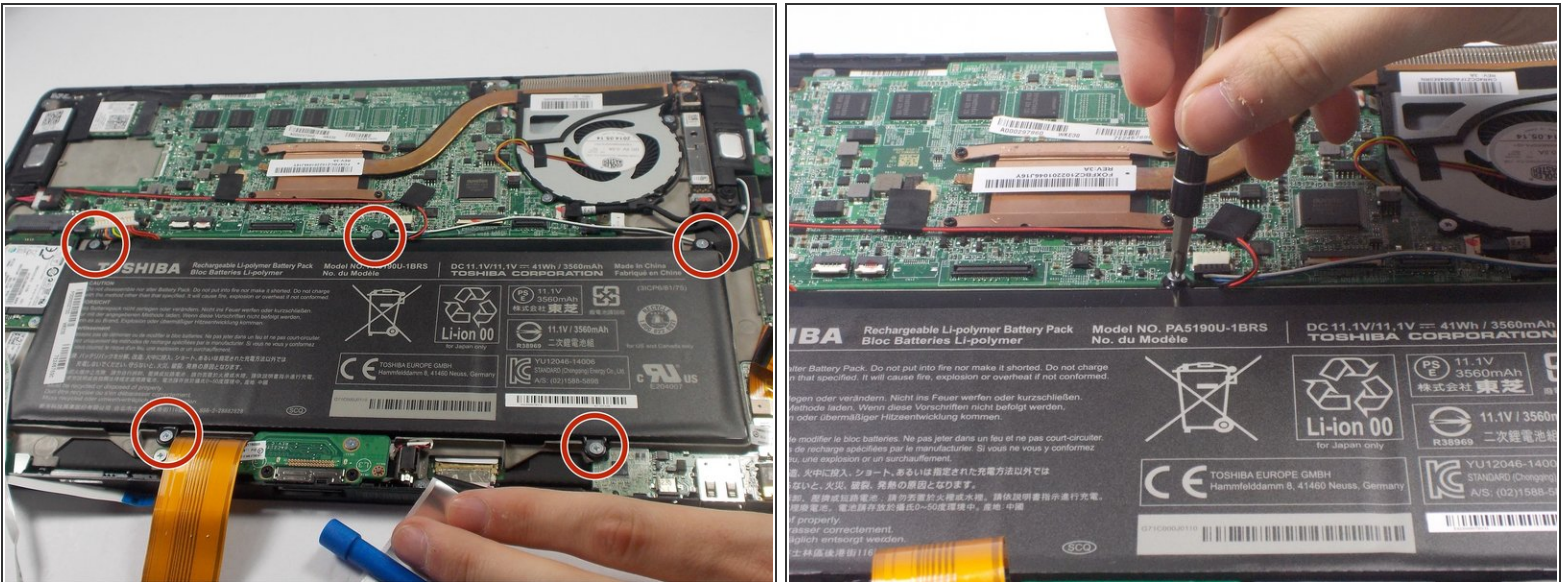


- Remove five 3.5mm Phillips J0 screws using a Phillips screw driver.

## Step 7

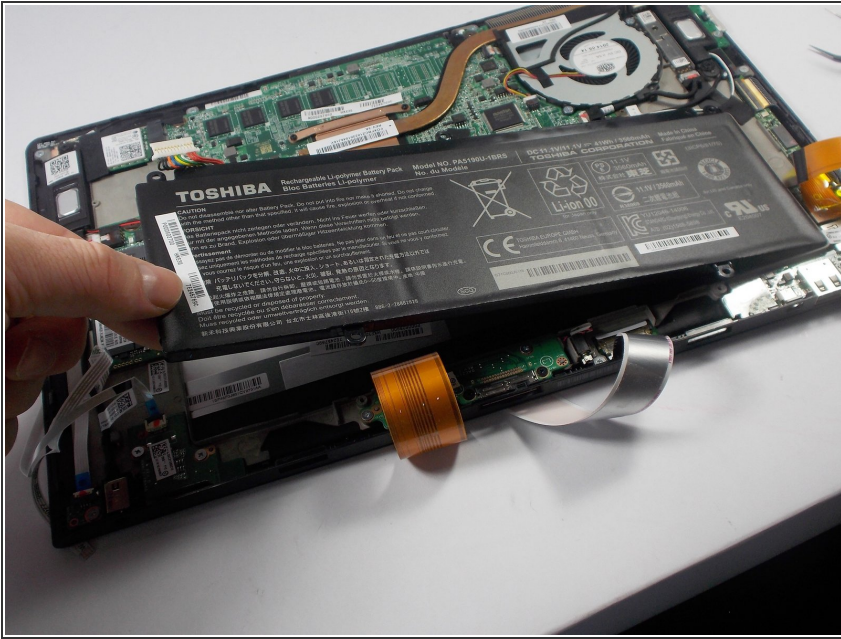

- Remove the battery from its holding position.


## Step 8 — Heat Sync Fan

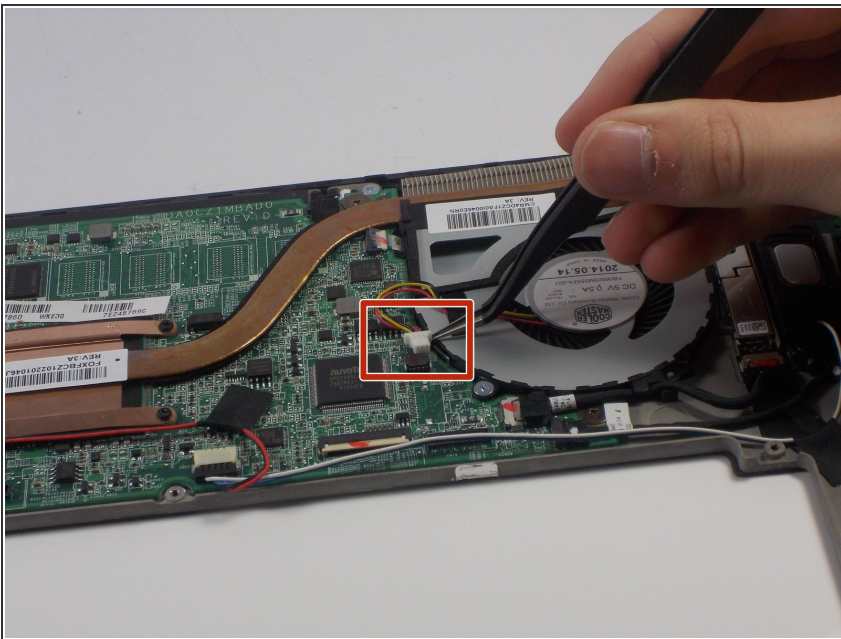

- Remove the power connector from the fan using a pair of tweezers.




## Step 9

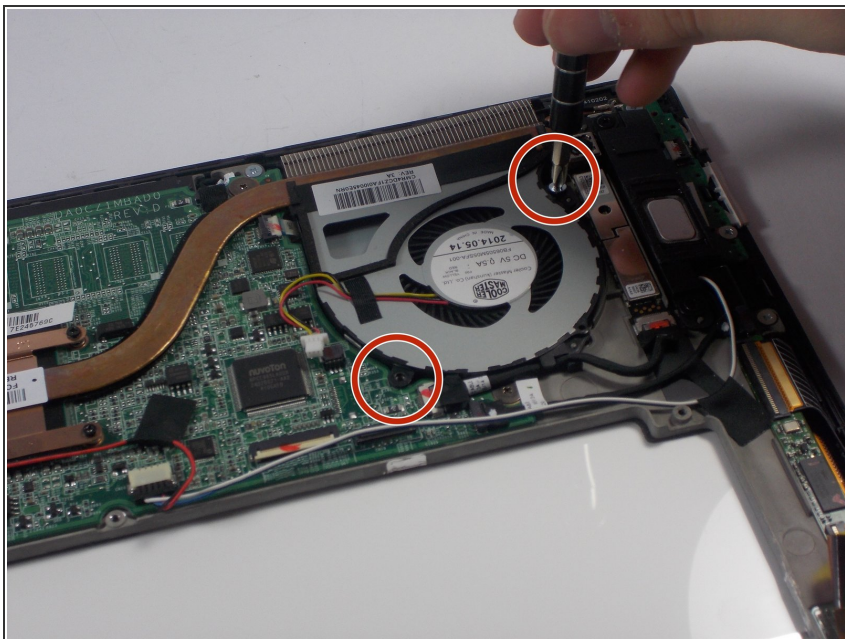

- Remove two 3.0mm Phillips J0 screws using a Phillips screw driver.


## Step 10

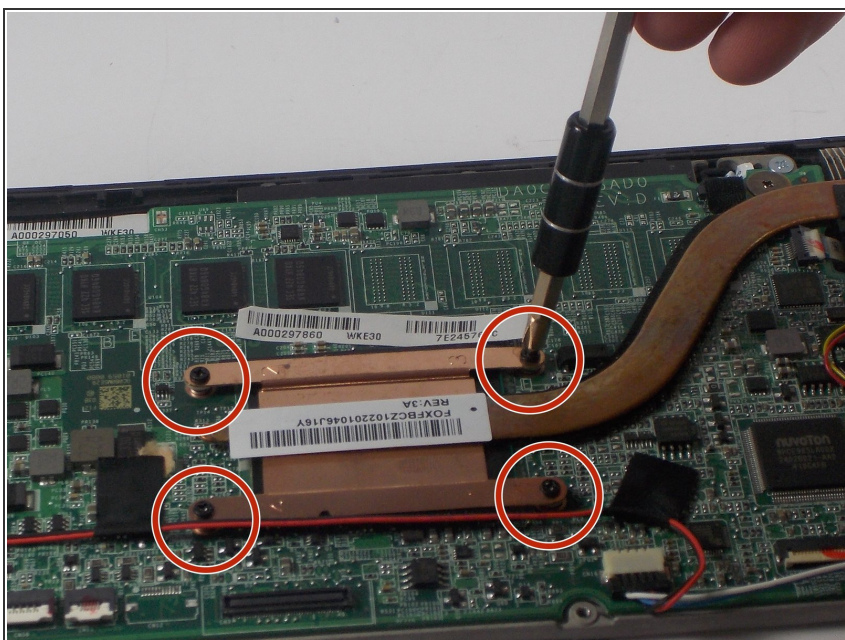

- Remove four 3.5mm Phillips J0 screws from the heat sink.



## Step 11

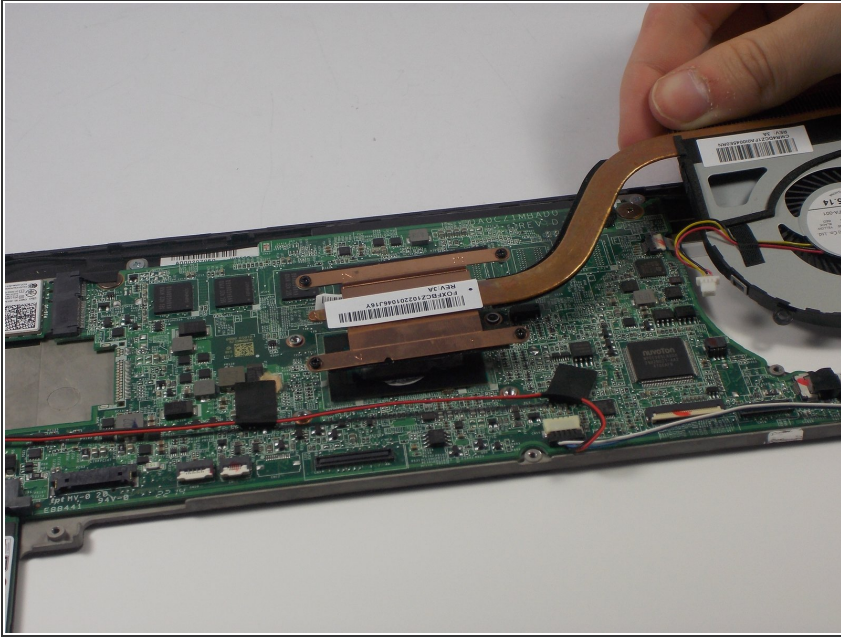

- Remove the heat sink fan.
- ⓘ The heat sink cover may be hard to peel off the first time due to the adhesive.

To reassemble your device, follow these instructions in reverse order.