



Sony Handycam HDR-CX220 Display Screen Replacement

Replace the screen if it is broken/ defected, or if you notice that the images are distorted.

Written By: Keven



INTRODUCTION

The replacement of the screen is needed if the image on the screen is not the desired image or if the screen is physically damaged.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery





- Push in the battery indicator.

Step 2




- Slide the battery out of the slot.
- ★ To put the battery back in, line up the battery's metal part with the camera's and slide it in.

Step 3 — Camera's Body

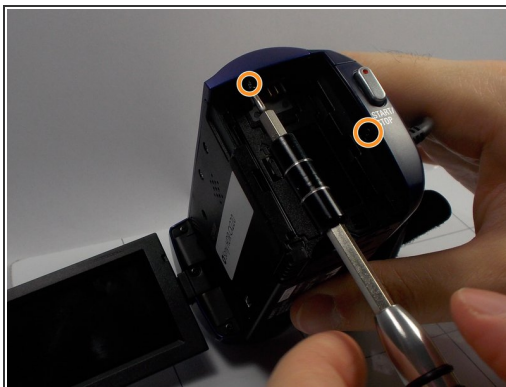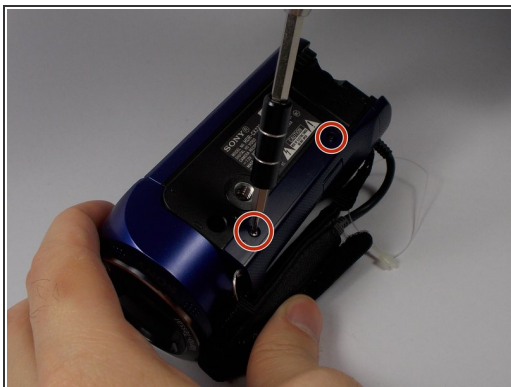


- Use the Phillips #0 screwdriver to remove the two 5mm screws.
- Use the Phillips #0 screwdriver to remove the two 5mm screws.
- Use the Phillips #0 screwdriver to remove the three 5mm screws.

Step 4

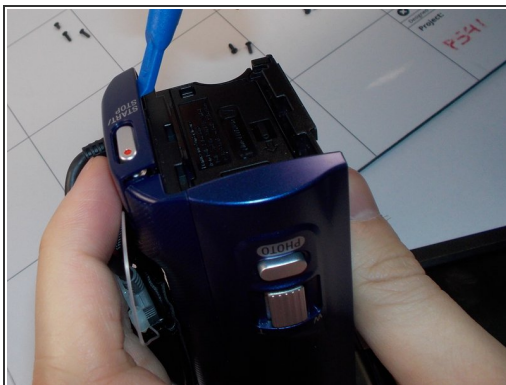

- Use the plastic opening tool to loosen the plastic case of the camcorder.


Step 5

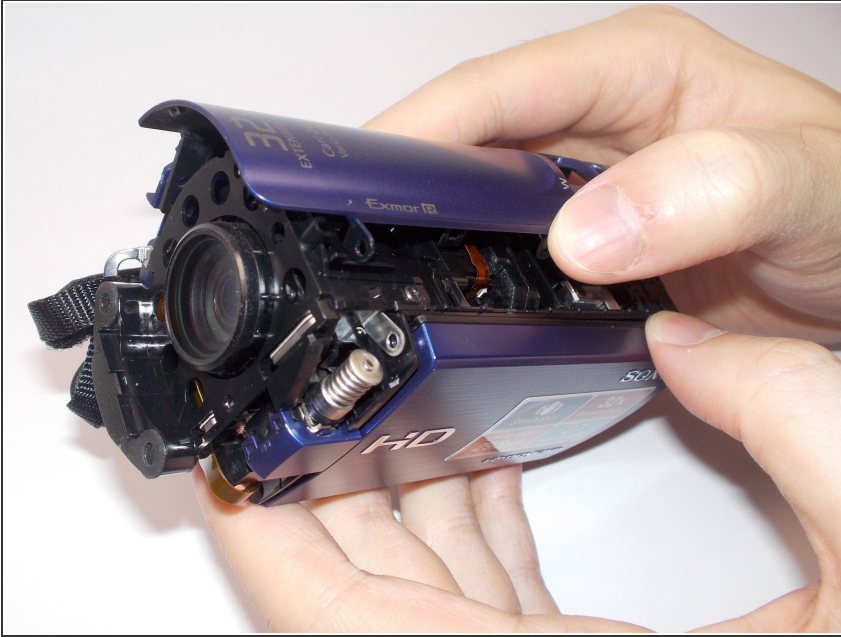

- Use your hands to remove the plastic case.


⚠ Gently pull on the case not to damage anything internally.

Step 6 — Display Screen

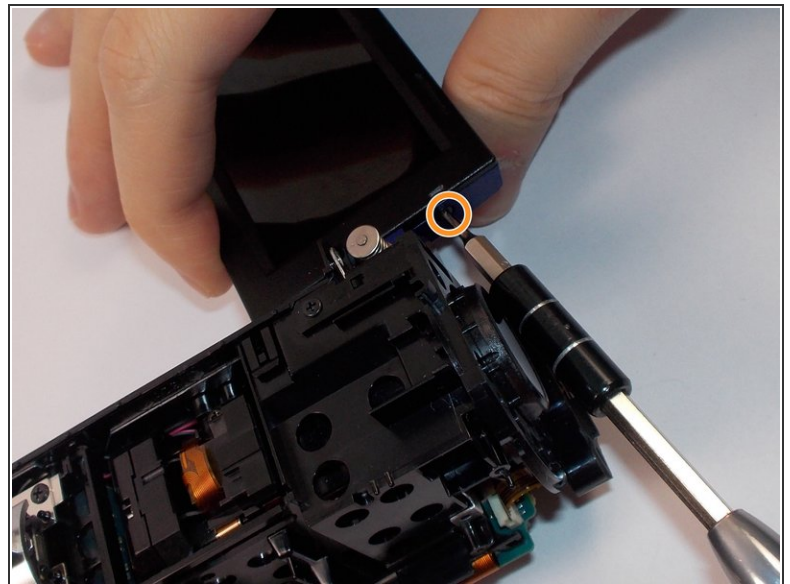



- Use the Phillips #0 screwdriver to remove the two (5mm) screws on the outer part and one (3mm) in the middle.
- In the second image, there is a second screw on the opposite side of the screen hinge. This screw is not shown, but must also be removed.

Step 7

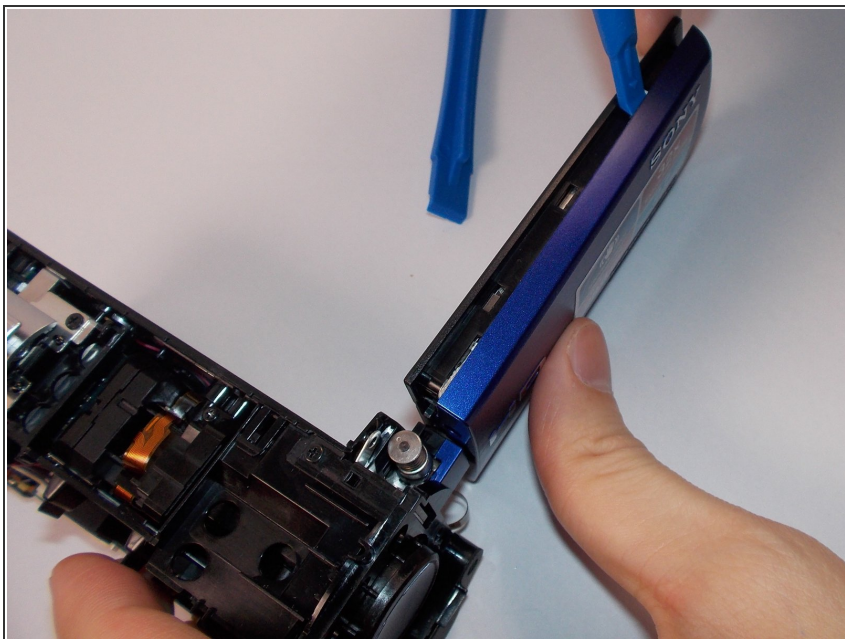


- Use the plastic opening tool to remove the plastic case protecting the screen
- ⚠ Pull it gently not to damage anything under the case

Step 8

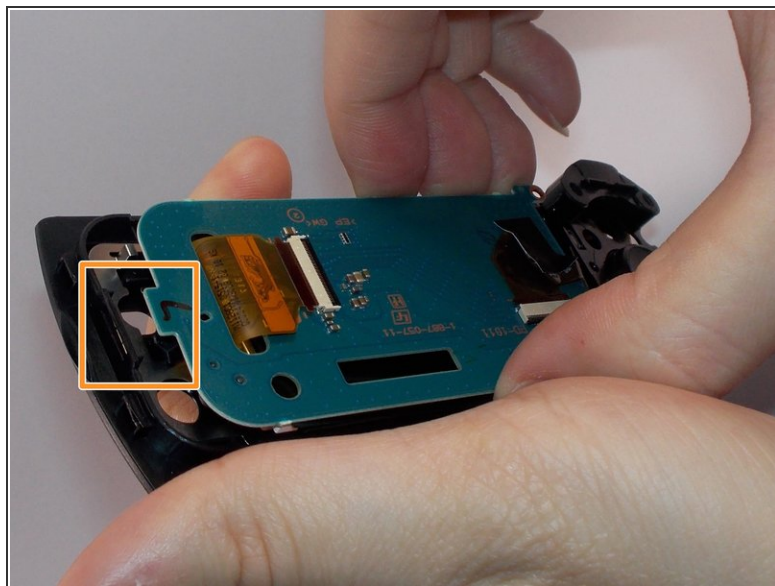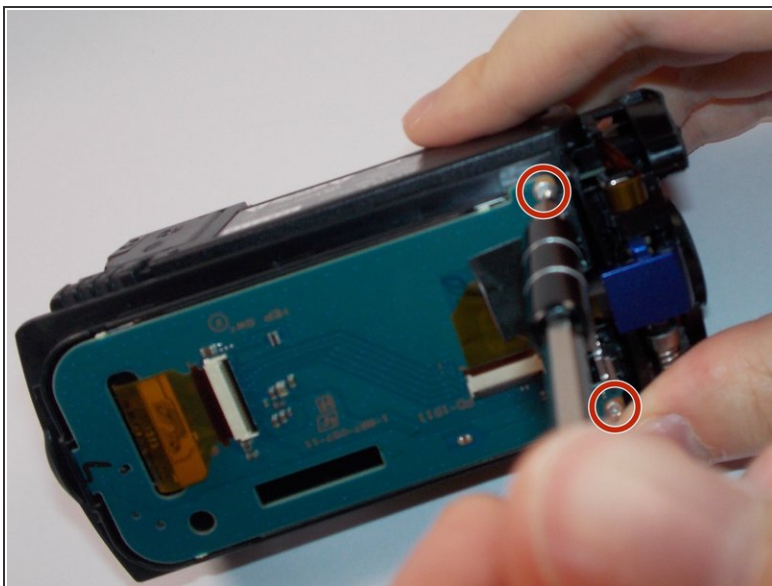

- Use the Phillips #0 screwdriver to remove the 2 screws shown
- Use your hands to carefully unhook the screen from the highlighted hook

Step 9

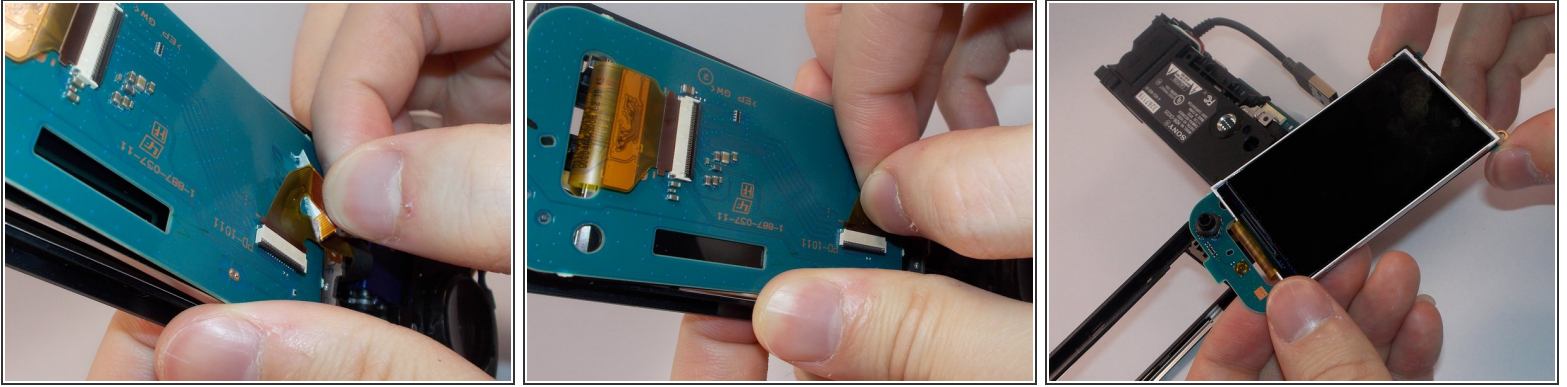

- Use your hands to carefully remove the tape
- After removing the tape, pull on the wire disconnecting it from the screen.

To reassemble your device, follow these instructions in reverse order.