



Samsung WB2200F Battery Replacement

Replace faulty battery in the camera

Written By: James Julian



INTRODUCTION

The battery should be replaced if it fails to hold a charge or appears to be corroded in any way.

Step 1 — Battery



- Place the camera upside down on a hard surface such as a table. Make sure that the battery compartment is visible.

Step 2




- Twist the nob counter-clockwise while pushing cover to the left. Then pull the cover up to reveal the battery.

Step 3



- Slide the blue tab to the right to release the battery.

Step 4

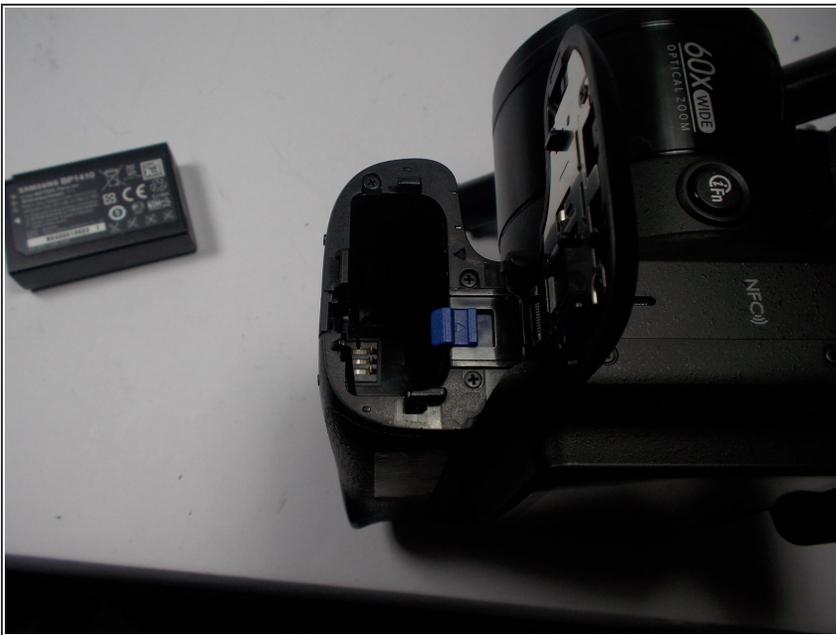

- Carefully slide the battery out of the camera. It can then be replaced with a new battery.

To reassemble your device, follow these instructions in reverse order.