



Hamilton Beach 70730 Drive Shaft Replacement

Replace the drive shaft of your Hamilton Beach 70730 food processor.

Written By: Mack Bernard



INTRODUCTION

The drive shaft is essential and may possibly have a stripped gear, causing the blade not to turn. There are several steps in order to take this out and replace it. Beware of lubricant along the bottom of it.



TOOLS:


- [64 Bit Driver Kit](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Bowl



- Unscrew the cover by turning it counterclockwise.

Step 2

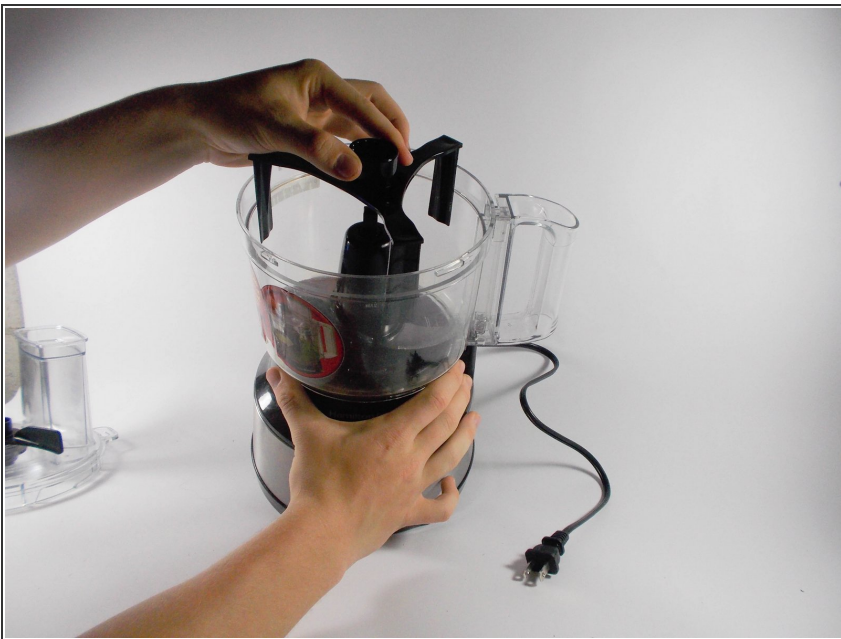

- Grab the scraper by the midsection to remove.

Step 3



- Carefully remove the blades by lifting them off of the blade shaft.

Step 4




- Rotate the bowl counterclockwise to release it from the base.

Step 5



- ⓘ Make sure there is no food or grime along the outside of the bowl or the base.

Step 6 — Drive Shaft

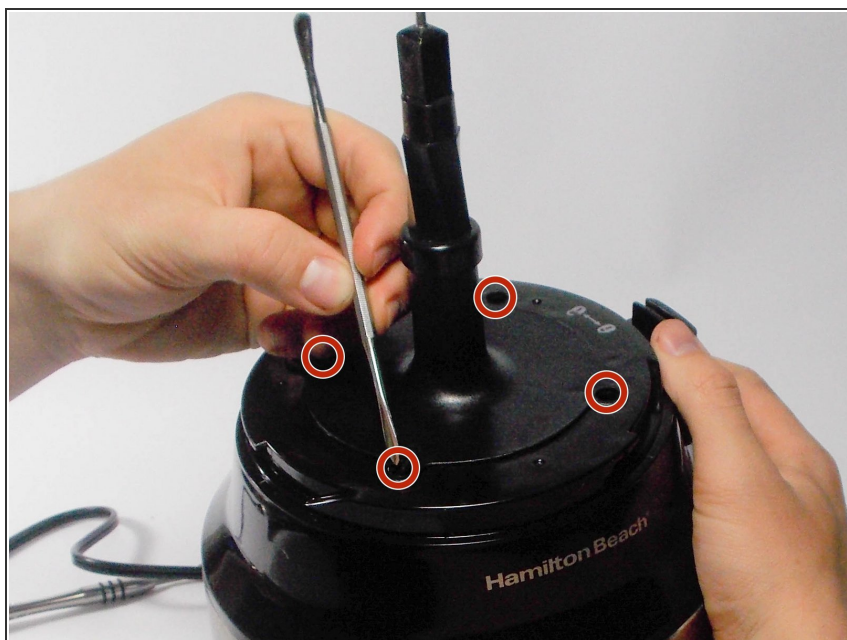

- Using the metal spudger, remove the four adhesive plastic covers that hide the screws.
- ⓘ These covers are adhered to the screws.

Step 7



- Remove any excess glue that is adhered to the screws with the precision tweezers.

Step 8



- Using a JIS #1 driver, remove the four 10 mm screws.

Step 9



- Lift the driveshaft off of the base.

To reassemble your device, follow these instructions in reverse order.