




# Nikon Coolpix S5300 Outer Casing Replacement

Removing the outer casing of the Nikon Coolpix S5300.

Written By: Riordan McCole

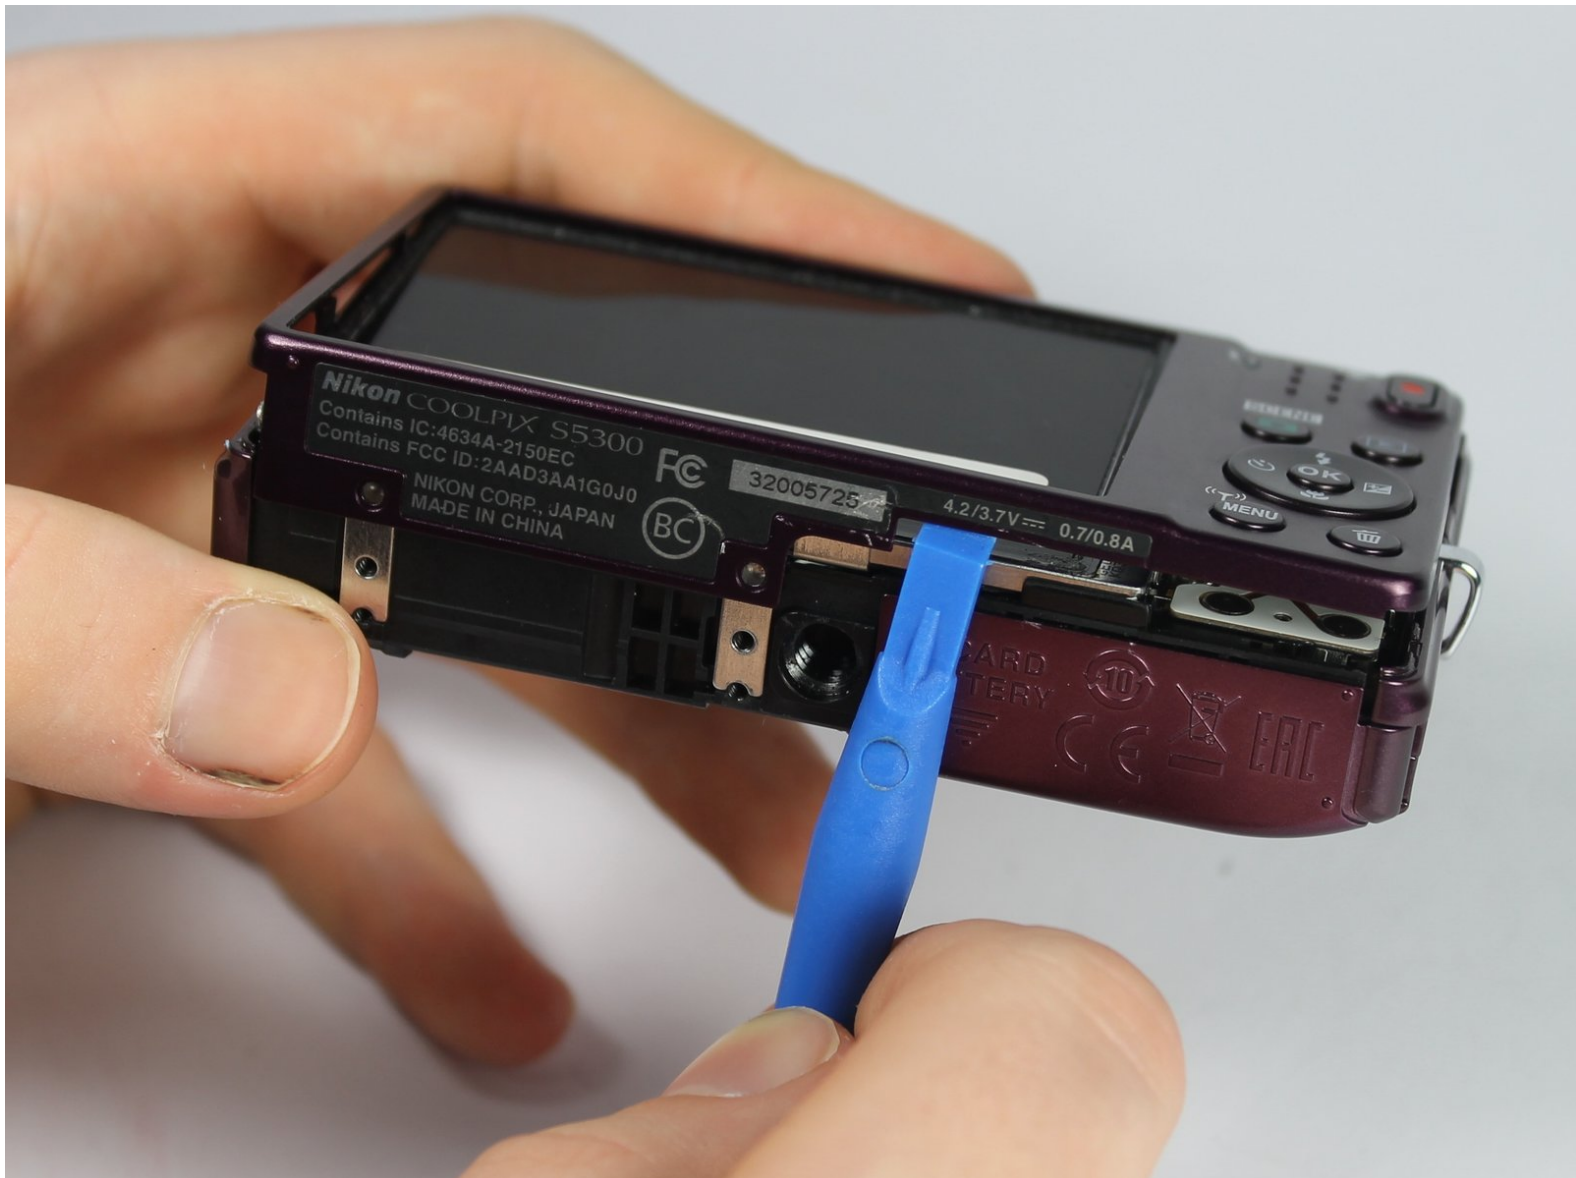

---

## INTRODUCTION

This guide will allow the user to be able to remove the outer casing of the camera as to allow them to get to the internal parts of the Nikon Coolpix S5300.

---

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Turn the camera upside down and locate the battery compartment.
- Slide the compartment open following the direction of the arrow.

## Step 2



- Press the orange release button to release and remove the battery.
- Replace or insert battery in it's respective terminals

### Step 3 — Outer Casing




- Remove the four 0.1mm screws from the bottom of the camera using the phillips head screwdriver
- Using the same screwdriver, remove the 2 screws on the side of the camera.
- Remove the 2 screws from the other side of the camera.
- ❗ One of the screws is under the I/O port cover.

### Step 4




- Use the plastic opening tool to carefully separate the cover from the camera.
- Work the plastic opening tool around all the edges of the front plate.
- Pull the purple plastic cover off gently from the screen.

## Step 5

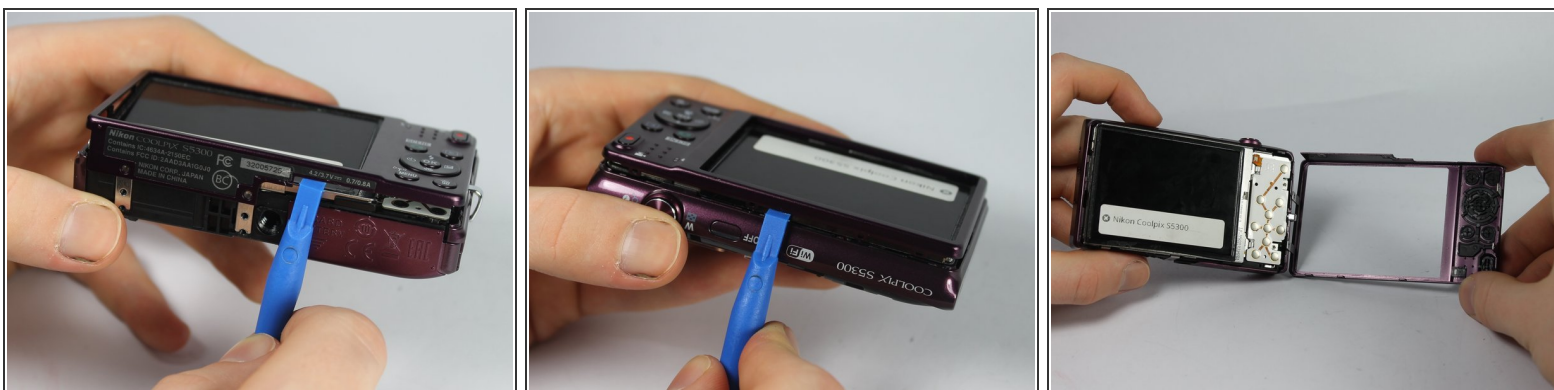



- Turn the camera over so the LCD screen is facing you.
- Carefully remove the front shell by gently prying around the corners with the plastic opening tool until it releases.

## Step 6

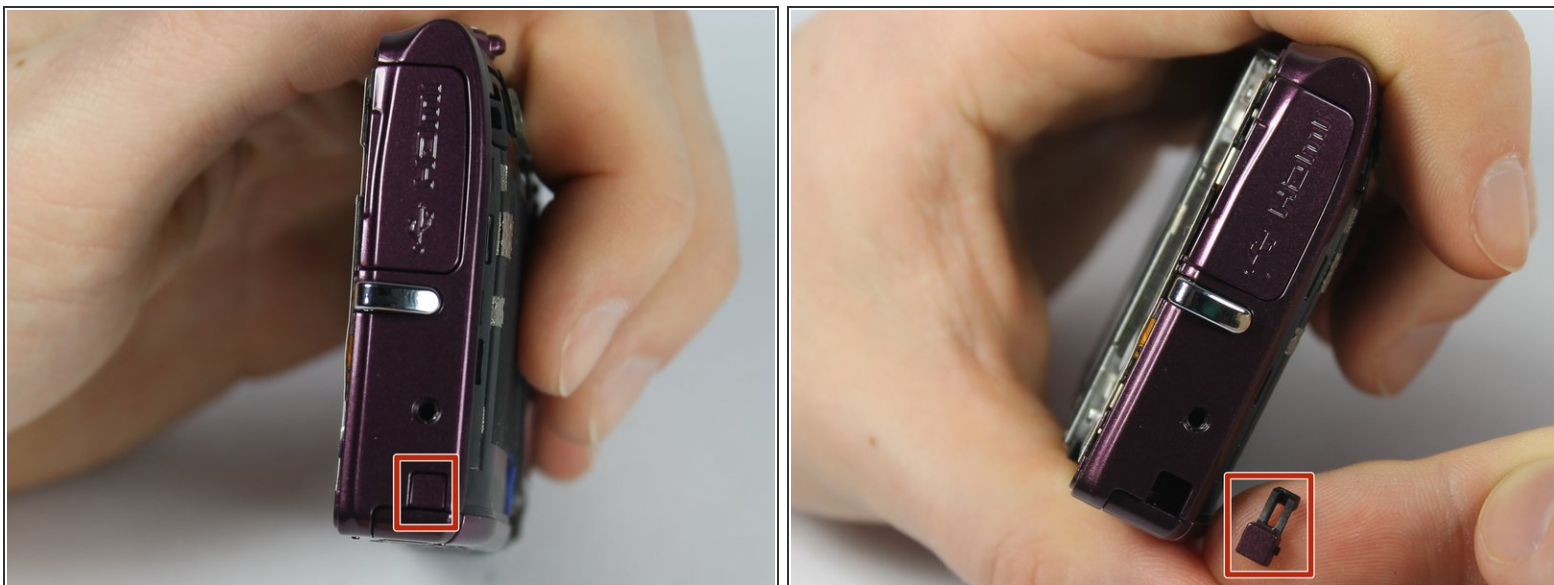

- Be careful to keep track of little pieces of the outside casing.

## Step 7

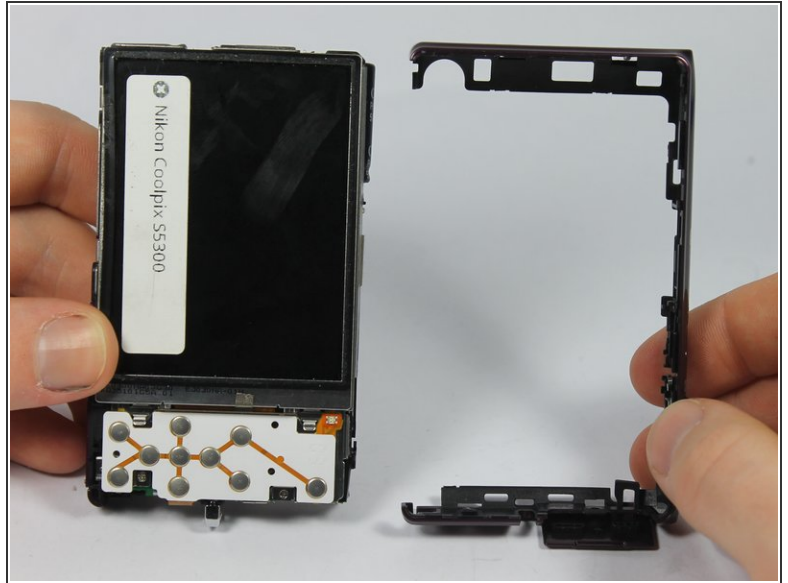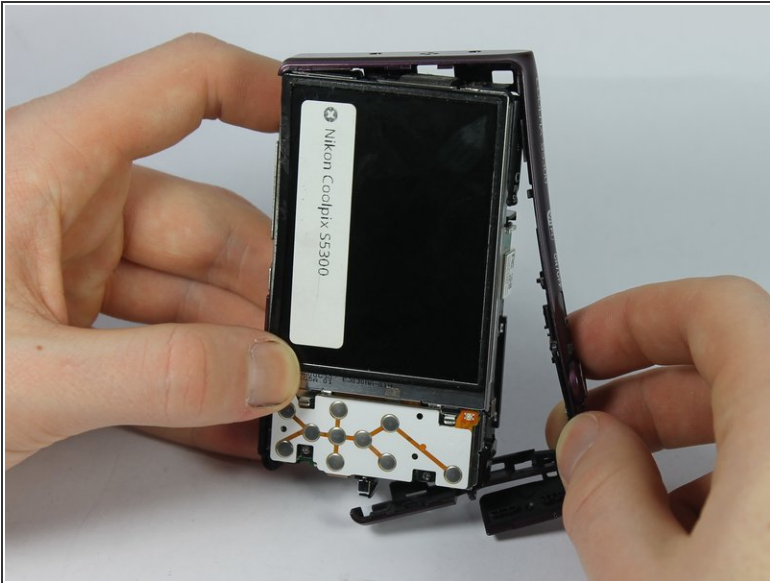

- Carefully remove the top button casing by pulling it away from main camera.

To reassemble your device, follow these instructions in reverse order.