



Saitek Cyborg V3 Disassembly

Disassemble your mouse to clean it or discover what's inside.

Written By: Vaclav Sobotka



INTRODUCTION

Disassemble a Cyborg Mouse.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Open the mouse



- Use a Phillips #1 screw driver to open the back cover.
- Gently push away the bottom part on the opposite side to the cable.
- ⓘ As in the "push away" step, there should be about 30° between the bottom and top part. Push on the bottom part up, so the fit is tight around the cable. Slowly move parts together to reduce the angle.

Step 2 — Dismantle the big top cover



- Use a Phillips #1 screwdriver to unscrew the big top mouse part with both buttons.
- Use whatever you find appropriate (I used a screwdriver) to gently push the clips (yellow) and next push to one of the circles (red) to separate the big top part.

Step 3 — Dismantle cover with DPI button



- Use whatever you find appropriate (I used a screwdriver) to gently push the clips (red) and use whatever you find appropriate (I used a thin screwdriver bit) to push the pin (yellow).
- Now if you very gently push to the bottom part of the cover, it should pop out on itself.

Step 4 — Separate the electronics



- Use a Phillips #00 bit to unscrew two screws on the motherboard.
- Carefully lift the **whole** motherboard out of the mouse.

To reassemble your device, follow these instructions in reverse order.