



# AmazonBasics BTV1 Speaker Replacement

This guide will demonstrate how to replace the speakers in the AmazonBasics BTV1.

Written By: Chris Shannon



---

## INTRODUCTION

Occasionally speakers start malfunctioning or stop working entirely. In this guide we show you how to replace those speakers and get your AmazonBasics BTV1 running again.


---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Speaker

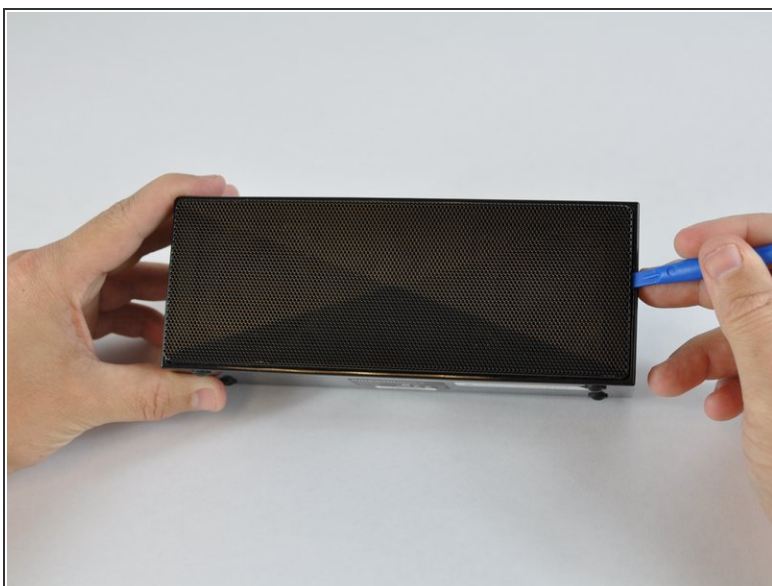


- Hold the speaker firmly and wedge a plastic opening tool in between the faceplate and the body of the speaker.
- Move the tool back and forth along the entire perimeter of the face plate until you feel the plate loosen, then pry the plate off.

## Step 2



- Using a Phillips #1 screwdriver, remove the four black 10mm screws around each of speakers.
- Using a Phillips #1 screwdriver, remove the four black 10mm screws securing the inside panel to the case.


### Step 3

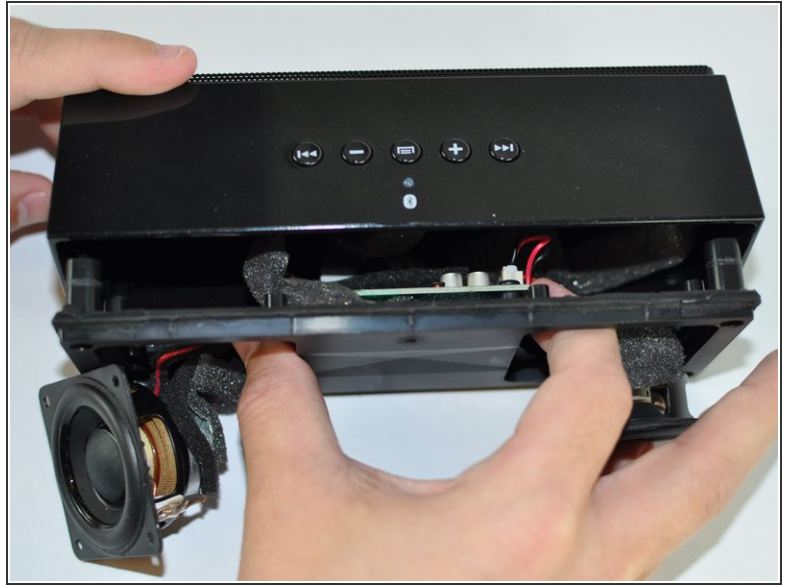

- Tilt the case downwards until the speakers fall out of their housings.
- Reach your thumb and forefinger past the speakers and detach the front speaker panel from the unit.



## Step 4

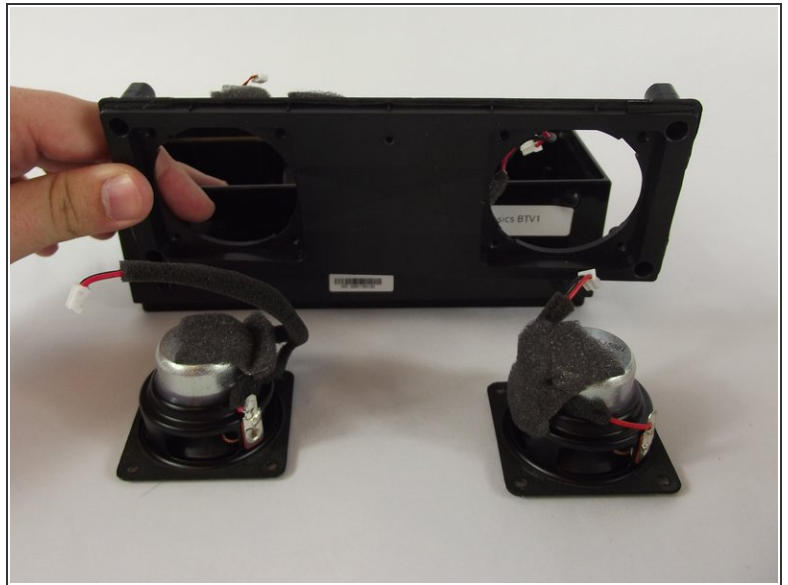

- Gently pull the two plastic connectors from the motherboard.
- Lift the front panel of the case and remove the speakers.

To reassemble your device, follow these instructions in reverse order.