



DeWalt DC970 Battery Cells Replacement

The battery cells may deteriorate over time. This guide will show how to replace them.

Written By: Jonathan Hamel



INTRODUCTION

If the battery of your drill is not giving the drill power, a problem you could have is deteriorated battery cells. This guide will show you how to replace the battery cells.

TOOLS:

- [T15 Security Torx Screwdriver](#) (1)
 - [Torque Wrench](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Battery



- Compress the buttons on either side of the battery and lift the drill away from battery.

Step 2



- Remove battery from drill.

Step 3 — Battery Cells



- Remove the six 19 mm, Torx Security 15 screws from the top of the battery.

Step 4



- Pull off the battery cover, exposing the battery cells.
- ⚠ Be careful to not damage the batteries, if damaged they may explode.

Step 5



- Remove the old battery cells by slowly pulling them out of the top piece of the battery.
- ⓘ The best is to recycle the old battery cells.

To reassemble your device, follow these instructions in reverse order.