



Sony Handycam HDR-CX405 Battery Replacement

The batteries in Sony® Handycams can sometimes...

Written By: Alexander Nery



INTRODUCTION

The batteries in Sony® Handycams can sometimes require changing, either because they are overused and don't hold a charge, or because they have corroded (happens rarely). You can also have multiple batteries and be changing between them when they run out, without waiting for the camera to recharge.

Step 1 — Battery



- Place thumb on the ridge of the battery door hatch.
- Apply pressure horizontally to easily slide the door off.

Step 2



- Using your thumb, push the small blue fastening clip down.
- Slide old battery out of camera.
- Release the blue fastening clip.

Step 3



- Using your thumb, push the small blue fastening clip down.
- Slide the new battery into the camera.

Step 4



- Push battery door down so it is level with the original positioning.
- Slide door shut.

Improper seating of the battery can lead to memory loss and even corruption, replacing a battery can be a simple way to solve sudden crashes of the device.

