 




Dell Inspiron 14-7437 Coin Cell Battery Replacement

This guide will show you how to replace the Coin-Cell Battery inside your Dell Inspiron 14-7437.

Written By: Katelyn Remy

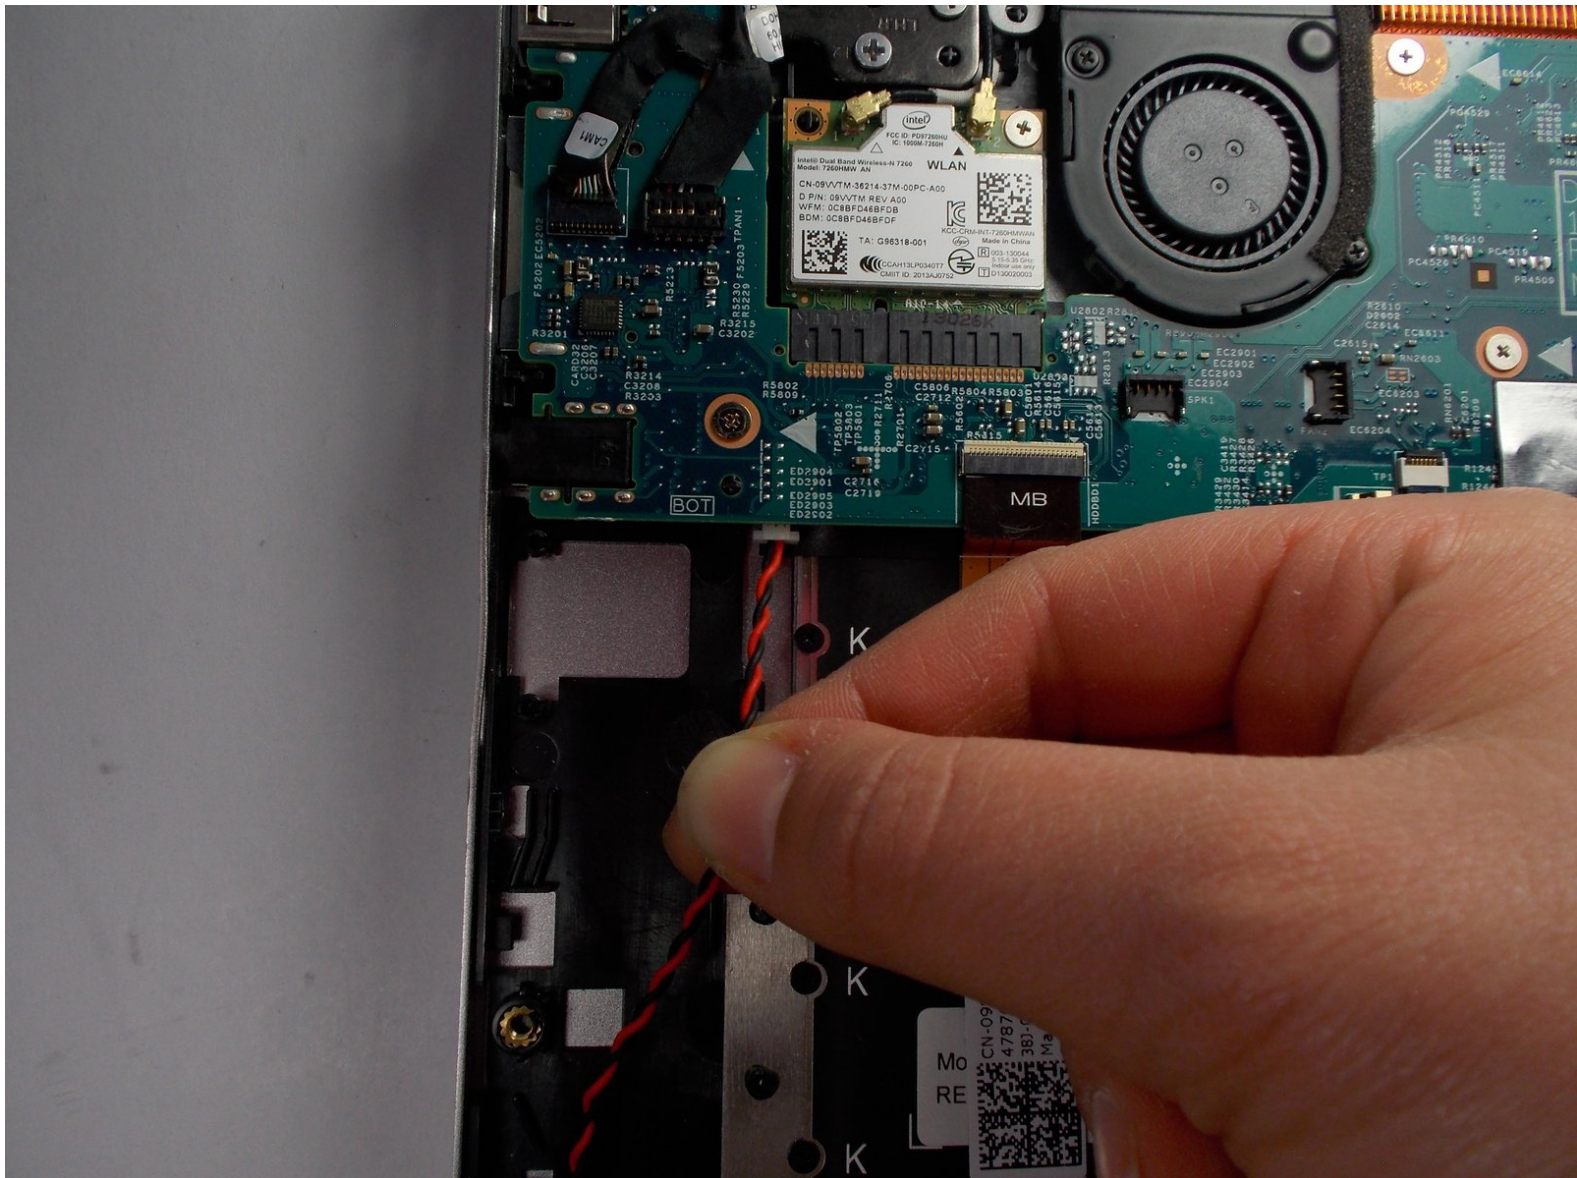

INTRODUCTION

 
The Coin-Cell Battery is a power source for the motherboard while the computer is off. It is used to keep track of the system clock.





TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

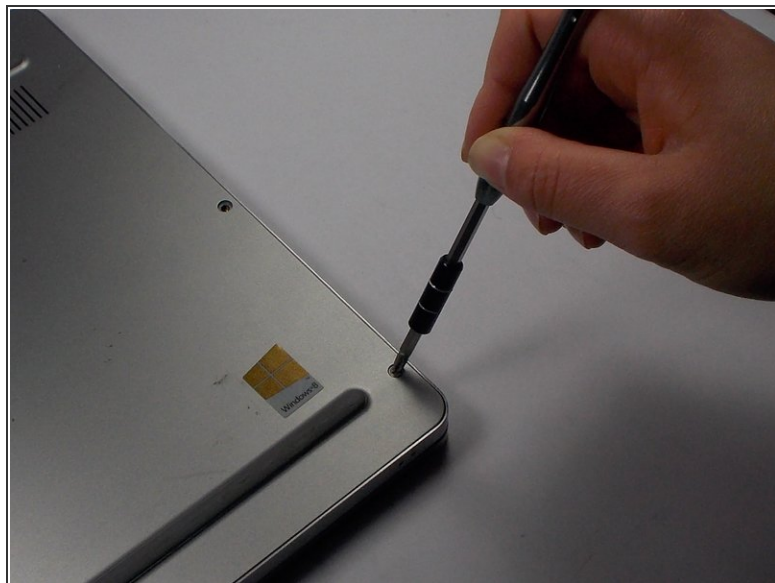Step 1 — Base Cover



 Power off your Dell Inspiron 14-7437 before disassembling.

 
 
- Remove the eight 4.5 mm screws on the back panel of the device using the Phillips 1 Screwdriver.
-  The two 4.5 mm screws in the center under the rubber mount cannot be removed, but can be loosened.

Step 2




- Pry open the back cover using a spudger and slide it along the under the cover.

Step 3 — Battery

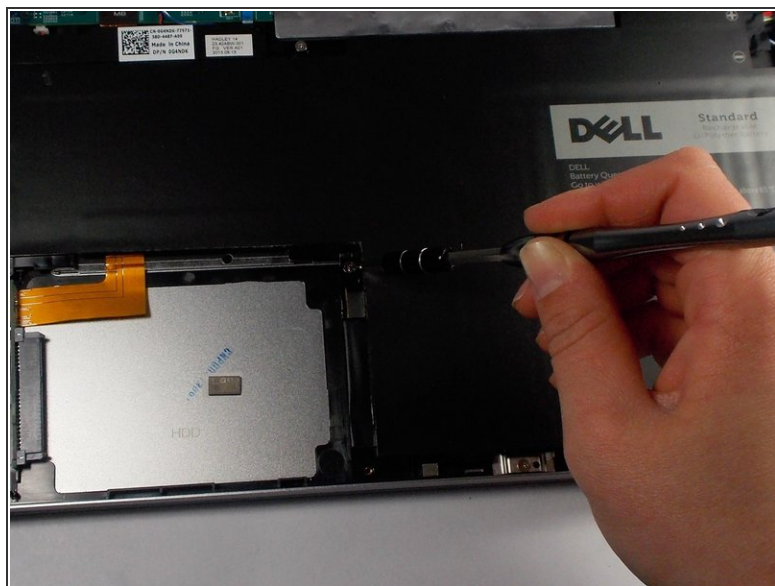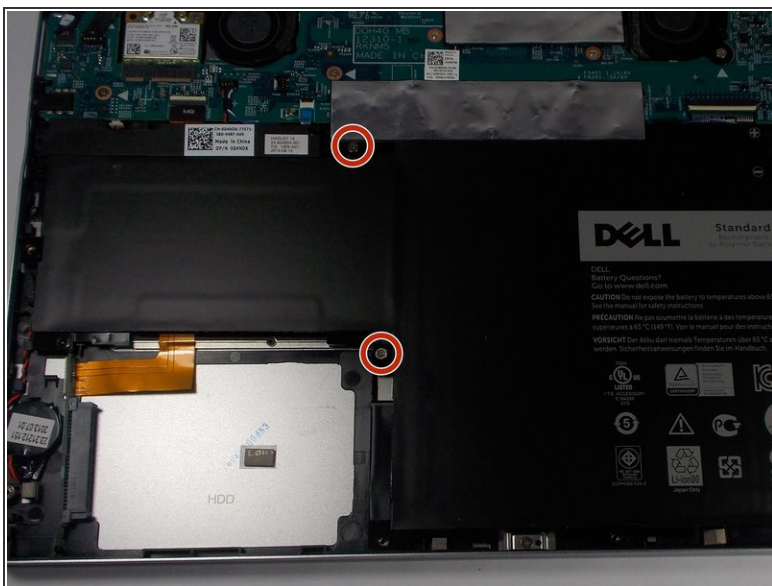


- Remove the two 2.5 mm screws holding the battery in place using the J000 Phillips Head Screwdriver.

 Step 4

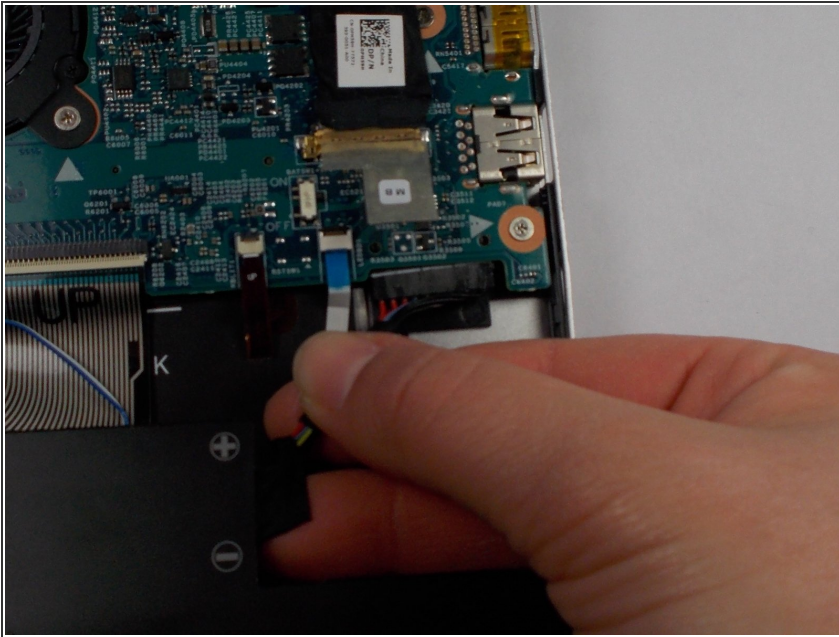


- Disconnect the ribbon cables from the motherboard.

 Step 5

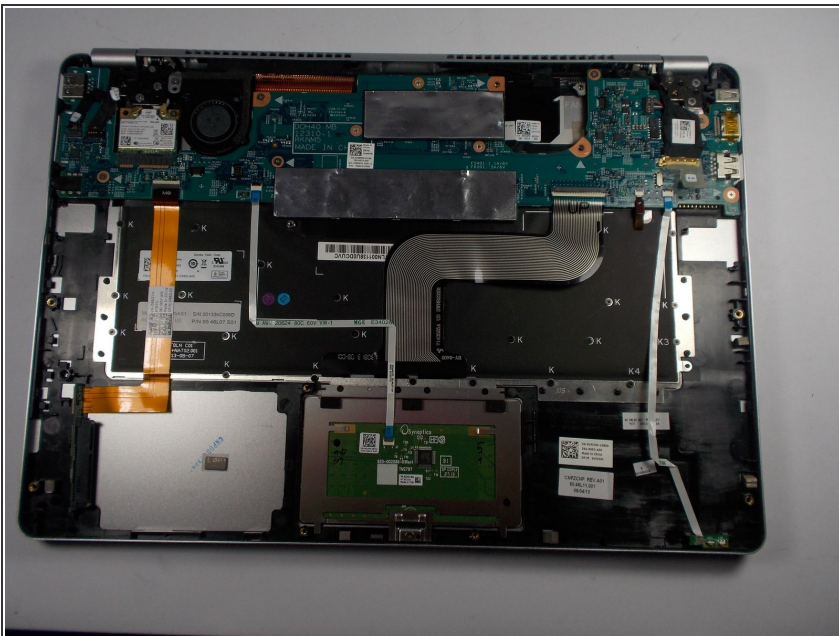




- Lift up and remove the Lithium-Polymer Battery.

 Step 6 — Speaker

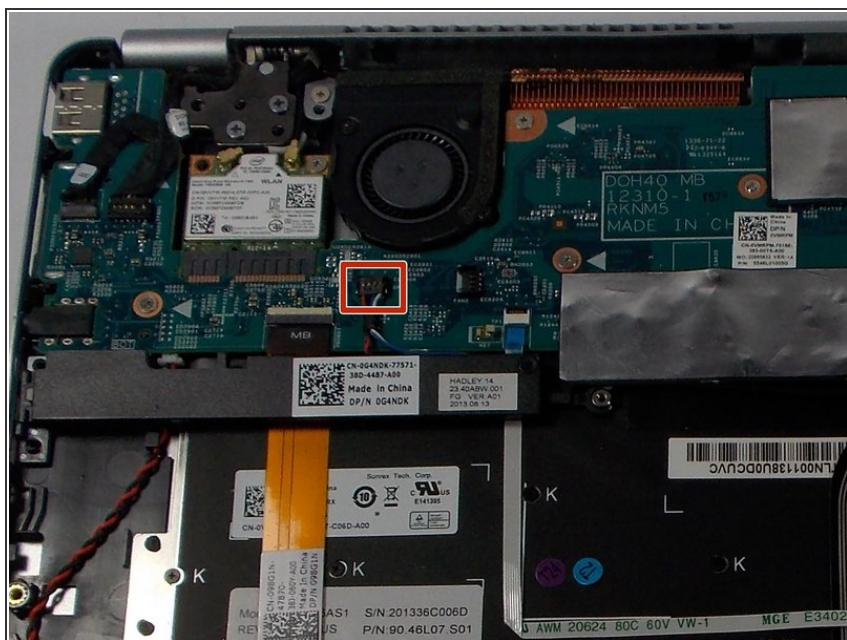


- Disconnect wires from Motherboard by gently pulling up.

   Step 7

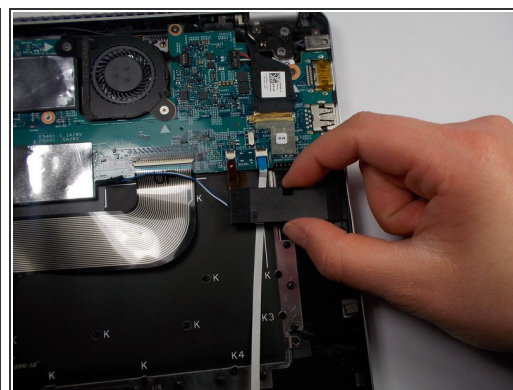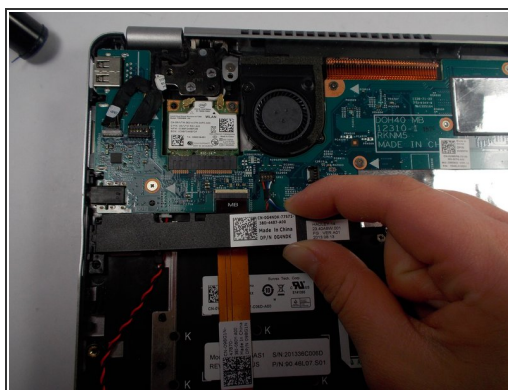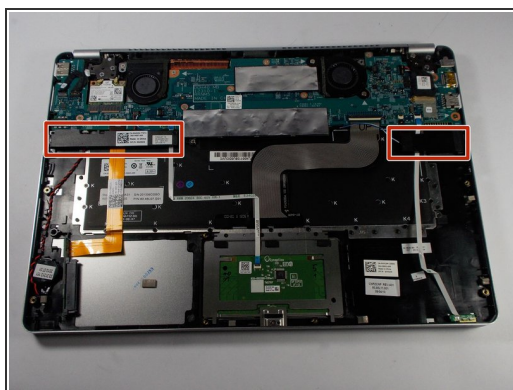


- Remove the speakers from the case.

 Step 8 — Coin Cell Battery

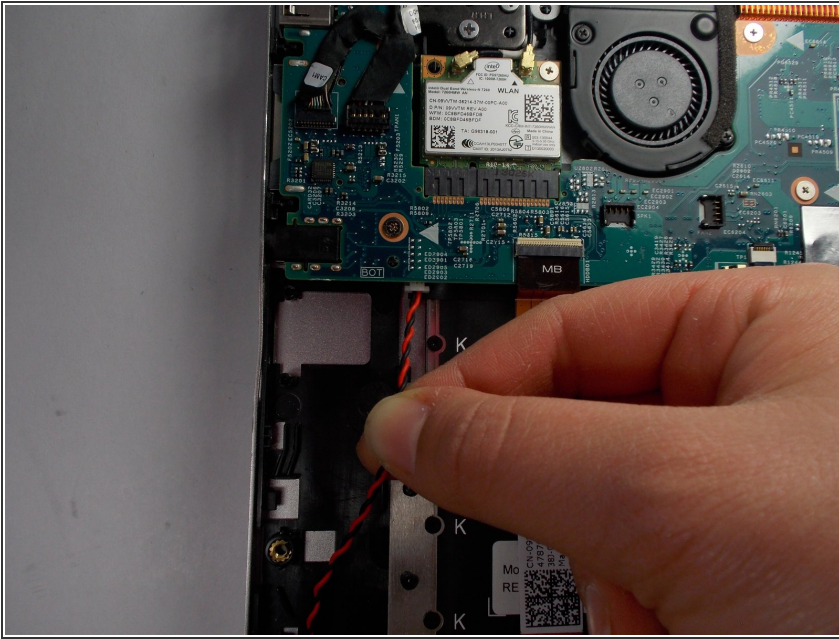

- Lift the coin cell battery wire, and carefully remove from motherboard.
- ⓘ There are little hooks that the wire is hooked under.

 Step 9

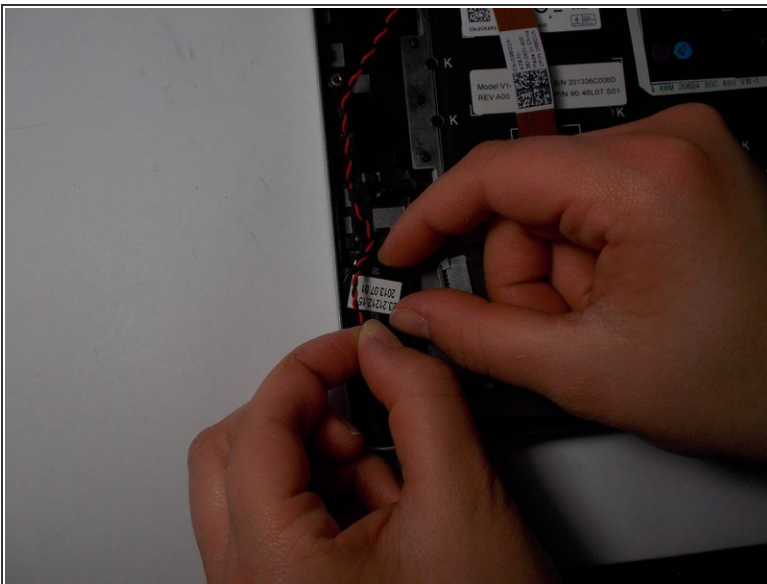

- Remove the Coin-Cell Battery from the case.
- ⓘ There is a small amount of adhesive on the bottom of the coin cell battery.

To reassemble your device, follow these instructions in reverse order.