




Dell Inspiron 14-7437 Speaker Replacement

This guide will show you how to replace your speaker system inside your Dell Inspiron 14-7437.

Written By: Katelyn Remy

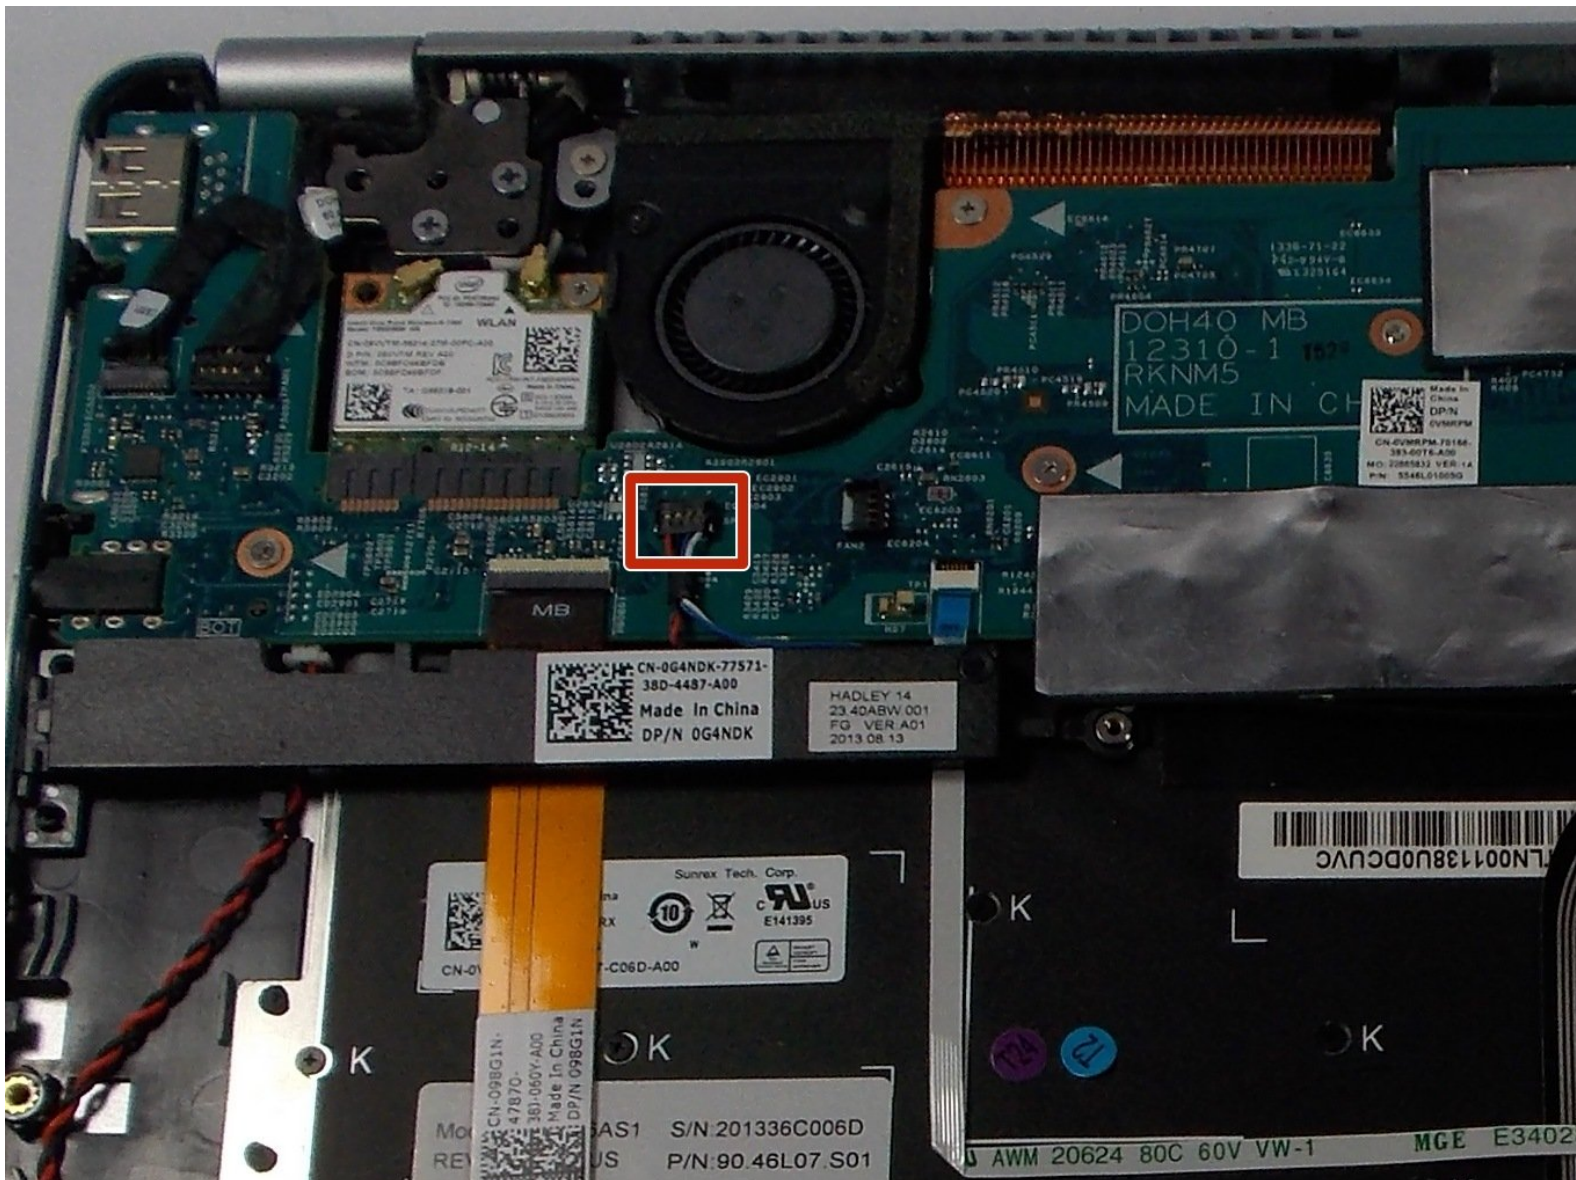


INTRODUCTION


if the speaker is not playing sounds properly or liquid is spilled into the speaker gap in the frame of your laptop it is easy and simple to replace them.


TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Base Cover

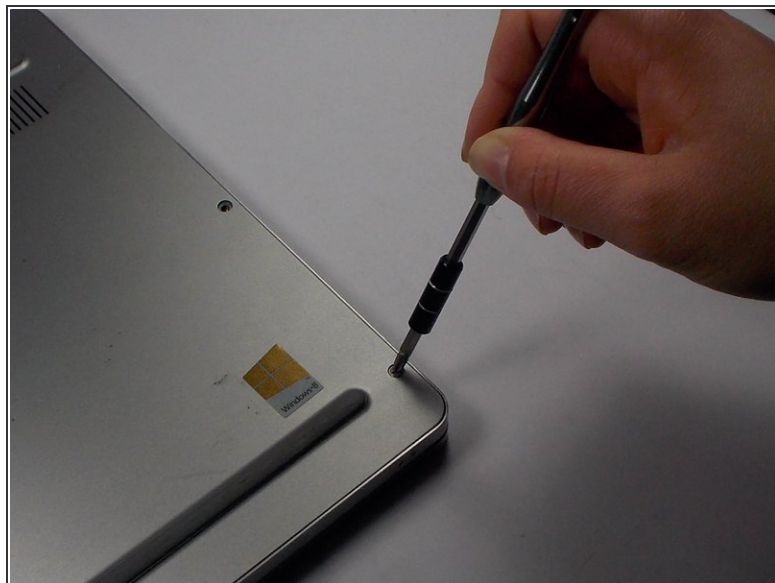

 Power off your Dell Inspiron 14-7437 before disassembling.



- Remove the eight 4.5 mm screws on the back panel of the device using the Phillips 1 Screwdriver.
-  The two 4.5 mm screws in the center under the rubber mount cannot be removed, but can be loosened.

Step 2




- Pry open the back cover using a spudger and slide it along the under the cover.

Step 3 — Battery

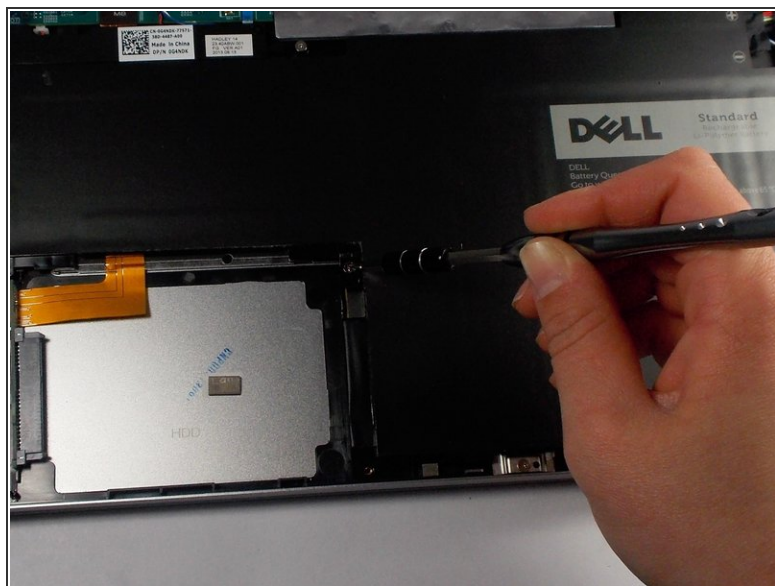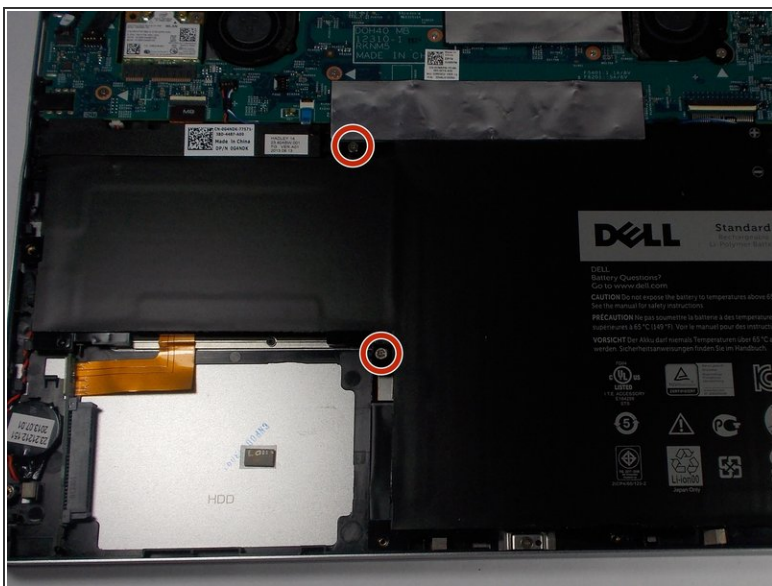

- Remove the two 2.5 mm screws holding the battery in place using the J000 Phillips Head Screwdriver.

Step 4

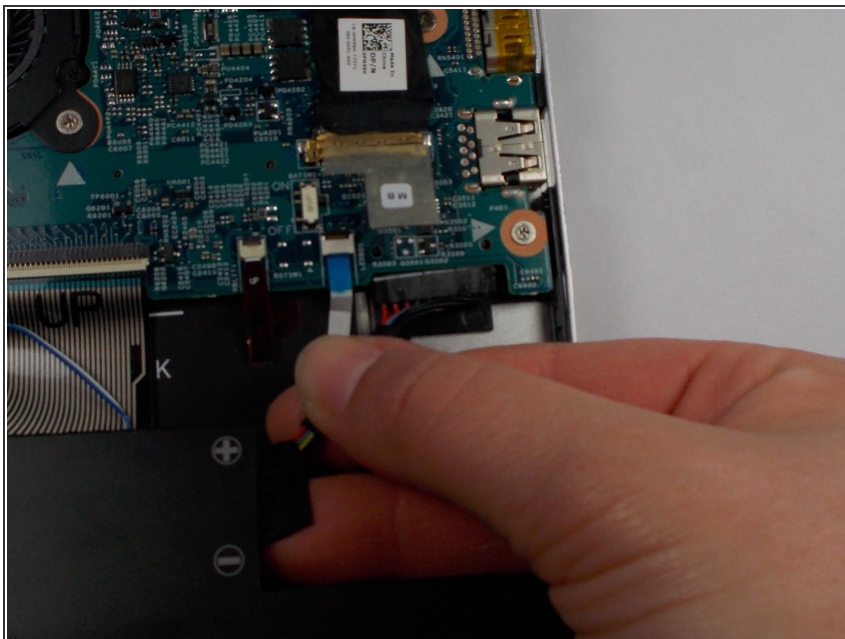


- Disconnect the ribbon cables from the motherboard.

Step 5






- Lift up and remove the Lithium-Polymer Battery.

Step 6 — Speaker

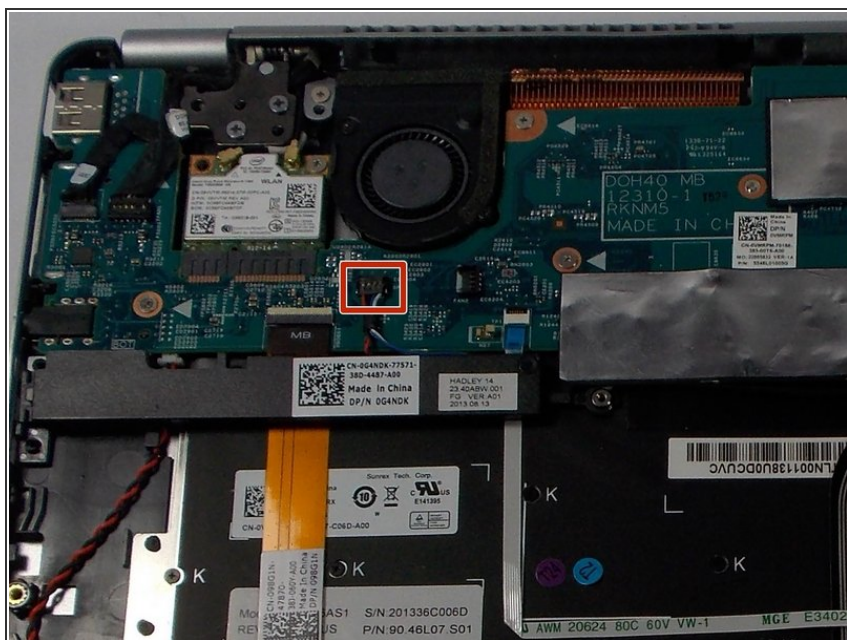

- Disconnect wires from Motherboard by gently pulling up.

Step 7

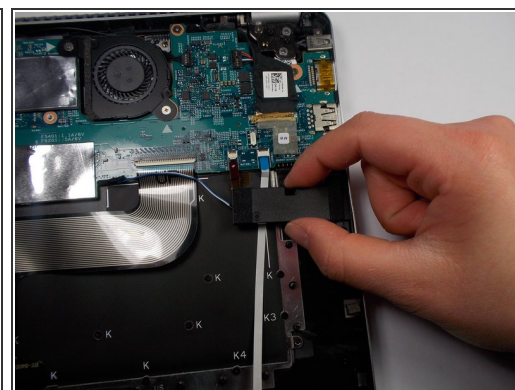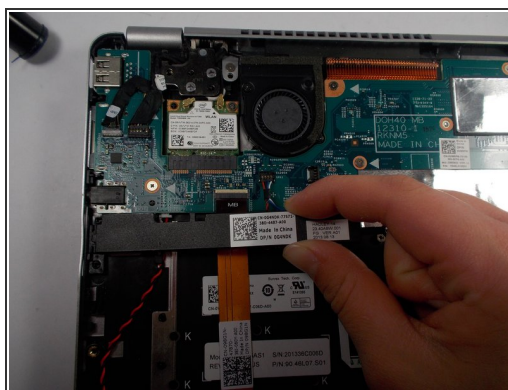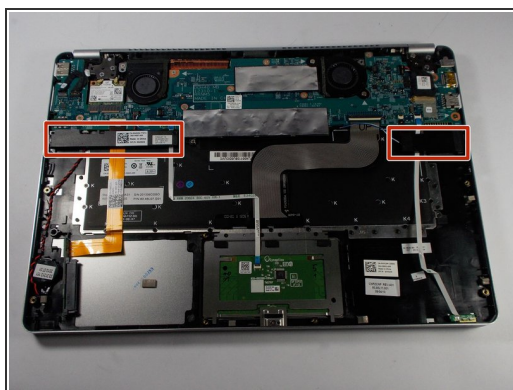

- Remove the speakers from the case.

To reassemble your device, follow these instructions in reverse order.