


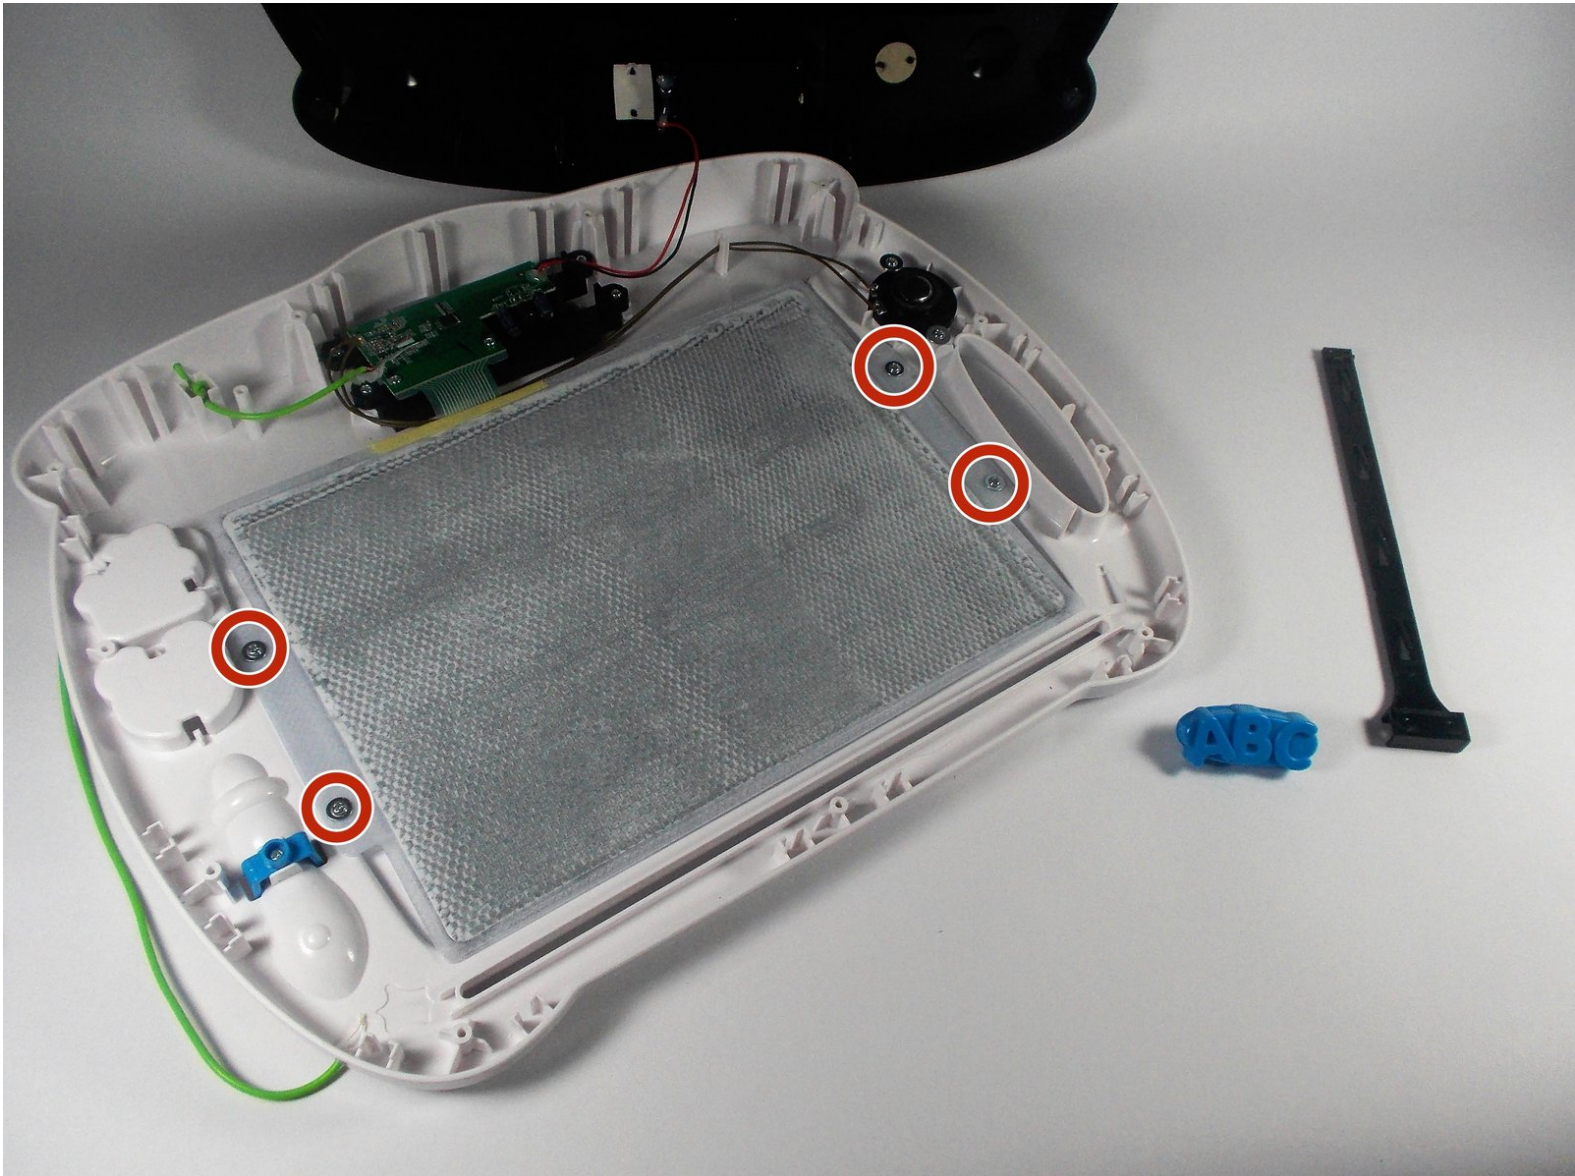

VTech Write and Learn Creative Center Magnetic Screen Replacement

Replace the magnetic screen to resolve problems related to writing on the screen of the device.

Written By: Philip Zietkowski



INTRODUCTION



The magnetic screen is an important aspect for the VTech Write and Learn Creative Center because the magnetic screen is one of the interactive ways to engage children to learn by allowing them to write. The following repair guide addresses properly replacing the magnetic screen.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Back Panel

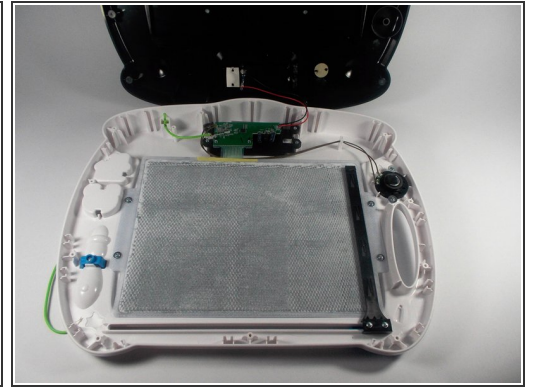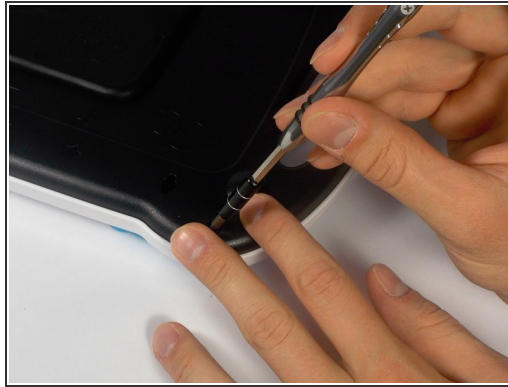

- Remove all eleven 9mm PH 2 Phillips screws securing the back of the case.


Step 2 — Slider

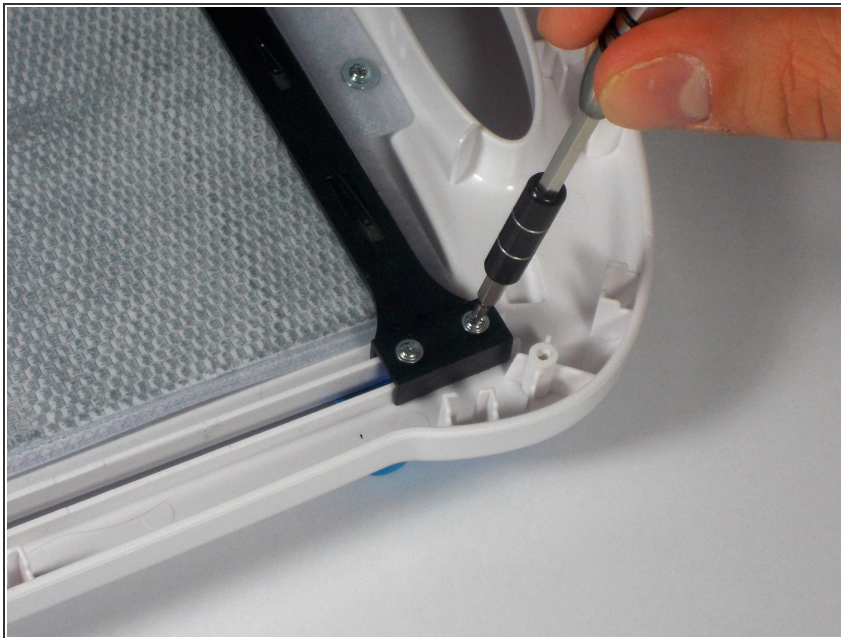

- Remove the two 7mm PH 0 Phillips screws holding the slider to the slider handle.


⚠ The back of the slider will likely be coated in lubricant. Be careful not to make a mess.

Step 3 — Magnetic Screen

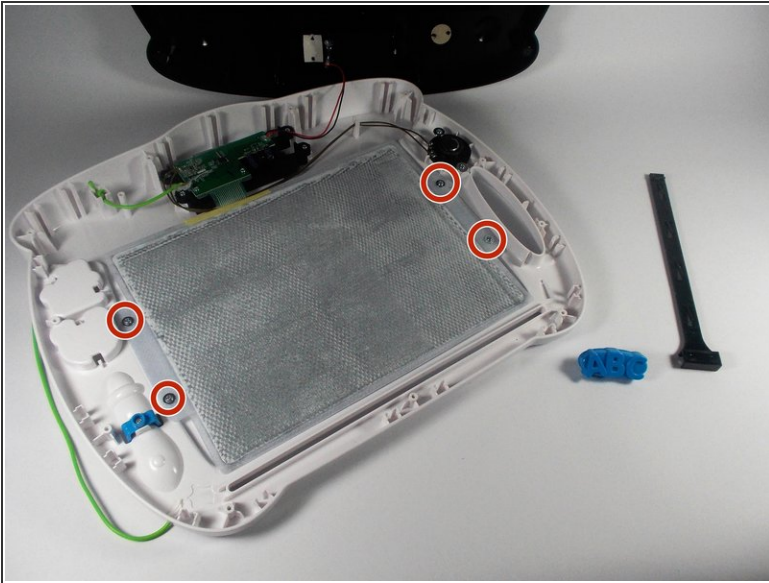

- Remove the four 5mm PH 0 Phillips screws with 7mm heads holding the screen to the front of the case.

Step 4

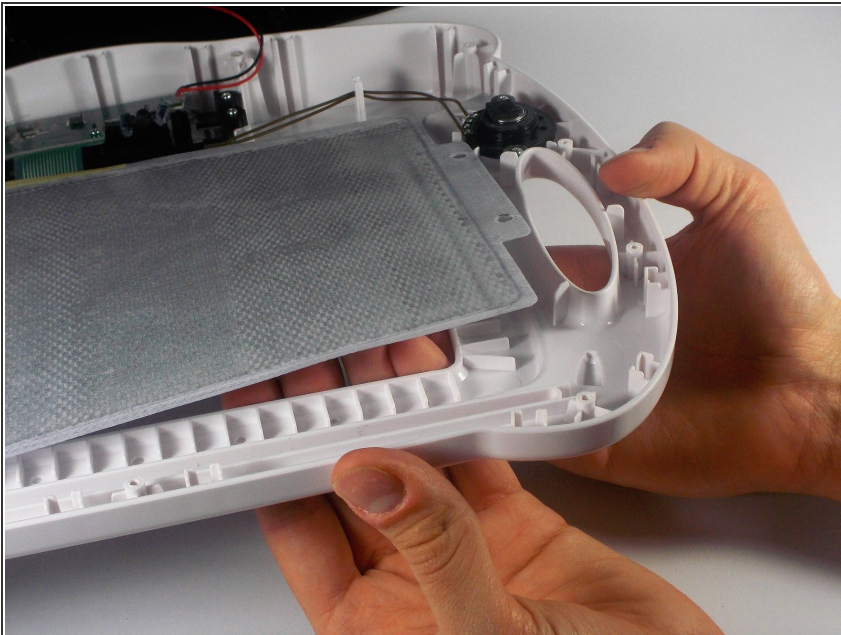

- Gently push the edges of the screen to remove it from the front case.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-16 09:48:57 AM (MST).

