



Dell Vostro A860 RAM Memory Sticks Replacement

This guide will go over how to access and remove the RAM memory for the laptop.

Written By: Joshua Dennis



INTRODUCTION



Depending on the configuration of the laptop you own there may be one or two memory sticks located inside the compartment.



TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — RAM

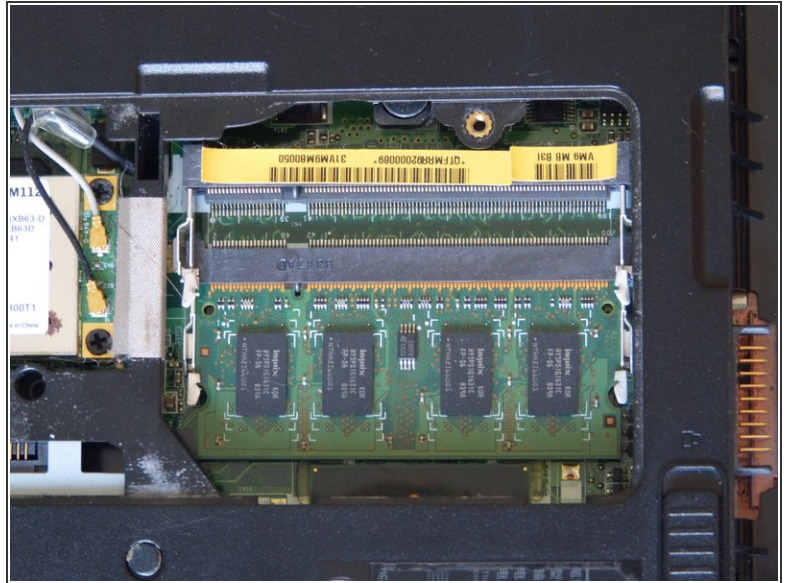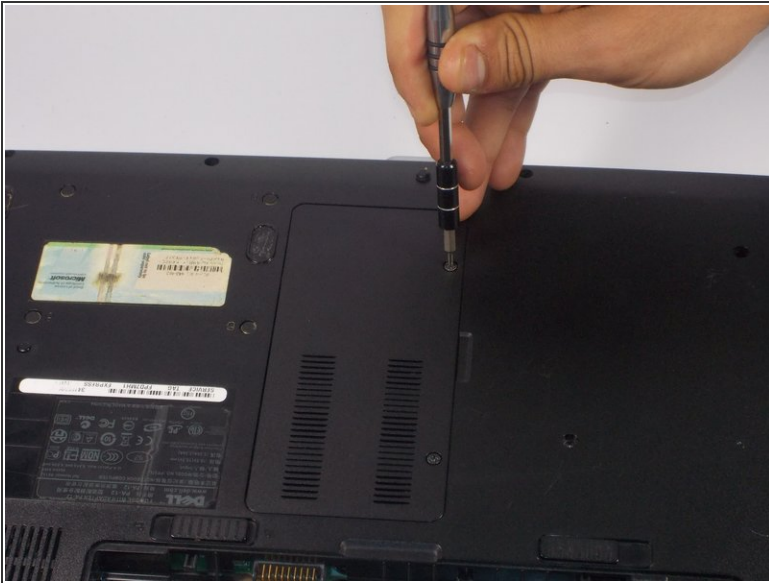

- With the computer facing down locate the RAM compartment cover.
- Unscrew the two screws holding the cover to the laptop chassis.
- ⓘ The screws do not remove completely, they are clipped into the compartment cover.
- Lift up on the Memory cover and remove.

Step 2

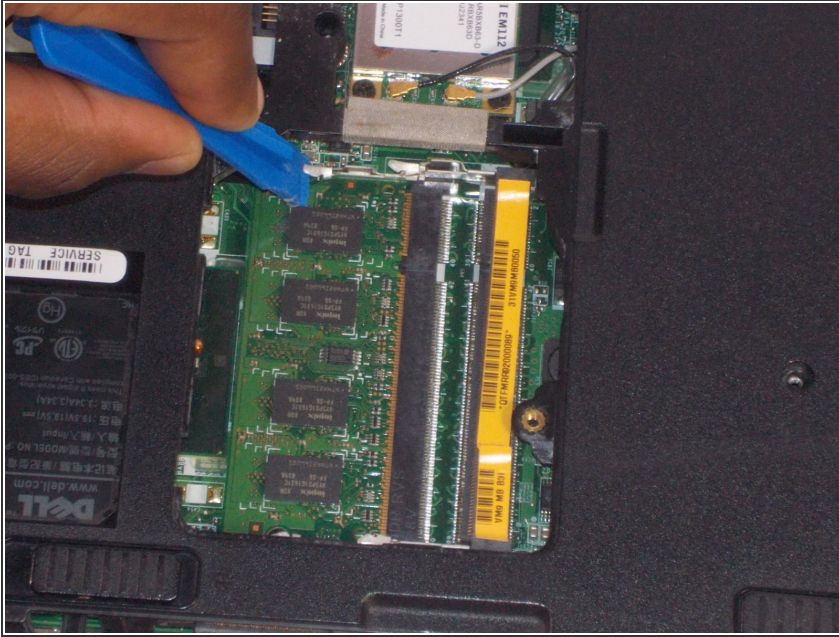

- Using a plastic opening tool push outward on both sides of the RAM stick.
- ⓘ doing this will release the silver tension clips holding the memory sticks in place. Once released the stick will easily lift up and out of the unit.

To reassemble your device, follow these instructions in reverse order.