 




How to Unsolder Coby Kyros MID7024 Battery

This guide shows the user where to unsolder the device's battery.

Written By: Nicholas Bosco

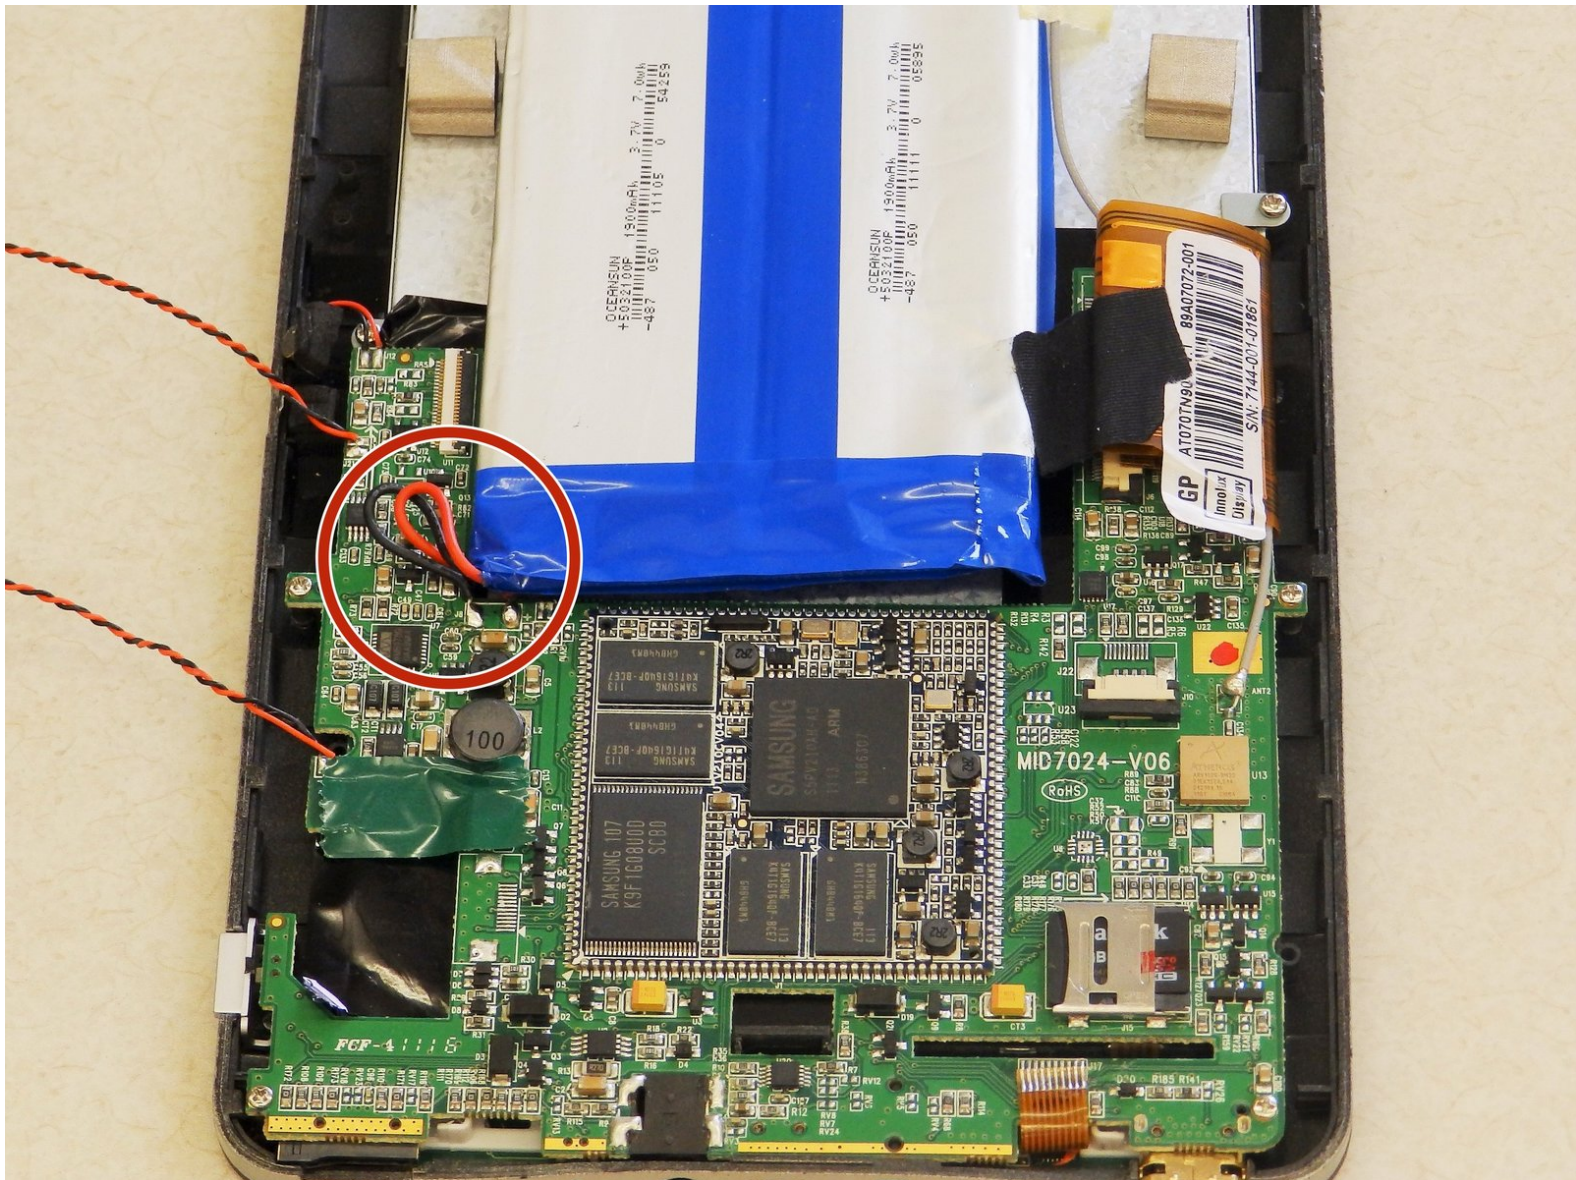

INTRODUCTION

 
 
This guide will help the user to locate the two contact points that attach the device's battery to the motherboard. These points will need to be unsoldered before any internal components are repaired or replaced. This will prevent accidental damage to the user or to the device from happening.



TOOLS:

- [Portable Soldering Iron](#) (1)
-

Step 1 — How to Unsolder Coby Kyros MID7024 Battery

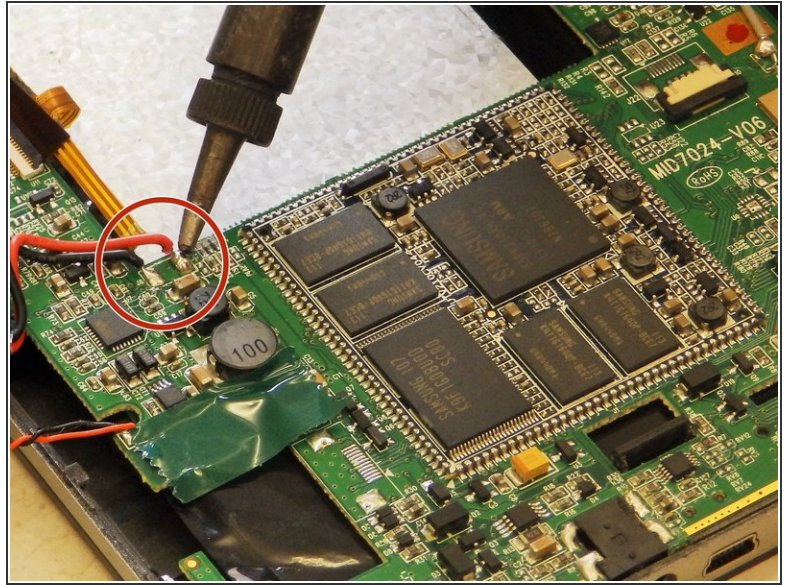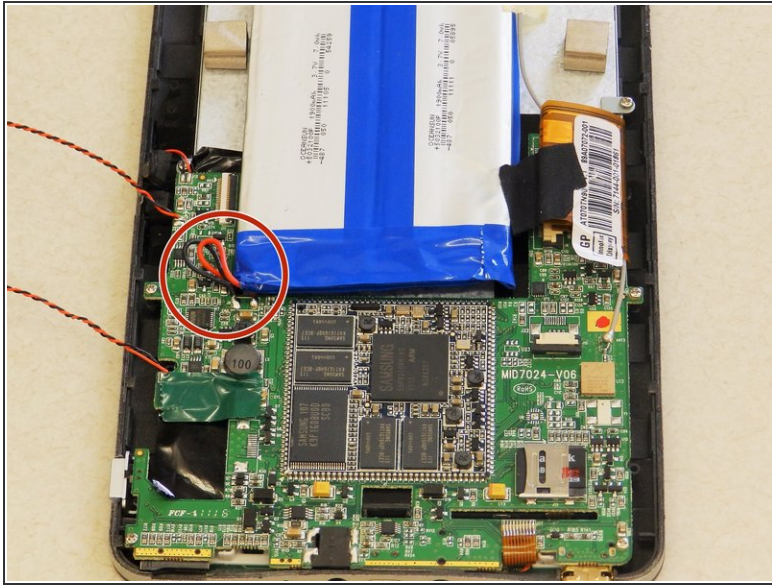

- Use a soldering gun to remove the positive and negative wires connecting the battery to the motherboard.
- ⓘ Follow [the guide on soldering](#) to assist you in removing the battery.

To reassemble your device, follow these instructions in reverse order.