

Nikon Coolpix P7000 Teardown

Teardown of the Nikon Coolpix P7000. This teardown allows the replacement of the optic unit, the motherboard, the flash, etc...

Written By: Hardy



This document was generated on 2020-11-25 11:28:03 AM (MST).

Step 1 — Remove the screws



• Start by removing all the screws visible on the body of the device.

Step 2 — Removal of the back of the device



- Once all the screws are removed, gently lift the back of the device as it is connected to the motherboard by two ribbon cables.
- Remove the screws and then, the metal protection plate.
- Disconnect the ribbon cables from the motherboard by gently lifting the plastic valves.
- Then, remove the mounting screws from the motherboard. Remove the motherboard but be careful, as it is still connected to the frame with the speaker wires.

This document was generated on 2020-11-25 11:28:03 AM (MST).

Step 3 — Removing the upper housing



- Now, remove the top cover.
- Remove the screw which still maintains the frame. You will find it behind this red circle.
- All you have to do now is to remove the optical unit, it comes more easily when pulling it up.
- Your device is disassembled with success and you now have access to all its components.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-25 11:28:03 AM (MST).