



Hamilton Beach 70730 Switch Replacement

This guide will show you how to replace the switch to your Hamilton Beach 70730 food processor.

Written By: Mack Bernard



INTRODUCTION

The switch is what controls your food processor. It could possibly be cracked or loose. This would not allow you to turn on your food processor or control the speeds.



TOOLS:

- [Metal Spudger](#) (1)
-

Step 1 — Switch



- Using a metal spudger, pry the switch from the front of the device.

To reassemble your device, follow these instructions in reverse order.