



Acer Aspire E1-510P-4637 Hard Drive Replacement

This guide will go through the steps required to remove and replace the laptop's hard drive.

Written By: Caleb lindsay





TOOLS:

- [Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- To release the battery, depress the battery release with a nylon spudger. Hold the latch down and slide it over.

Step 2



- Firmly grab hold of the battery and slide it out of the laptop.

Step 3 — Hard Drive




- Remove the M2.5x8 screw with a PH1 screwdriver.

Step 4





- Use the plastic opening tool to pop off the small back cover.

Step 5

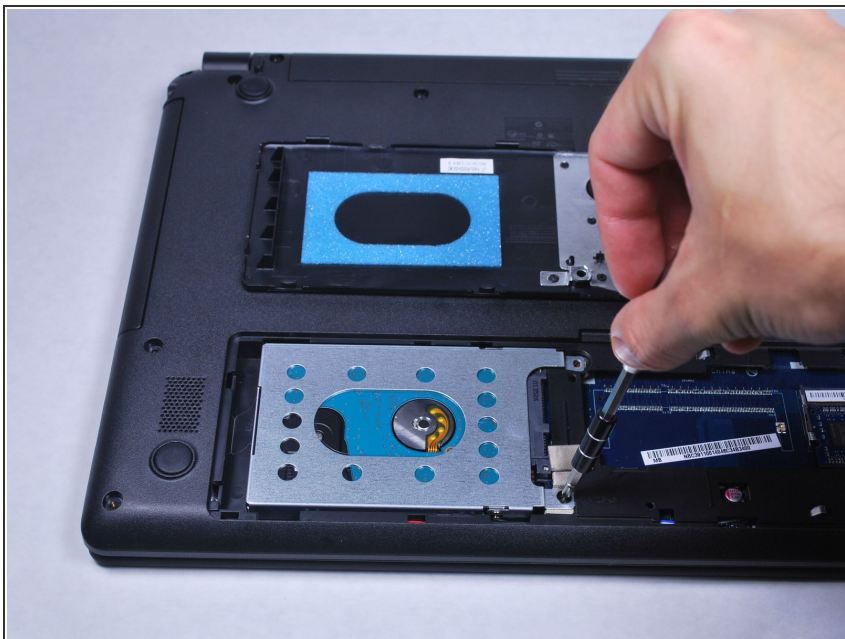

- Use a PH0 Phillips screwdriver to remove the screw securing the hard drive.

Step 6

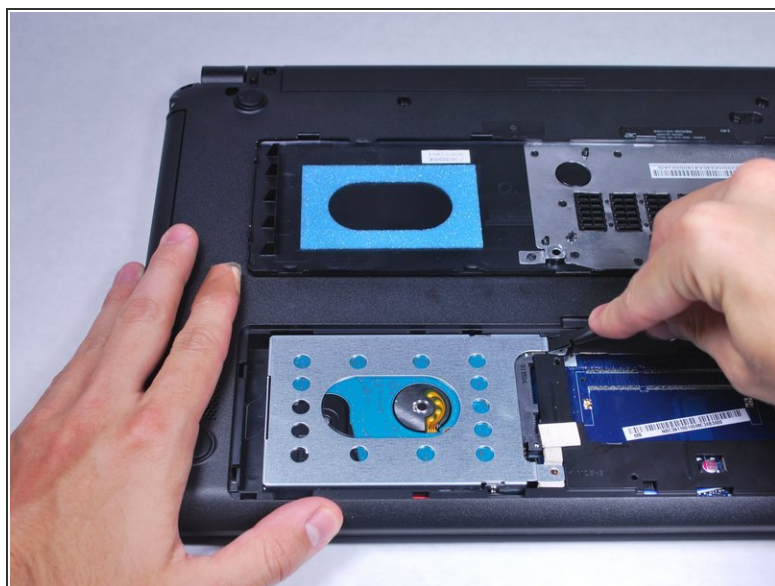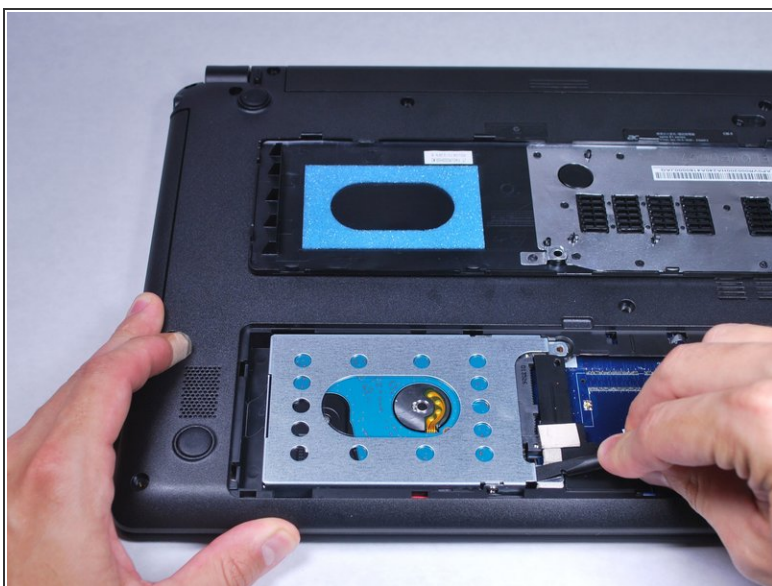


- Use a nylon spudger to slightly pry up the hard drive near the screw holes.

Step 7



- Grab hold of the plastic tab and pull the hard drive away from the connectors. This will release the hard drive.

 The hard drive connector is fragile. Handle with care.

To reassemble your device, follow these instructions in reverse order.