




Cuisinart Griddler GR- 4N Disassembly

Prerequisite Only

Written By: Cyrus Dastur

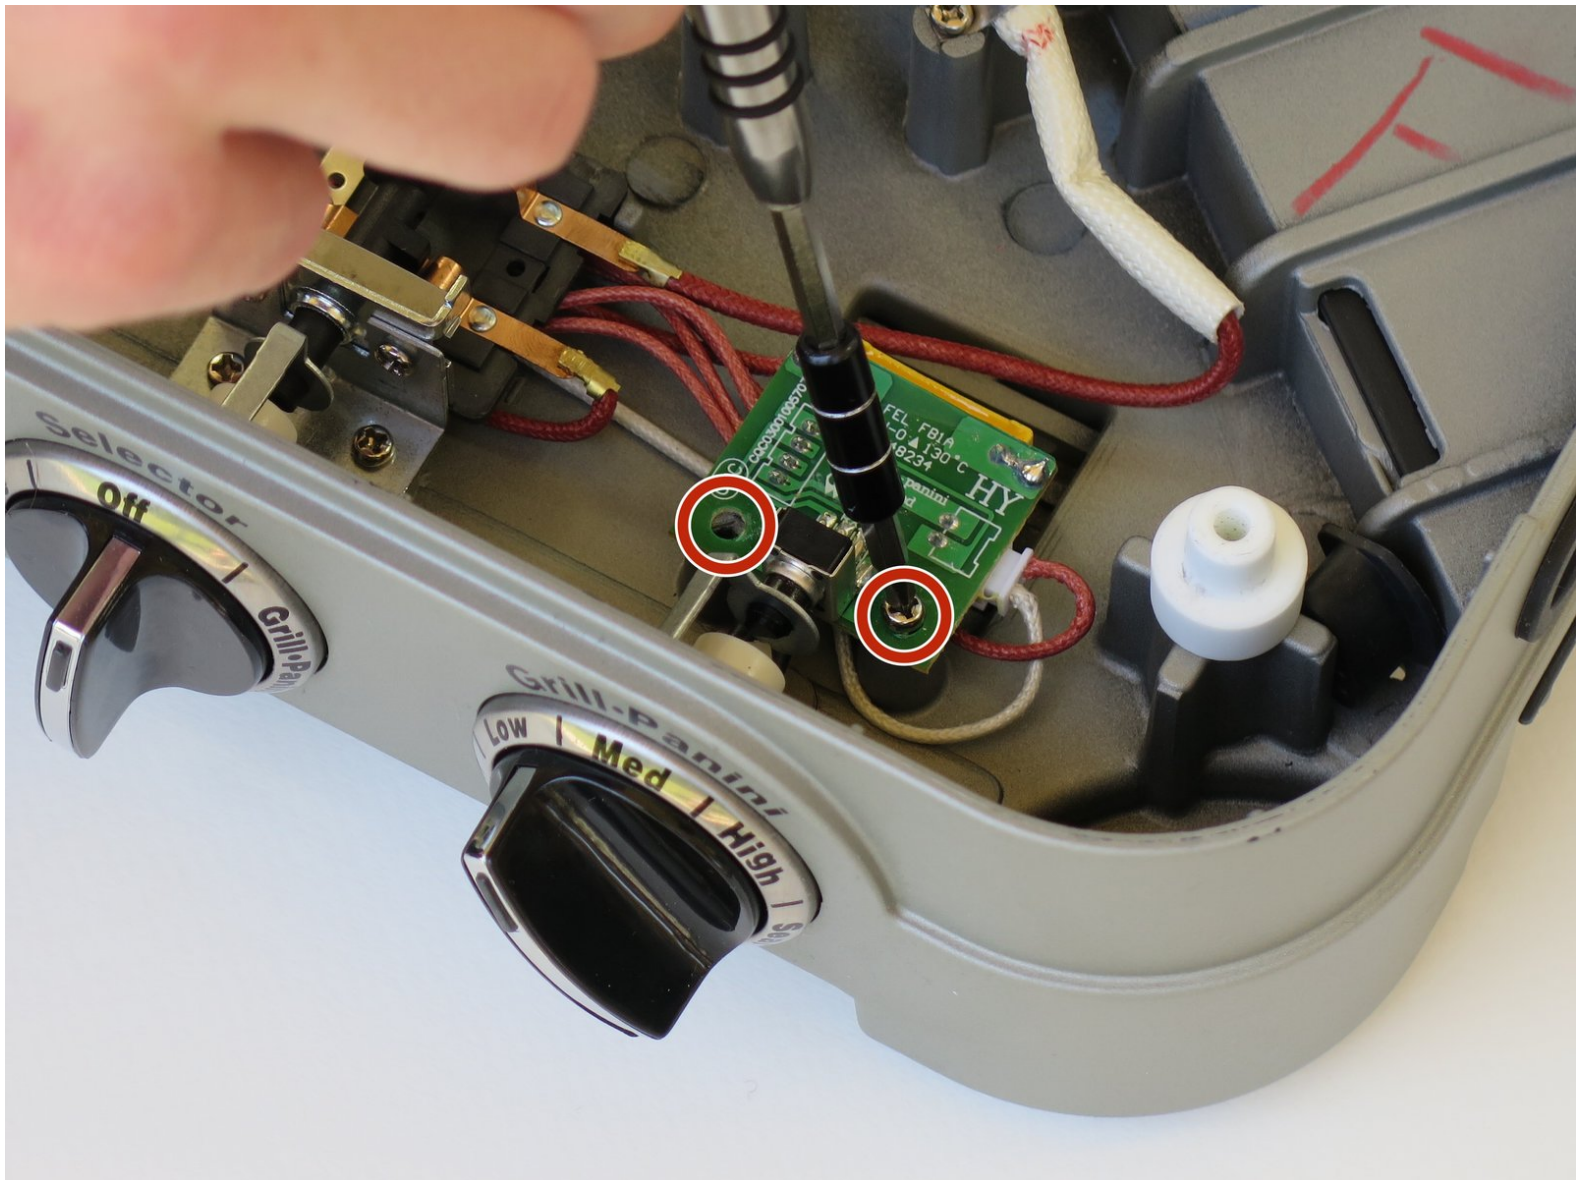

INTRODUCTION


This guide will allow you to get to the most basic components of the device where you will be able to perform many necessary replacements.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Cuisinart Griddler GR- 4N Disassembly

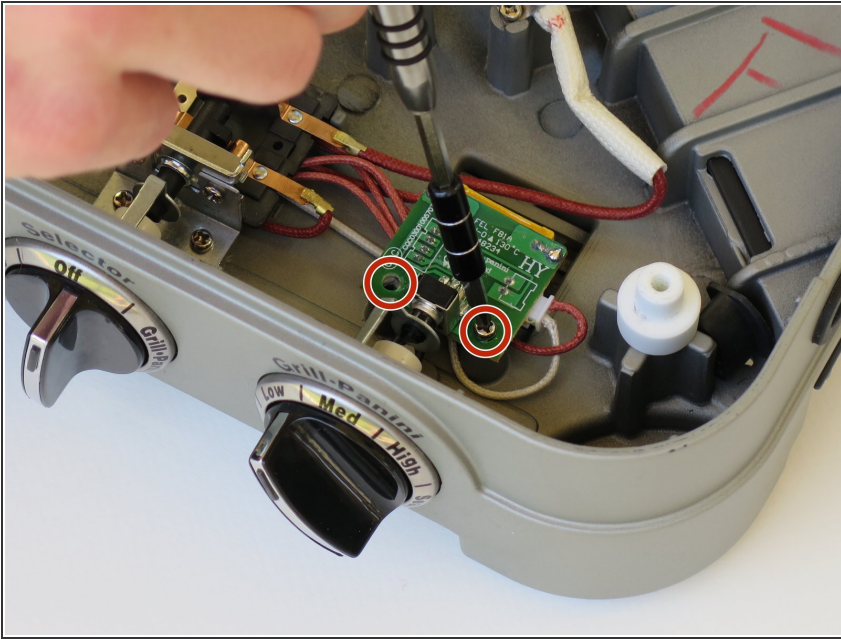

- Remove the two 6 mm Phillips #2 screws that secure the knob circuit board.
- Move the circuit board to the side so it is out of the way.

Step 2

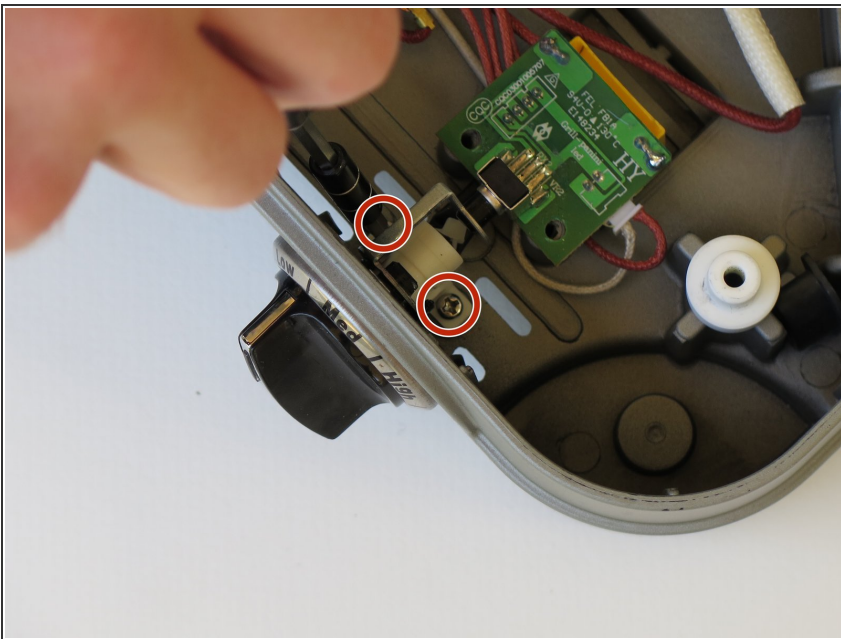

- Remove the two 6 mm Phillips #2 screws that secure the white plastic LED holder.

To reassemble your device, follow these instructions in reverse order.