


# **Bose SoundLink Color Outer Casing Replacement**

This guide will show how to remove the 4 screws...

Written By: Michael Thorn

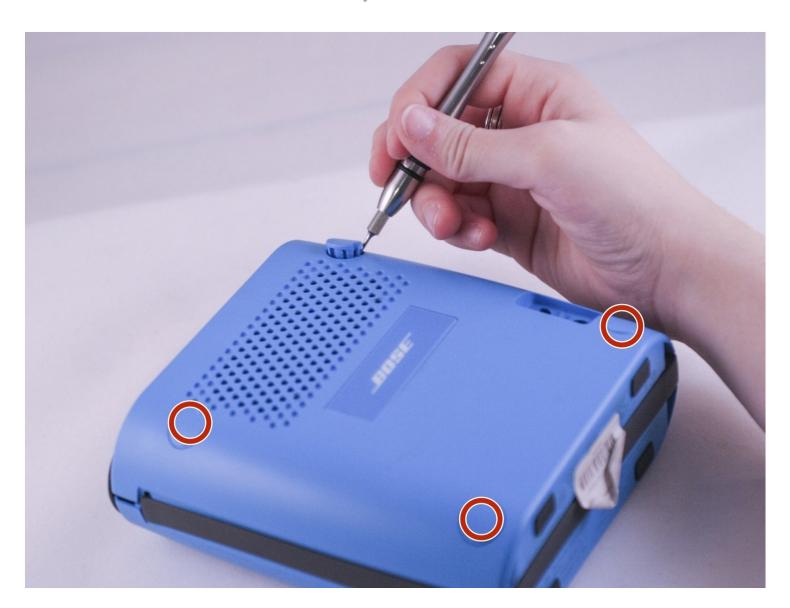

#### INTRODUCTION

This guide will show how to remove the 4 screws that are holding the two parts of the casing together and how to separate the casing for replacement.

### TOOLS:

Tamper Resistant TORX Plus TR Bit (1)
Phillips #0 Screwdriver (1)
Metal Spudger (1)

## Step 1 — Outer Casing



- i Four round, plastic plugs are located on the back of the device.
- Using a metal spudger, carefully pry up the plastic covers.
  - The covers are all glued on, so be careful not to scar the casing when prying them off. If possible, use a spudger or plastic opening tool to remove them.

# Step 2





- Remove the four 1.8 cm-long T15 Torx Security screws from the outer case.
- (i) Some of these use T15 "Star" 5-point Torx security screws instead of the more common 6-point ones.

# Step 3





- Carefully open up the casing.
  - The top button pad may need to be re-glued upon installing the new casing.

To reassemble your device, follow these instructions in reverse order.