



Cuisinart Griddler GR-4N Cooking Surfaces Replacement

This guide is for ensuring the parts within the griddler are aligned correctly.

Written By: Kayla Londono



INTRODUCTION

Cooking surfaces may be heating unevenly because the the plates and heating coils are out of alignment. This guide will take you through the steps to disassemble the device, allowing you to reassemble it correctly.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-


Step 1 — Cooking Surfaces



 Ensure device is turned unplugged, cooled down and clean before attempting any replacements.


- Remove cooking plates by pushing in the tabs on each side of the plate at the same time.

Step 2

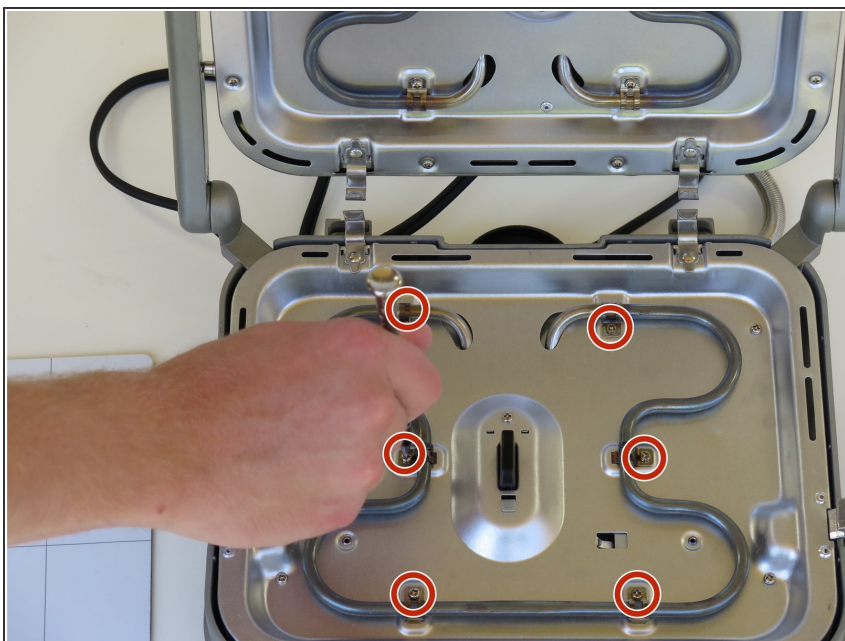


- Remove the six 5.5mm Phillips #2 screws that secure the bottom heating coil to the device.

Step 3

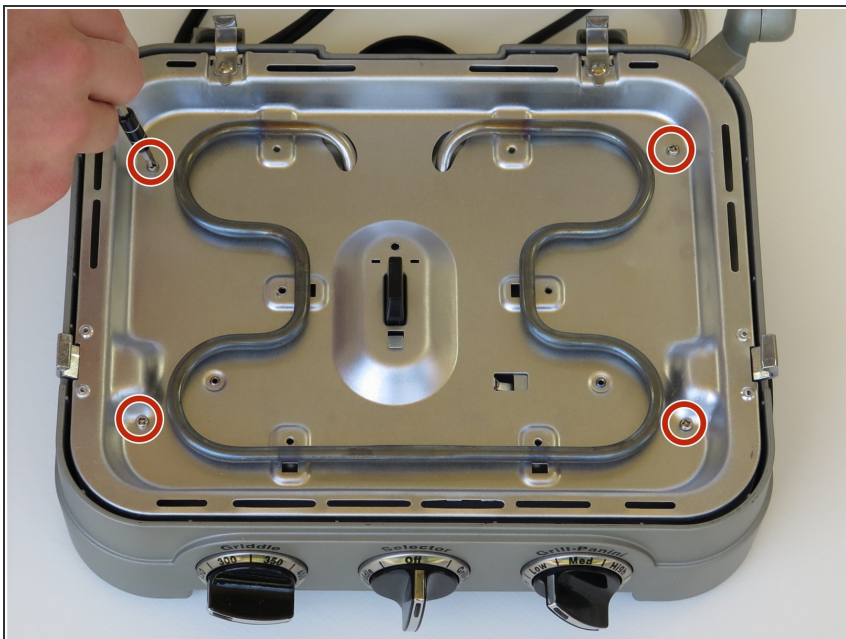


- Remove the four 30 mm Phillips #2 screws that secure the bottom heating apparatus.

Step 4

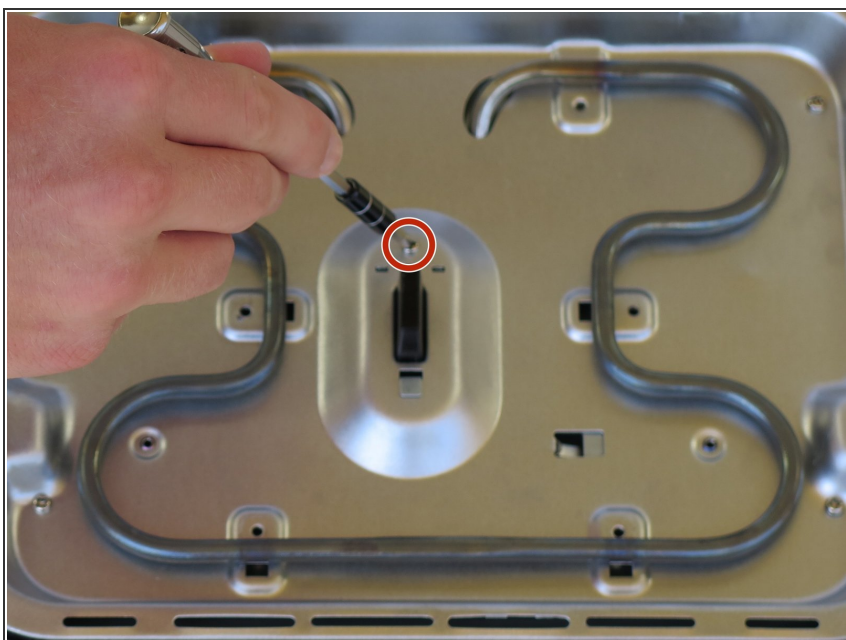

- Remove the single 5.5 mm Phillips #2 screw next to center black button.
- After removing the center screw the metal plate should be free to remove.

Step 5

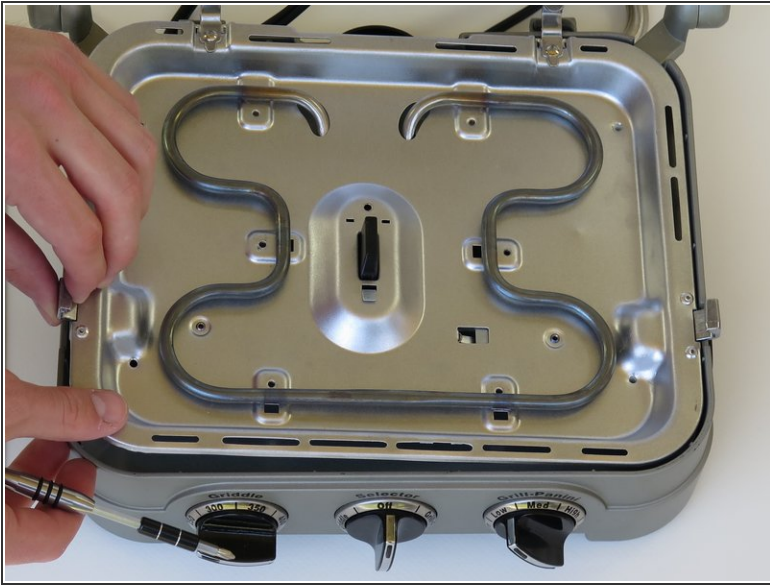

- Lift the bottom heating apparatus up and remove large black center piece by pushing down on black button while sliding out.
- Realign all surface and put device back together making sure all parts are lined up and heating surfaces are making contact.
- The aligned parts will allow the cooking surfaces to work properly.

To reassemble your device, follow these instructions in reverse order.