



# Cuisinart Griddler GR-4N Handle Replacement

This guide is for replacing the handle which is used to open and close the cooking surfaces of the device.

Written By: Kayla Londono



## INTRODUCTION

 
If the handle has broken off of the device you will have to reattach it or a new handle depending on the damage to your handle. This guide will show you the necessary steps to do so.



### TOOLS:


- [Phillips #2 Screwdriver](#) (1)
  - [10 mm triple square](#) (1)
-

## Step 1 — Handle

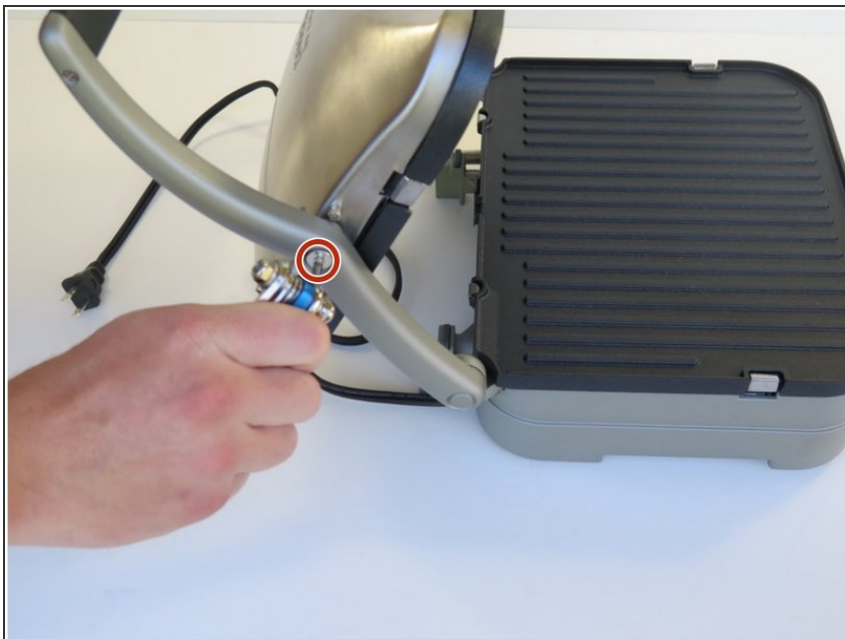

- ⚠ Ensure device is turned off, unplugged, cooled down and clean before attempting any replacements.
- Start by unscrewing the triple-square bolt.

## Step 2

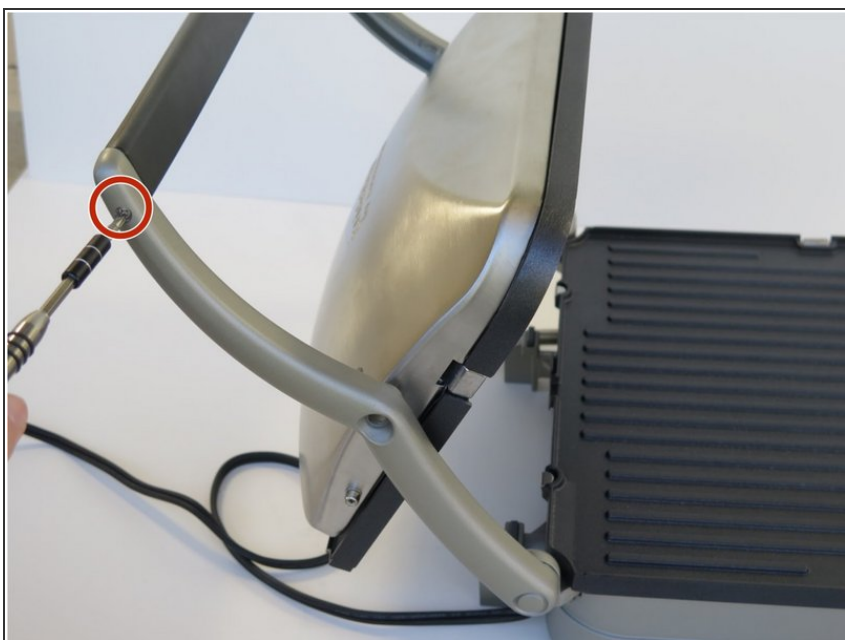 

- Next, unscrew the Phillips #2 screw attaching it to the black handle .

### Step 3



- You can now pull the handle off of the griddler and reattach a working handle.

To reassemble your device, follow these instructions in reverse order.