



Insignia Flex 8 NS-P16AT08 Back Casing Replacement

Instructions for removing the back cover from the Insignia Flex 8 tablet.

Written By: Emily Guidinger



INTRODUCTION


This guide will help you remove the back cover from the Insignia Flex 8 tablet. This is a necessary step in every replacement guide that follows this. If you need to reach the inside of your tablet, this is a good place to start.




TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Back Casing

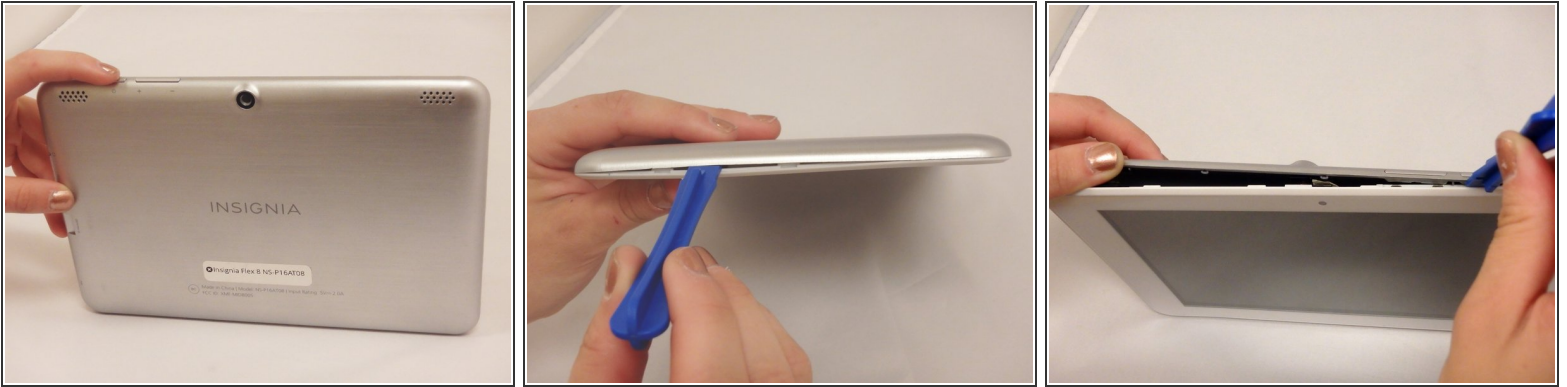

 Make sure device is powered off.

- Wedge the plastic opening tool anywhere in the seam between the back casing and screen.
 - Slide the plastic opening tool along the sides and corners of the seam of the device while it separates from the screen.
-  You will hear the popping sound of the plastic connections separating from the device.

Step 2



- Lift the back casing away from the screen.
- Set casing aside.

To reassemble your device, follow these instructions in reverse order.