



Keurig B60 Handle Replacement

Replace a cracked or damaged handle to open the Pack Holder.

Written By: Jake Wynn



INTRODUCTION

This replacement is recommended if the Keurig Handle is damaged and/or unable to open the Pack Holder.



TOOLS:

- [T15 Torx Screwdriver](#) (1)
-

Step 1 — Handle



- Lift the handle

Step 2



- Locate and remove the two 9.5 mm Torx T15 screws on both sides of the handle.

Step 3



- Remove the broken handle and replace with the new one

To reassemble your device, follow these instructions in reverse order.