


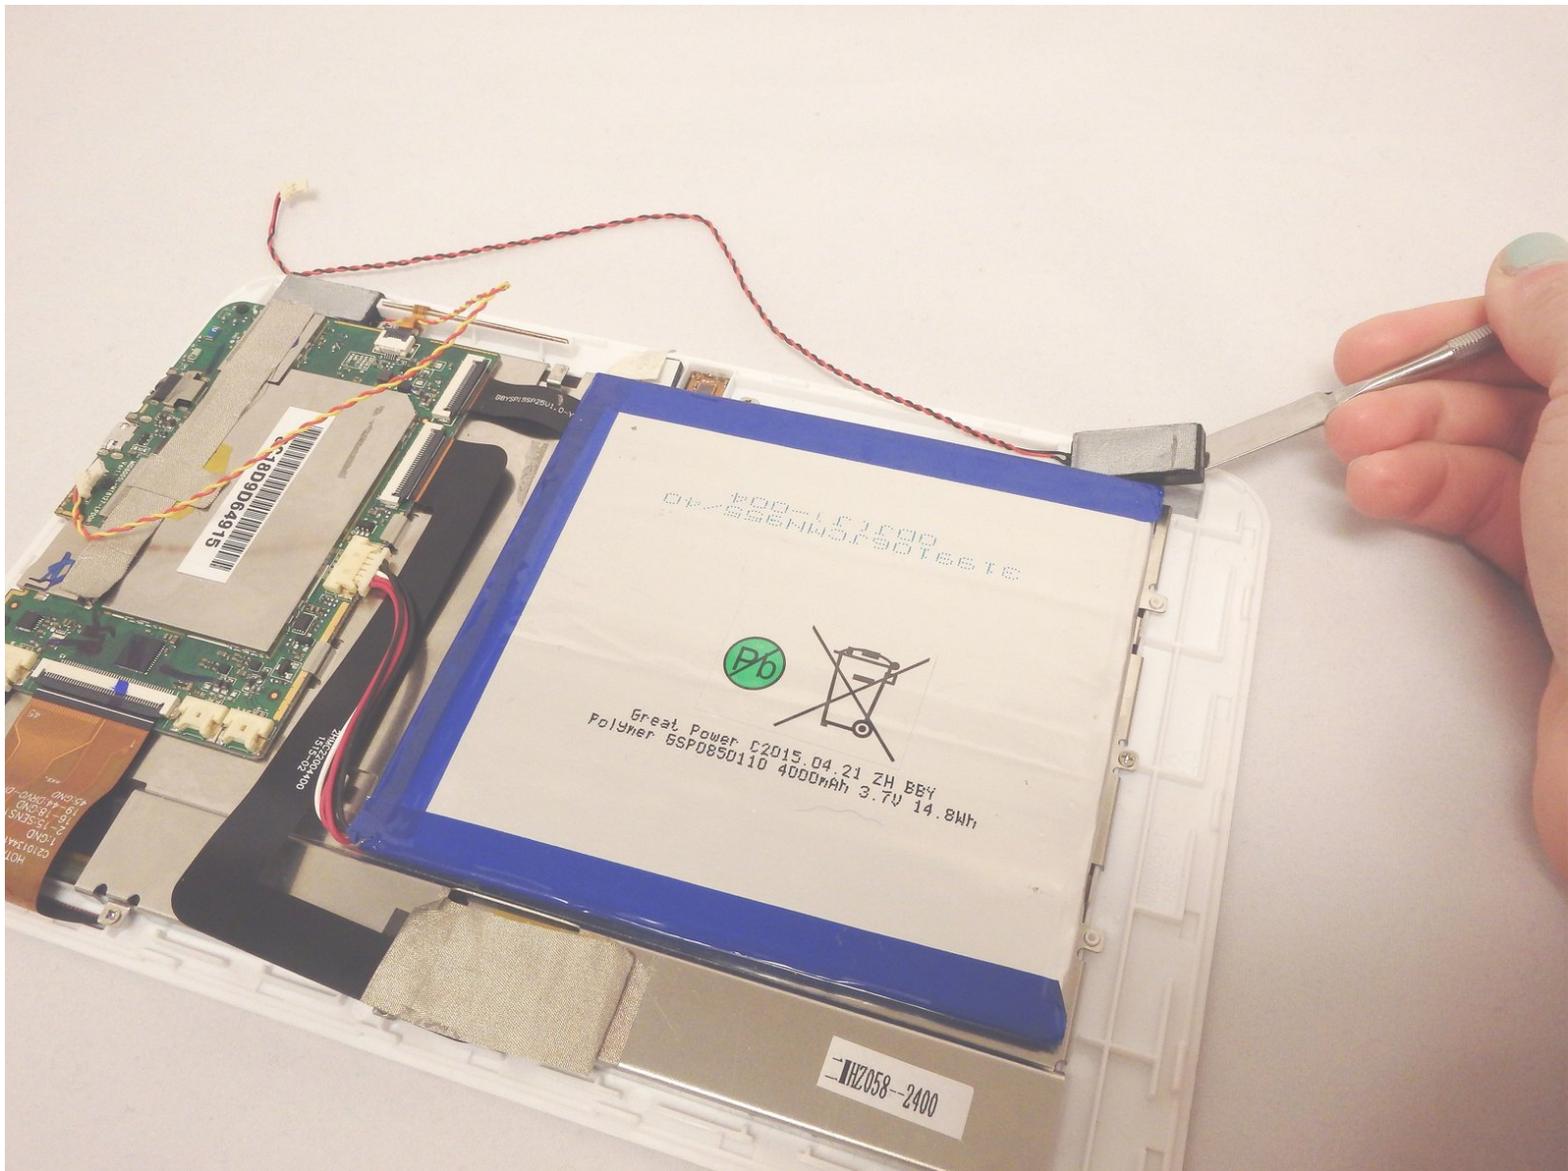

Insignia Flex 8 NS-P16AT08 Speakers Replacement

This guide will show you how to remove the speakers from your Insignia Flex 8.

Written By: Jose Diaz




INTRODUCTION

If your tablet speakers are not working or you would like them to work better, follow this guide to replace them.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Casing

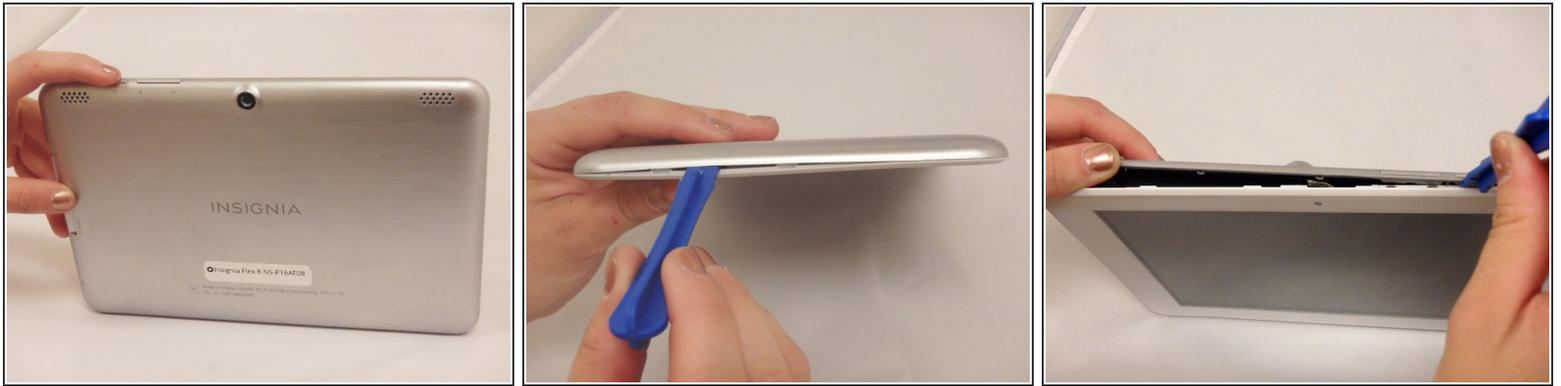

⚠ Make sure device is powered off.


- Wedge the plastic opening tool anywhere in the seam between the back casing and screen.
 - Slide the plastic opening tool along the sides and corners of the seam of the device while it separates from the screen.
- i** You will hear the popping sound of the plastic connections separating from the device.

Step 2




- Lift the back casing away from the screen.
- Set casing aside.

Step 3 — Speakers

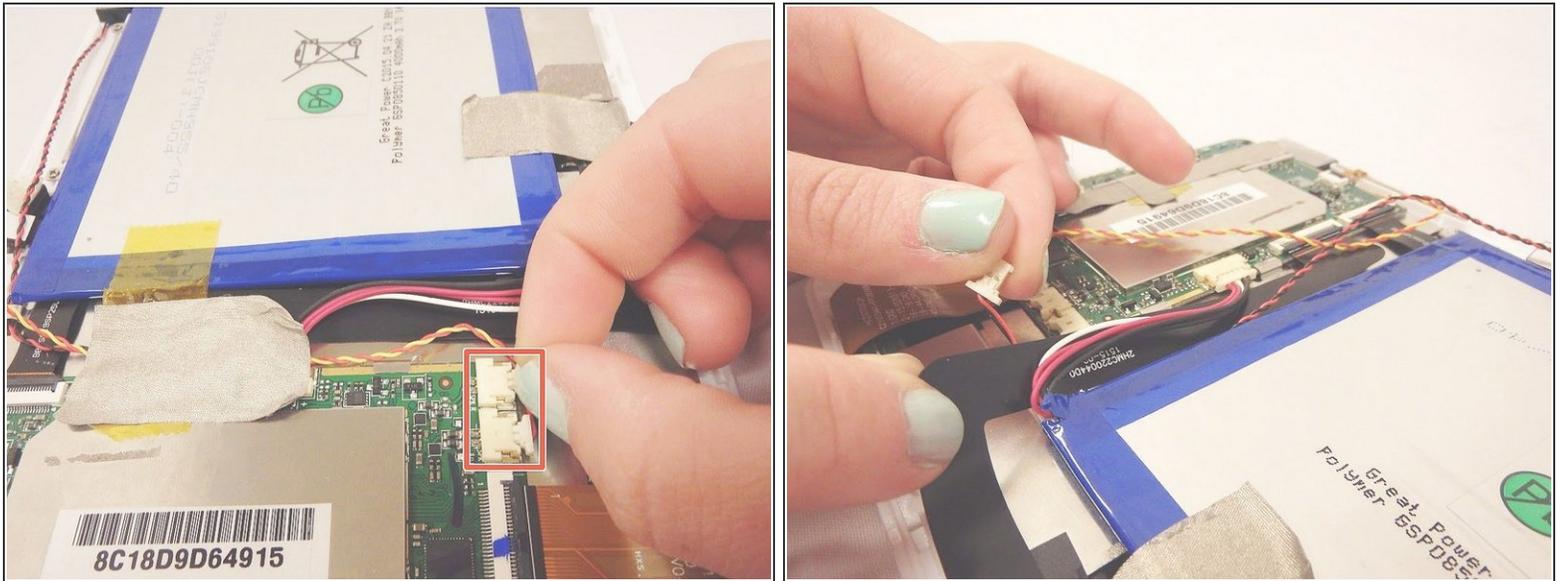


- There are two connections that attach the speakers to the motherboard.
 - Unplug the cables from the motherboard by gently pulling them away.
- ⓘ Speaker cables will be free to be removed.

Step 4

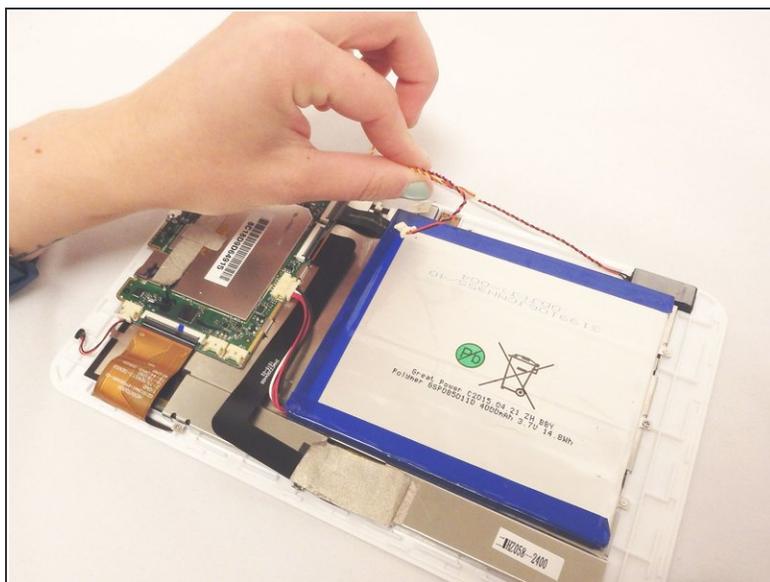

- ✦ Remove the tape that is holding the speaker cables down.
 - Remove the speaker cables from underneath the black connector ribbons.
- ⓘ The cables are hooked underneath black connector ribbons; carefully unhook them.

Step 5

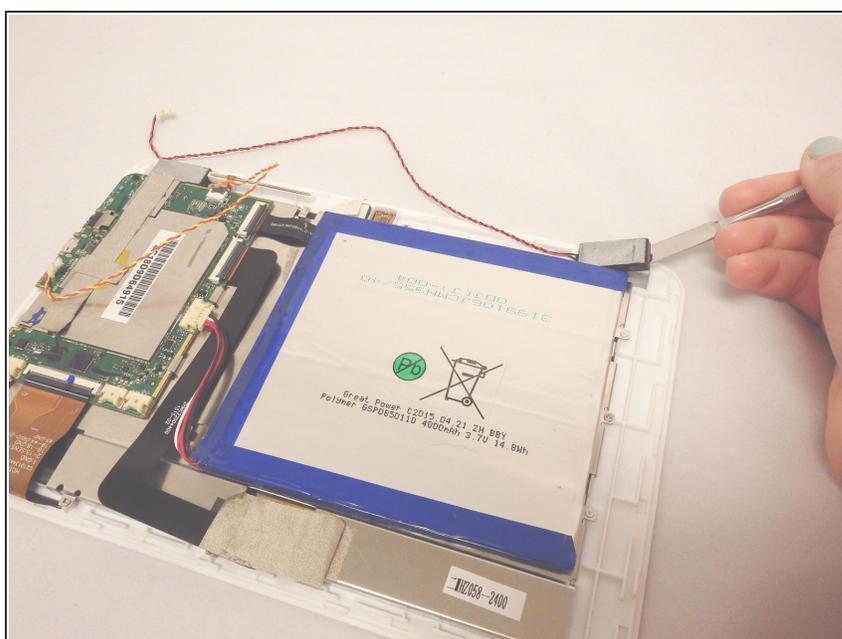

- Gently pry both speakers away from adhesive with metal spudger tool.
- ⓘ Always use a nylon spudger or plastic opening tool before a metal spudger. Metal spudgers are great for serious prying power but can damage your device if used incorrectly.
- The speakers can now be completely removed from the device.

To reassemble your device, follow these instructions in reverse order.