




Sony Handycam HDR-HC1 LCD Replacement

Replace the LCD on your Sony Handycam HDR-HC1.

Written By: Ella Snyder

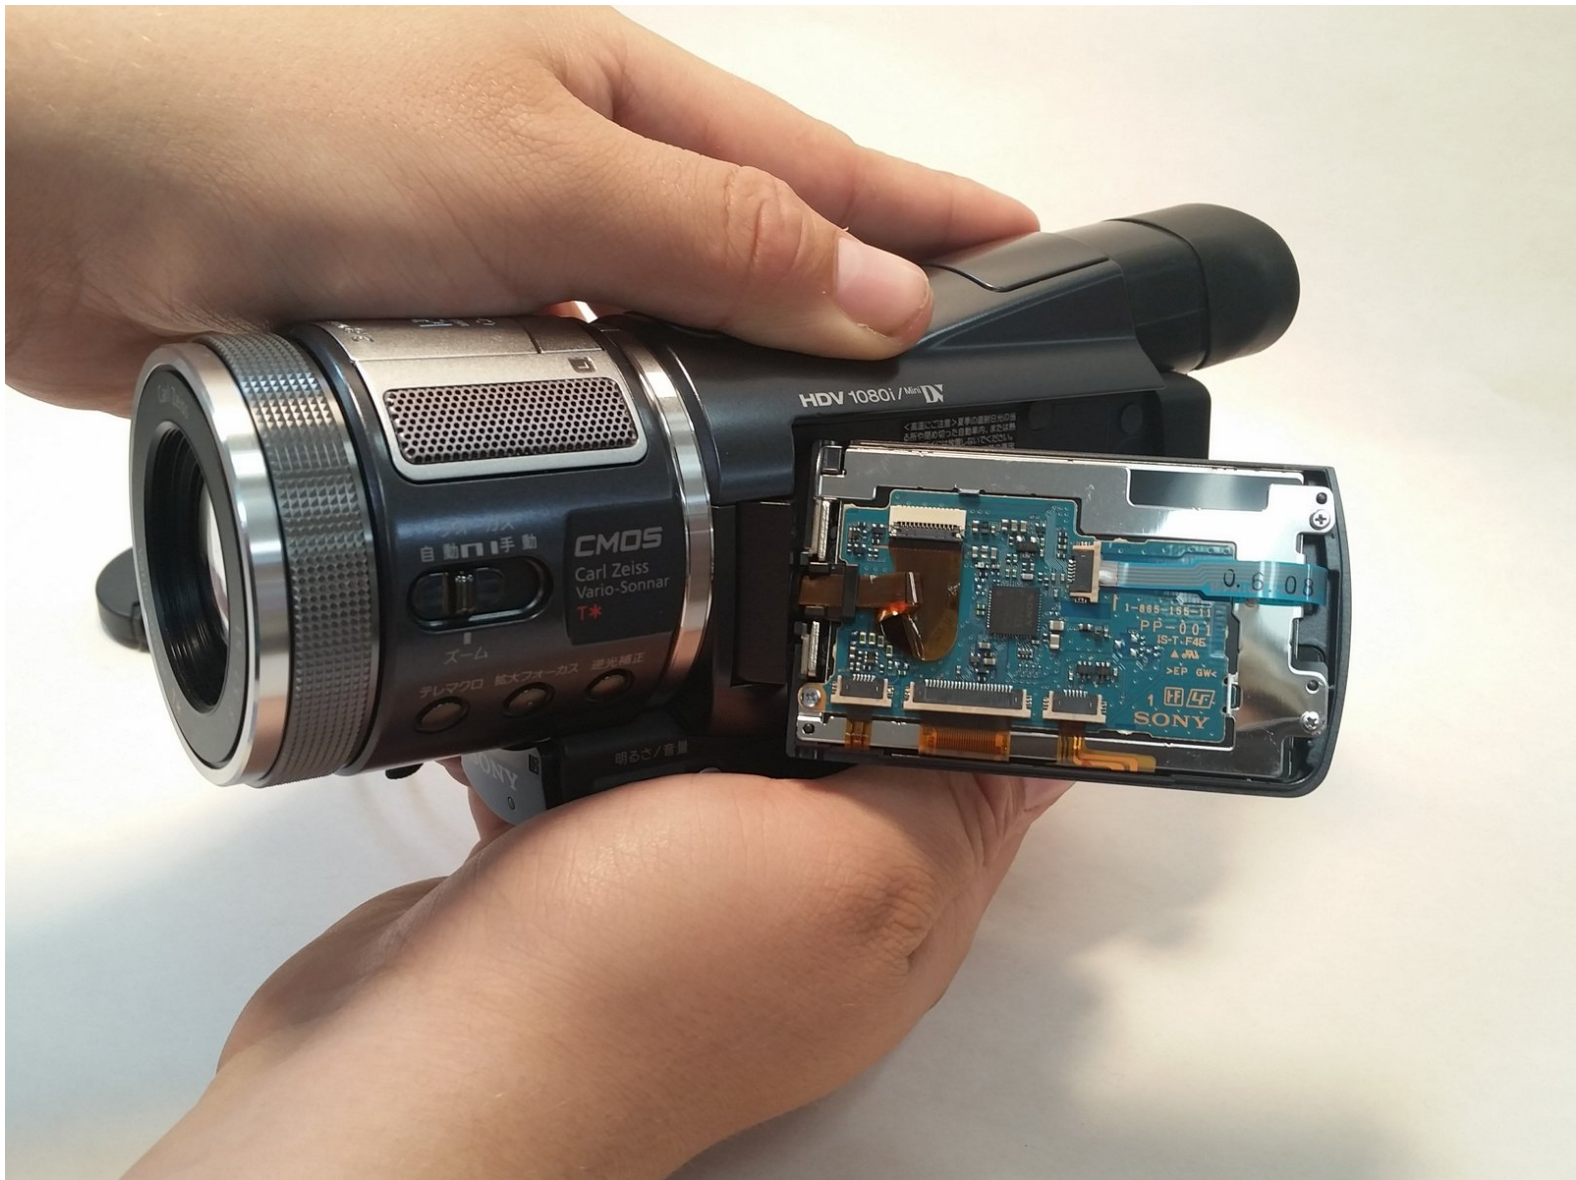

INTRODUCTION


Use this guide to replace the LCD screen of the Sony Sony Handycam HDR-HC1 video camera.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — LCD

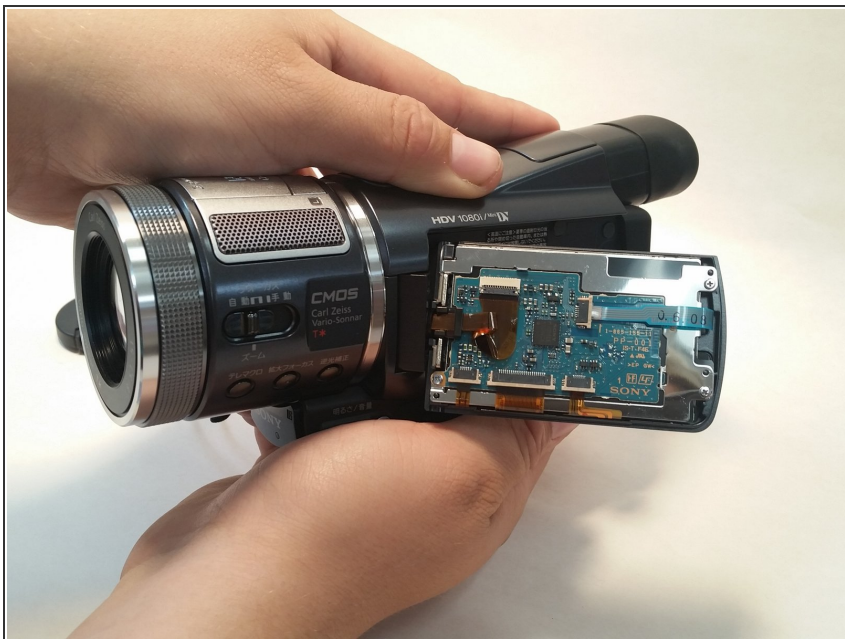


- Take off the top and bottom screws on the LCD shell

Step 2




- Remove screws from the metal shield that is situated on the microchip

Step 3

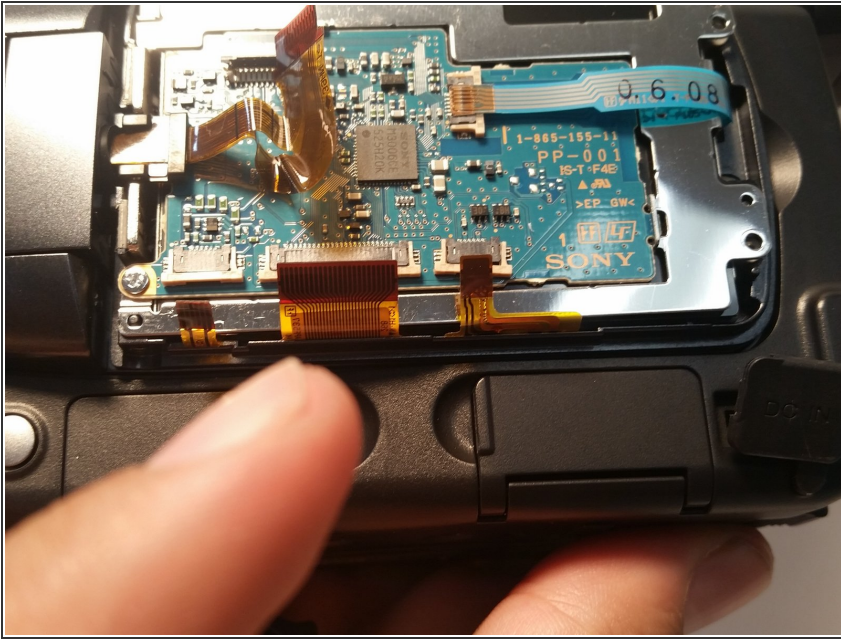


- Remove the ribbon connections from the microchip

Step 4

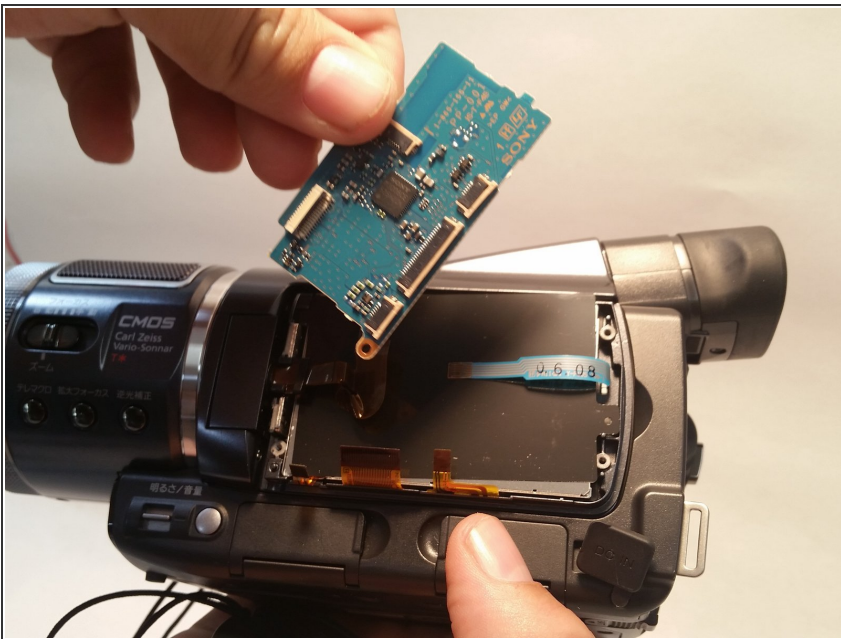

- Remove the microchip

Step 5

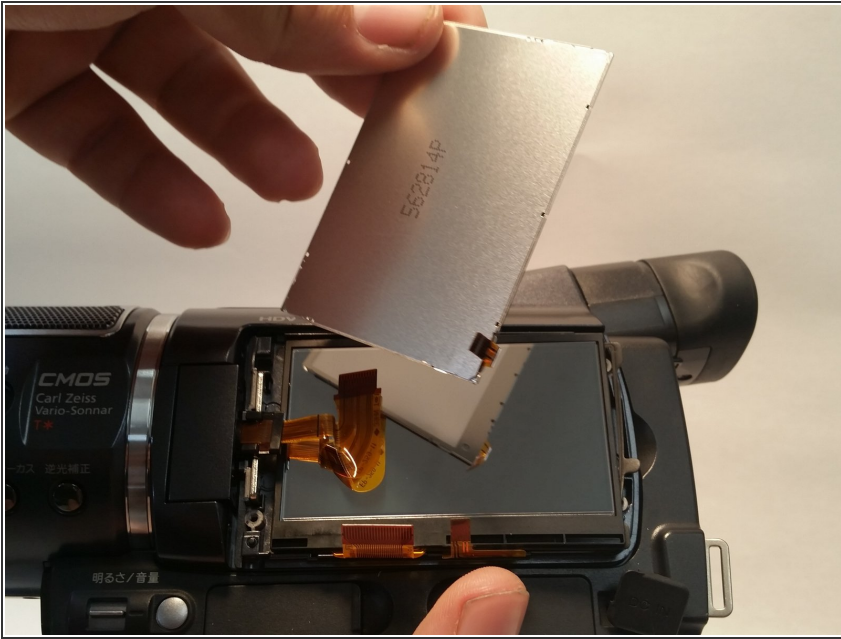

- Remove the LCD in the shell

Step 6



- Replace the LCD with a new one and work backwards on the steps to put the video camera back together and you have completed the iFixit Guide

To reassemble your device, follow these instructions in reverse order.