



# Samsung WB1100F LCD Screen Cover Replacement

Replace the rear panel and LCD screen cover of the Samsung WB1100F .

Written By: Jesse Lindsey



---

## INTRODUCTION

Use this guide to replace the rear panel and LCD screen cover of the Samsung WB1100F. The screen cover is part of the rear body of the camera. The cover is highly susceptible to scratching and cracking.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — LCD Screen Cover



- Remove six 1.2 mm Phillips #00 screws connected to the tripod dock and adjacent screws.
- Remove six 1.2 mm Phillips #00 screws from the side of the camera.

## Step 2



- ⓘ Use a plastic opening tool or spudger if available.
- Using the flat end of a spudger, loosen the connection between the back panel and the device. Remove the back panel using your hands.

To reassemble your device, follow these instructions in reverse order.