



Slime Portable Air Compressor Fuse Replacement

This guide will demonstrate how to replace the fuse located in the cigarette lighter power source.

Written By: Taylor Bratsch



INTRODUCTION

This guide will demonstrate how to replace the fuse located in the cigarette lighter power source.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Getting Started



- Unscrew the small black screw at the base of the cigarette lighter power source.

Step 2 — Remove the Top



- Unscrew the tip of the power source and set aside.

⚠ Be careful to save the small metal tip as it is loose.

Step 3 — Remove Case




- Pry the casing apart.

Step 4 — Unwind the Cord



- Carefully unwind the cord at the base of the power source from the plastic case.

Step 5 — Remve and Replace

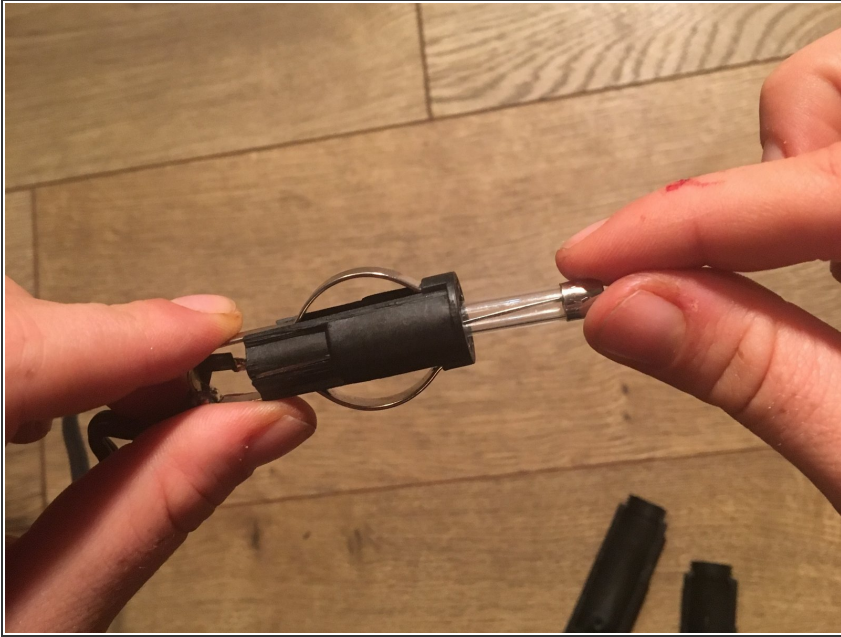

- Remove the 15 amp fuse and replace.

Step 6 — Reassemble



- Reassemble.

To reassemble your device, follow these instructions in reverse order.