



bObi Pet Front Wheel Disassembly

A guide on how to remove bObi Pet's front wheel for replacement as well as instructions for cleaning and re-assembly.

Written By: Chelsea



INTRODUCTION

All you need for removal of the wheel is a Phillips head screwdriver and a few minutes. bObi Pet's cleaning tool, paper towel, and compressed air are optional if cleaning the wheel.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)

PARTS:

- [bObi Pet Front Wheel](#) (1)

Step 1 — Turn bObi Pet Off



- To start, turn bObi Pet's side power switch to OFF and flip her over so the wheels point up.
- Remove bObi Pet's front wheel. Grip it with your hand and pull up, using a screwdriver for leverage.

Step 2 — Remove the Front Wheel



- You may remove and clean the smaller wheel on bObi Pet's wheel piece.
- To detach it, grip firmly and pull. Once again, you may use the screwdriver for this step.

Step 3 — Open the Wheel



- Flip the wheel over and remove the 2 screws holding the wheel piece together.
- ☑ Remember to keep these screws for reassembly.
- Then pop the outer casing open and you'll be able to clean the front wheel's interior with bObi Pet's cleaning tool or compressed air.

Step 4 — Clean the Wheel's Interior



- After cleaning the inside of the wheel piece, replace the spring inside.
- Then, align the edges of its outer casing.

Step 5 — Put the Wheel Back Together



- Hold the wheel piece together while you reinstall the 2 screws.
- You may replace the small wheel on the other side of the front wheel piece, opposite the screws.

Step 6 — Replace the Wheel on bObi Pet



- Lastly, place the front wheel back in its space on bObi Pet.
- Push down firmly to lock the wheel in place.

Congratulations on completing bObi Pet's front wheel disassembly!