



Nexus 5 SIM Card Replacement

This guide will show you how to replace your...

Written By: Kyle Libby



INTRODUCTION

This guide will show you how to replace your Nexus 5 SIM card.

TOOLS:

[SIM Card Eject Tool](#) (1)

PARTS:

[Nexus 5 SIM Card Tray](#) (1)

Step 1 — SIM Card



- ① Power off the device by holding the power button until the "Power Off" popup appears. Tap the popup and wait for the device to turn off.
- Insert a SIM card eject tool or a paper clip into the hole next to the SIM card slot, which is located just under the power button. Do not force the paper clip if it is too thick; instead use the head of a sewing needle.
- Push the tool into the hole until you see the card pop out.

Step 2



- Gently remove the SIM card with your fingers, or a pair of [tweezers](#) if the SIM holder does not fully eject.
- ★ Make sure the chip is facing the rear of the phone when reinserting the SIM card.

To reassemble your device, follow these instructions in reverse order.