



# Huawei ascend G700 Touchscreen Display Replacement

A guide to replace the touchscreen display and frame assembly of a Huawei ascend G700.

Written By: Smilzo



# INTRODUCTION

An outline to teach others what they are about to do.

## Step 1 — Touchscreen Display



- Remove the back cover and battery

## Step 2




- Remove the indicated screws

### Step 3




- unhook Central frame using a thin tool behind joints along the entire perimeter of the phone

### Step 4

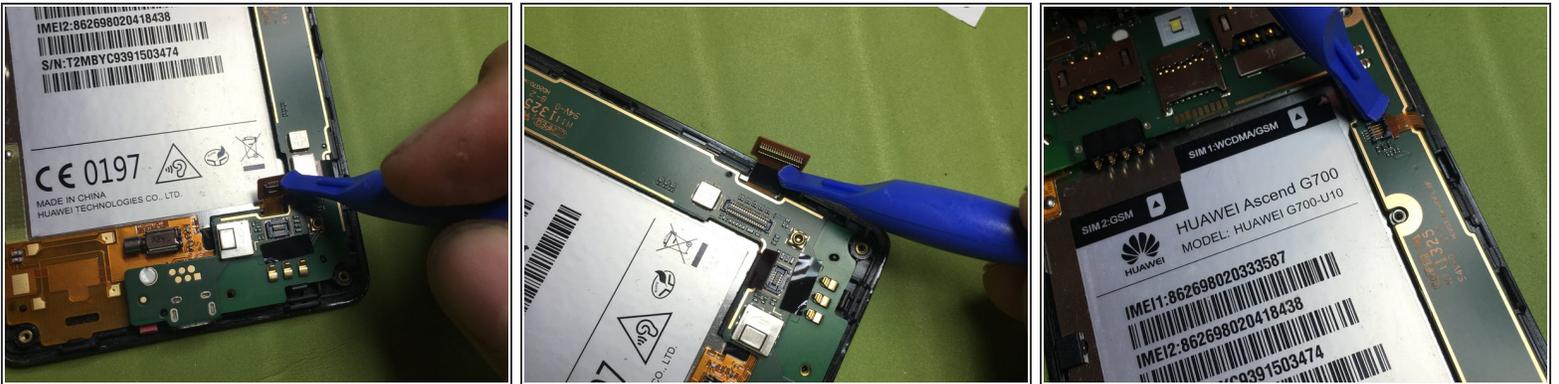


- Unplug the touchscreen connector.
- Unplug the motherboard connector.
- Unplug the side volume key connector.

## Step 5

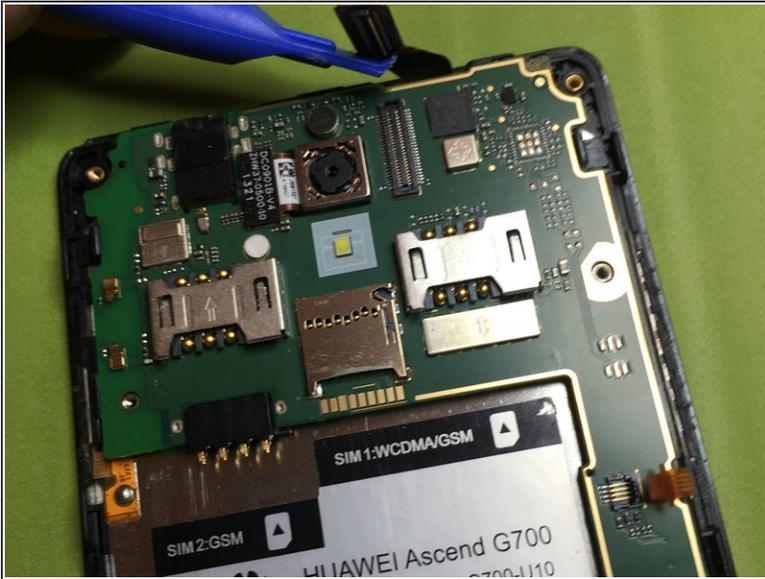

- Unplug the display connector.
- Unplug the camera connector.

## Step 6

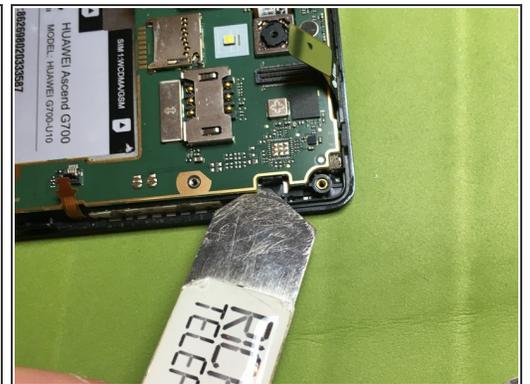

- Unplug the motherboard.

## Step 7



- Remove the camera with a heat source because it's glued to the bottom.
- Remove the motherboard from the main body of the phone.
- Remove the power button using a heat source.
- Remove the volume key using a heat source.

## Step 8



- Remove the speaker cover.
- Using a heat source, delicately remove the daughterboard.

## Step 9



- Remove the speaker using a heat source.
- Remove the technical adhesive strips using a heat source.

To reassemble the device, follow this instructions in reverse order.