



HP 550 Notebook RAM memory replacement

Follow this guide to replace the RAM

Written By: Smilzo



INTRODUCTION

Follow this guide to replace the
RAM



TOOLS:


- [Cacciavite con testa a croce n. 2](#) (1)
-

Step 1 — RAM memory



- Remove the battery.
- Unscrew the locking screw on the RAM memory access door

Step 2

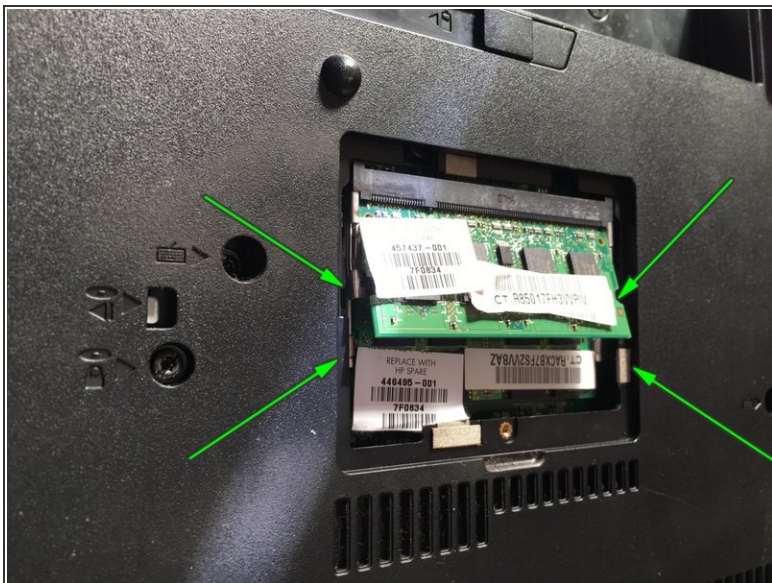

- Widen the metal hooks horizontally enough to allow the memory card to free itself from the housing by getting up
- Repeat the same action for the underlying ram memory card

To reassemble your device, follow these instructions in reverse order.