




# Lite-On LightScribe SHM-165H6S Faceplate/Eject button Replacement

Replacing the faceplate of the drive.

Written By: aaa

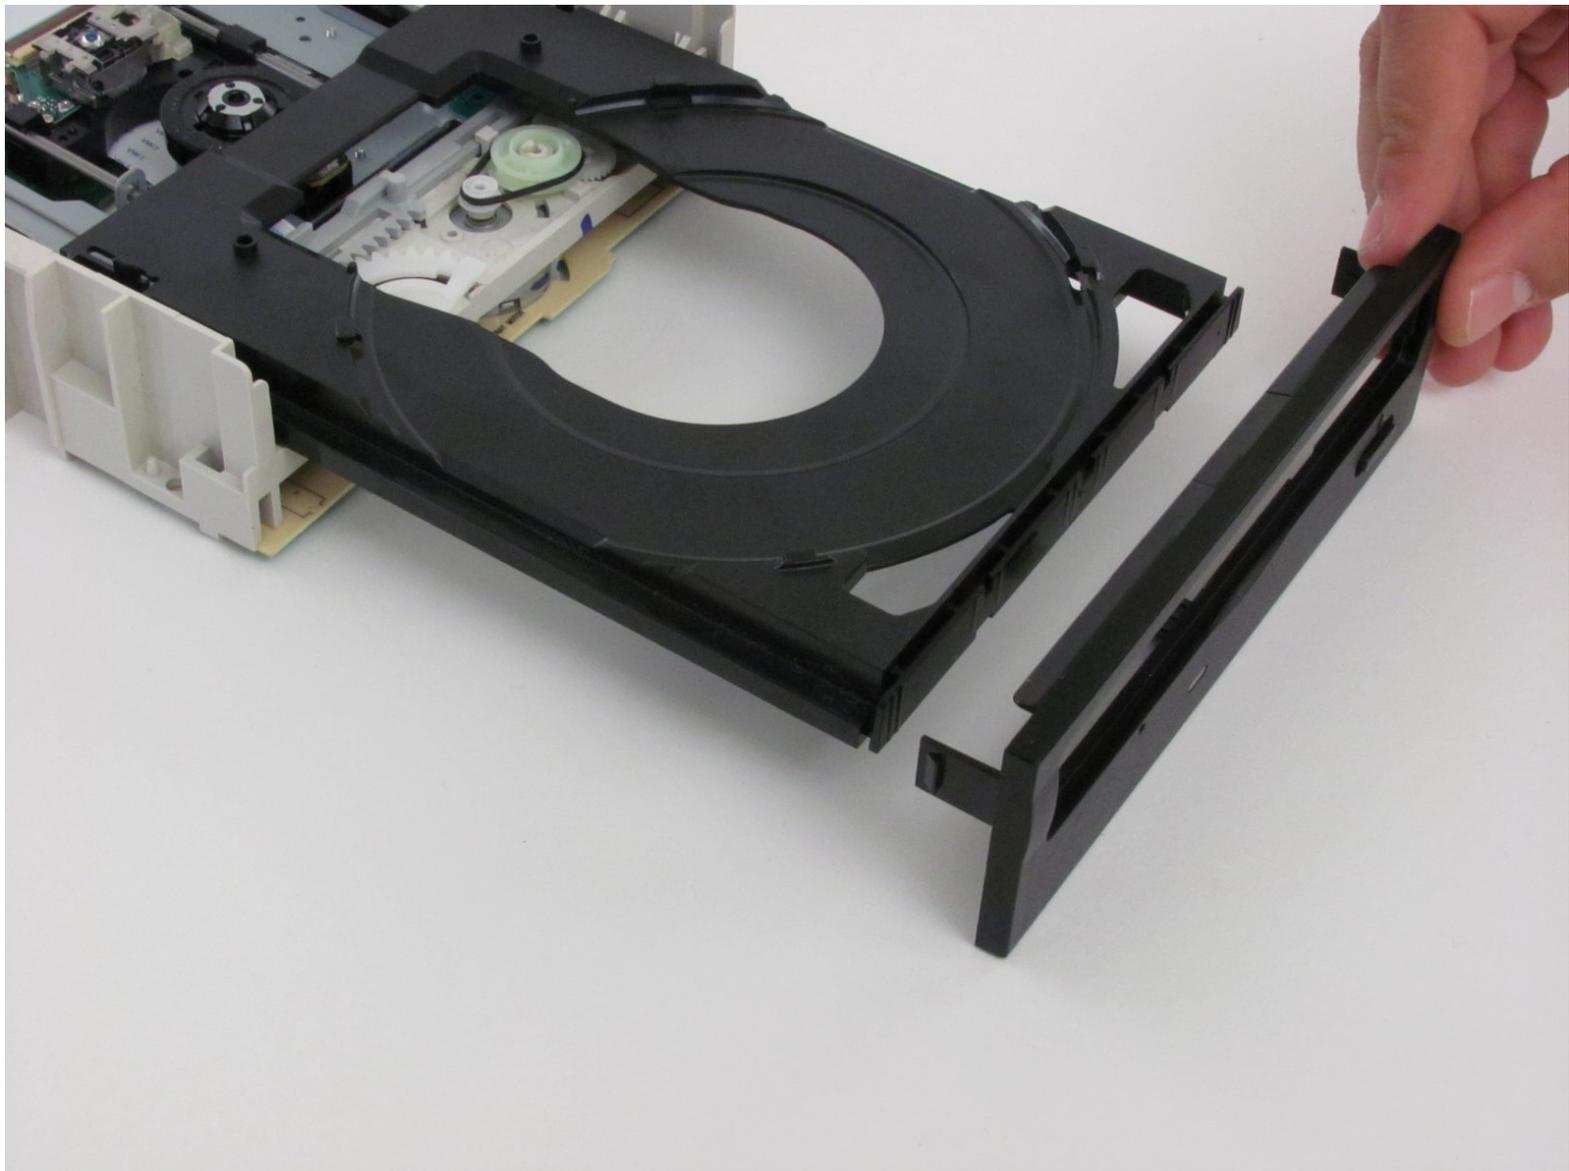

---

## INTRODUCTION

If the faceplate has become broken or cracked, you may want to replace it.

---

### TOOLS:



- [Paper Clip](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Faceplate/Eject button



- Insert an open paper clip into small hole on left side of faceplate.
- The tray should click open, use your hands to gently extend it fully.

## Step 2

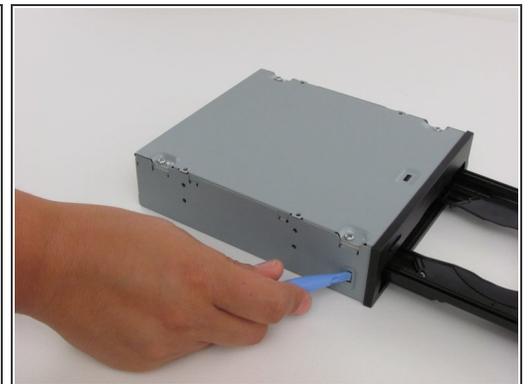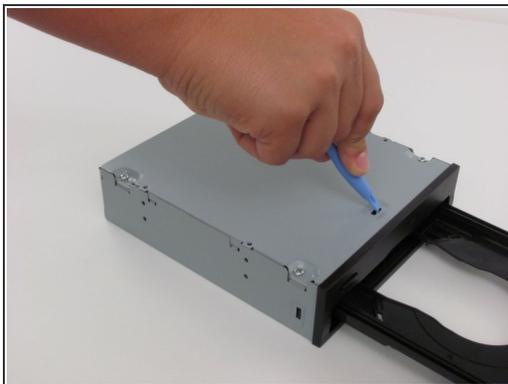



- Push in black tabs on left, right and bottom of outer chassis to unhook faceplate.

### Step 3




- Pull face plate away from main chassis.

### Step 4

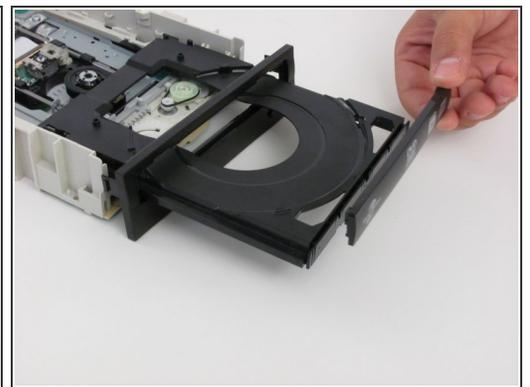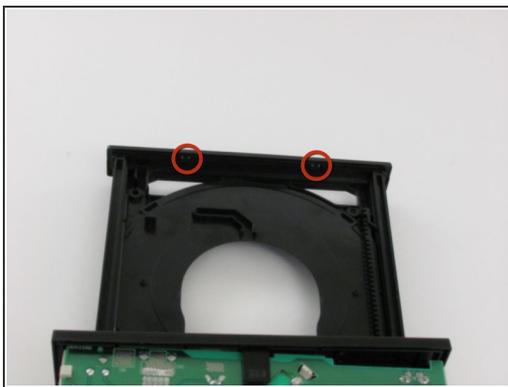

- Locate the two tabs on the underside of the tray cover.
- Pry the tabs loose and remove cover.

## Step 5

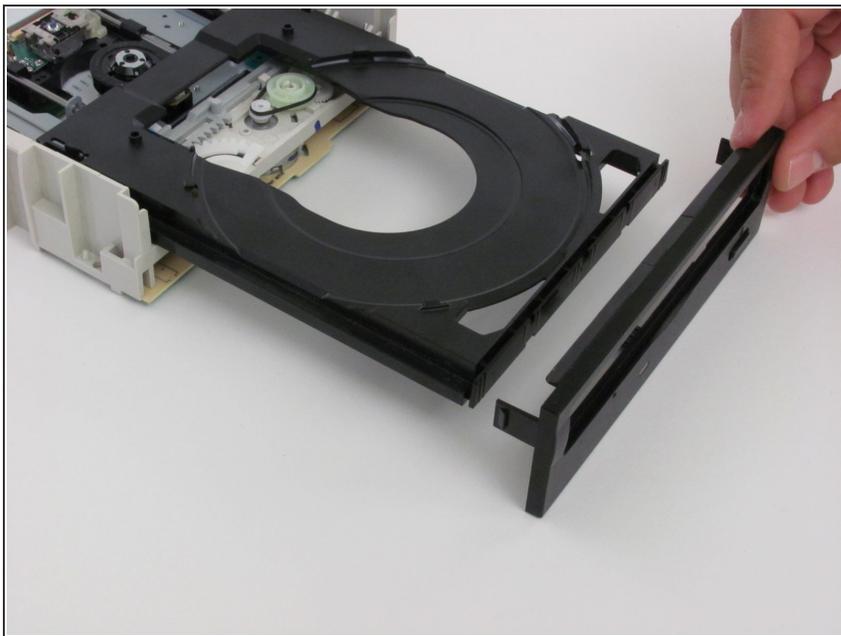

- Remove and replace faceplate.

To reassemble your device, follow these instructions in reverse order.