



Nikon Coolpix L32 Batteries Replacement

Replace the batteries when the device will not turn on or the device is turning off suddenly.

Written By: Simon Munoz



INTRODUCTION

This guide will show you how to replace dead batteries on a Nikon Coolpix L32 without any tools. There are no potential hazards associated with this guide.

Step 1 — Batteries



- Slide the lock button on the battery compartment away from you while sliding the battery compartment door to the right to open the battery compartment door.

Step 2



- Take out dead batteries and replace them with new batteries

To reassemble your device, follow these instructions in reverse order.