



# Samsung Instinct Front Case Replacement

This guide will show you how to replace the front casing.

Written By: Jacob Michener





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Apply pressure to the back cover and slide it forward towards the camera.
- Lift the back cover off the phone.

## Step 2



- Holding the phone firmly, use the notches to grip and lift up the battery.




## Step 3 — Back Case



- Remove the four 4.45mm screws at the corners of the phone.

## Step 4

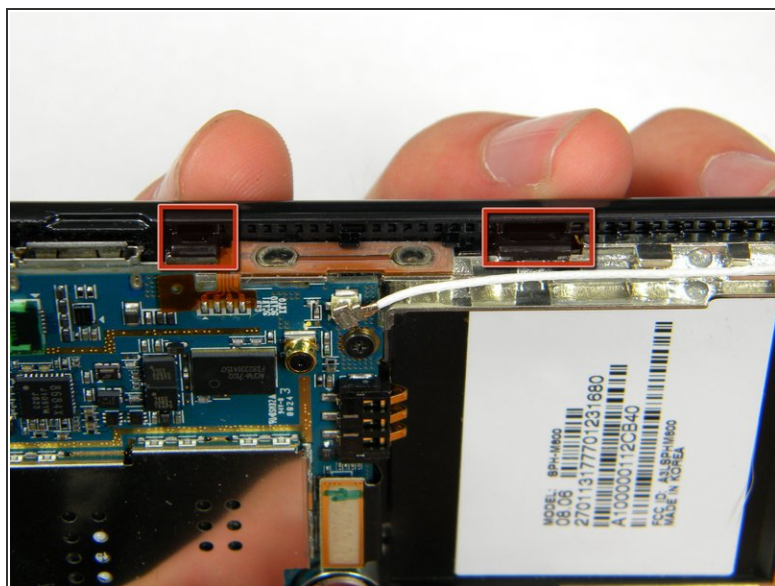

- Use the plastic opening tool to unhook the locks around the edges of the phone.
- ⓘ Do not worry about the inner components of the phone; they are not connected to this case.

## Step 5



- Lift the casing off of the phone.

## Step 6 — Antenna



- With the screws removed, locate the antenna.




## Step 7



- Using a Phillips head screwdriver, remove the 4.50mm screw holding the antenna in place.

## Step 8

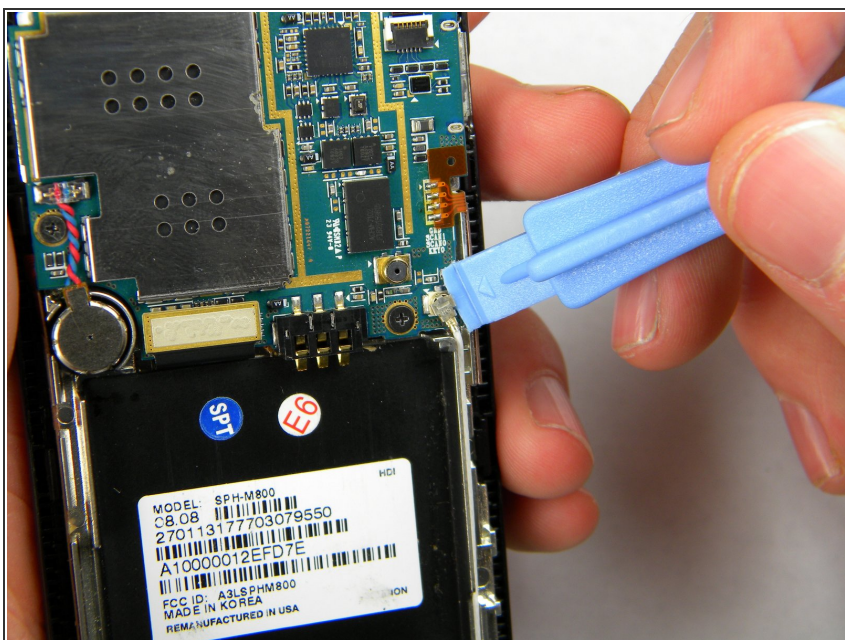

- Using the plastic opener tool, squeeze gently on the antenna cable connector and lift to remove the connector from its position.

## Step 9



- Gently lift up on the antenna and remove it from the back of the device.

## Step 10 — Front Case



- Remove the two 3.50mm screws connecting the motherboard to the case.




## Step 11



- Use the plastic opener tool to detach the three ribbons on the motherboard.



## Step 12

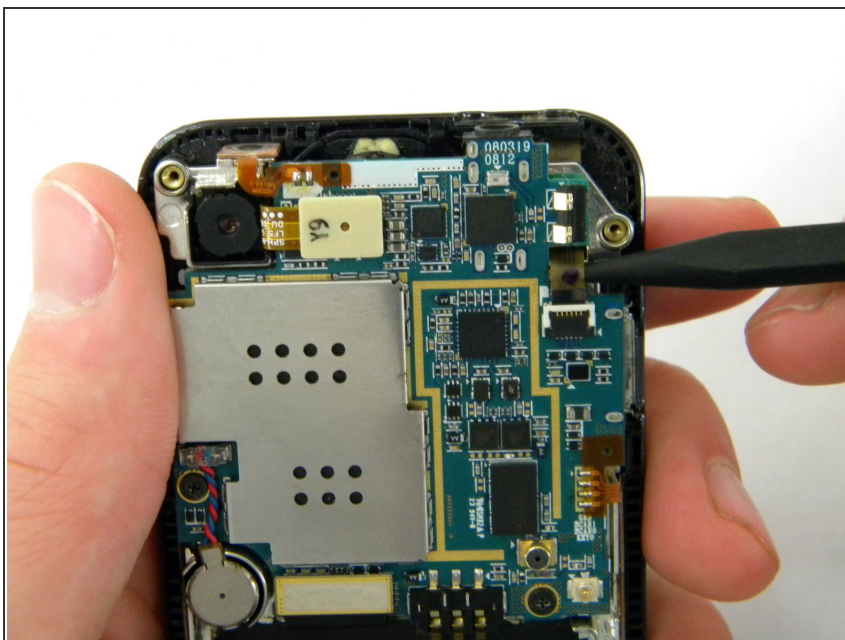

- Lift out the top right ribbon from its slot on the motherboard.



## Step 13

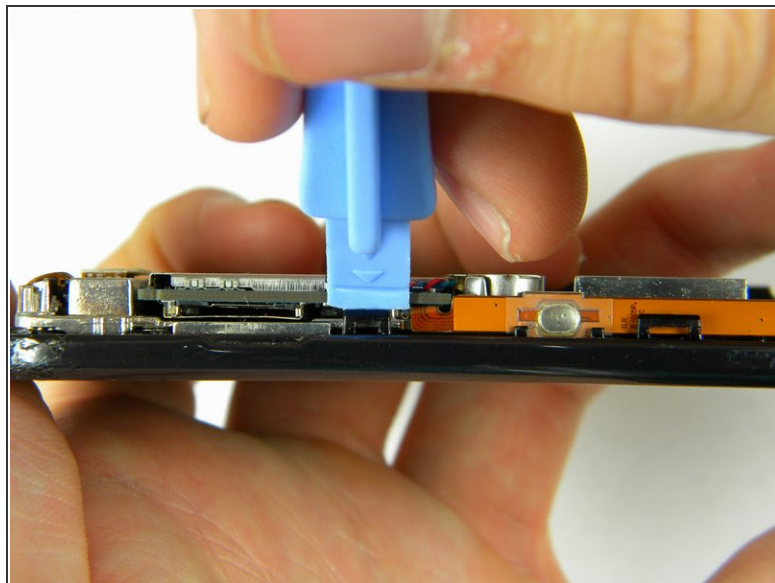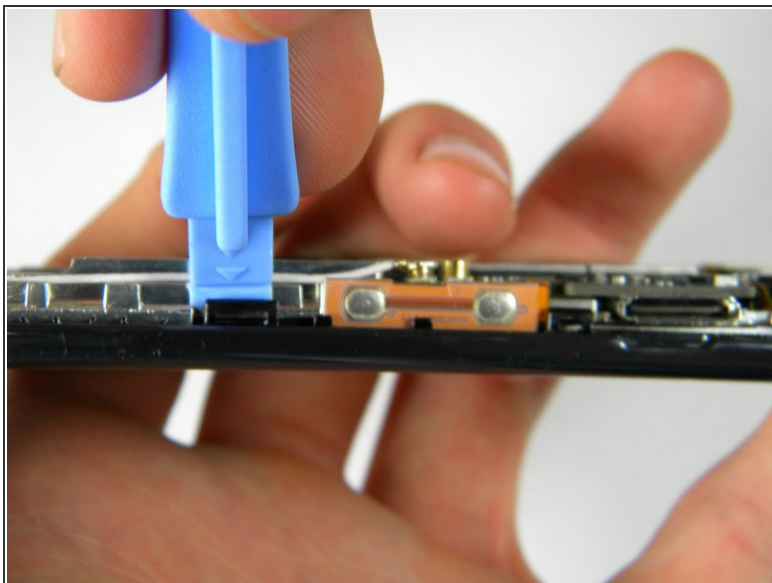

- Use the plastic opener tool to unhinge the the locks on the side of the motherboard connecting it to the front casing.

## Step 14



- Lift the motherboard away from the front casing.

## Step 15



- After removing lifting up on the motherboard, the front casing and center frame should be separated as shown.

To reassemble your device, follow these instructions in reverse order.