


# Nokia N70 Speaker Replacement


Written By: Justin

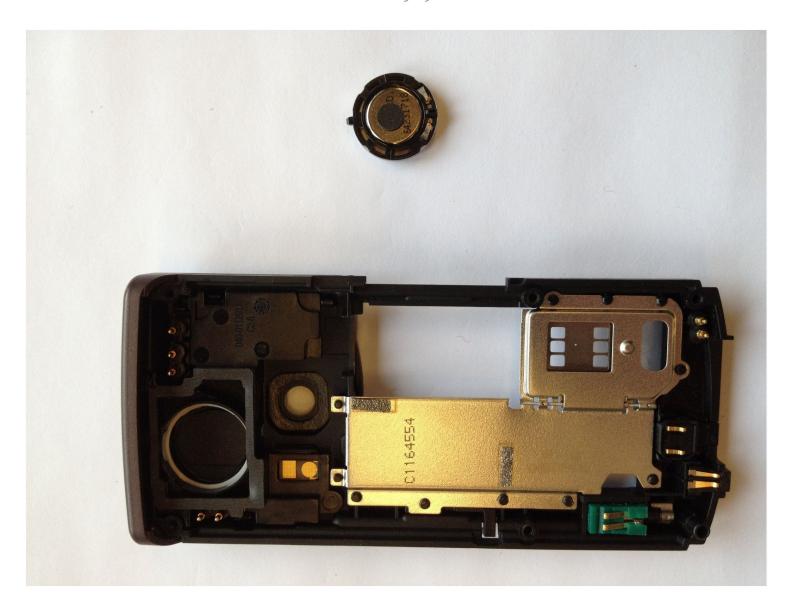

#### TOOLS:

iFixit Opening Tool (1) T6 Torx Screwdriver (1)

#### Step 1 — Battery

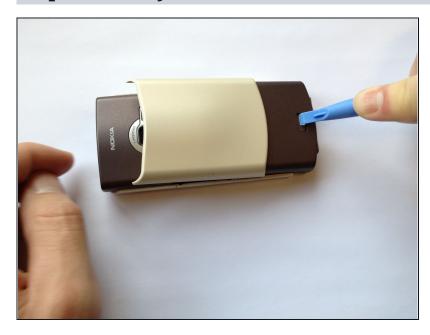

- Orient the phone as shown.
- Press the button with the plastic opening tool and slide the back case downward relative to the phone.

#### Step 2




 Remove the battery cover by lifting it away from the phone.

#### Step 3



- Insert the plastic opening tool into the marked space.
- Lift up the side of the battery closest to the bottom edge of the phone using the plastic opening tool.

### Step 4

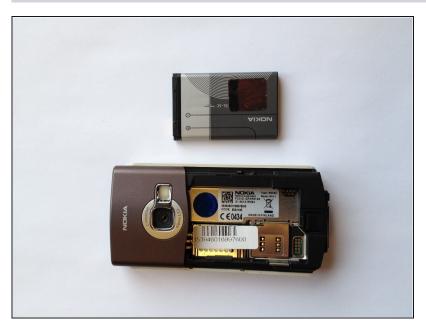

• Remove the battery from the phone.

#### Step 5 — Keypad







- Insert the plastic opening tool in the marked areas in between the front and back covers.
- Pry each corner with the plastic opening tool until the front case completely detaches.

#### Step 6








- Orient the phone so that the keypad is facing you.
- Remove the keypad by lifting it away from the phone.

#### Step 7 — Speaker

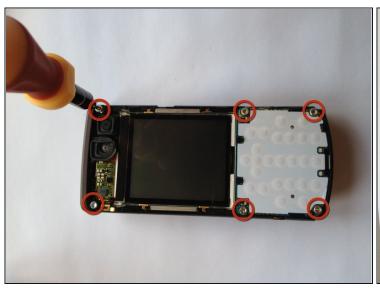



Use the T6 Torx screwdriver to remove the six 15 mm Torx screws.

#### Step 8








- Lift the bottom edge of the front panel at a 45 degree angle.
- Remove front panel by slowly pulling it away from the phone at a 45 degree angle.

## Step 9





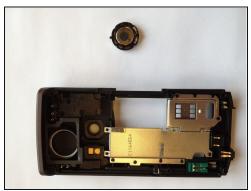

- Locate the speaker location located on the back panel of the phone.
- Using the <u>tweezers</u> place one side of tweezers in the rectangular slot where the speaker is located
- Slowly lift speaker away from the back panel.

To reassemble your device, follow these instructions in reverse order.