



Canon PowerShot SD400 LCD Replacement

This guide will provide you with step-by-step...

Written By: Yi Huang Ke



INTRODUCTION

This guide will provide you with step-by-step instructions on how to replace a faulty LCD screen for a Canon PowerShot SD400. The LCD, or liquid crystal display, is a flat monitor that displays images. The LCD may need to be replaced if it has cracks, discolored pixels, spots, blobs, flickering, or if there's no image signal. Before you begin, ensure that the camera is powered off.

TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — LCD




- Locate the 6 screws that you must remove to open the camera housing.
- There are 2 screws on the bottom and 2 screws on each side

Step 2




- Using the screwdriver, carefully remove the exterior screws and set them aside to avoid misplacing them.

Step 3

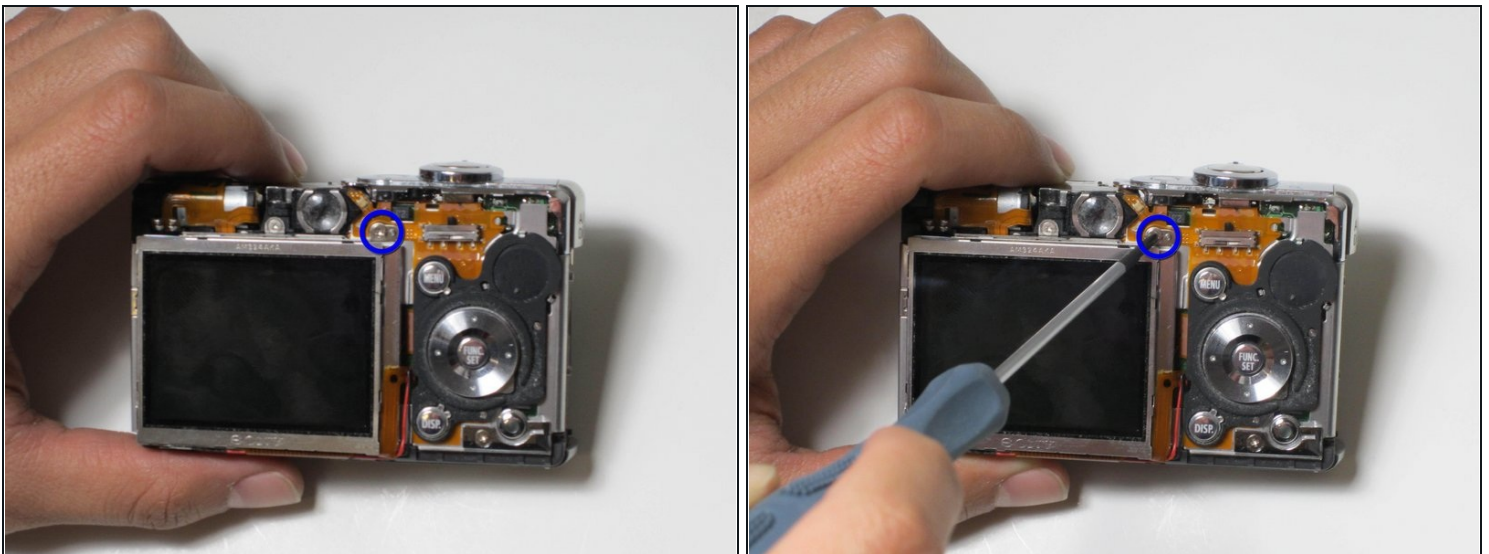

- Locate the interior screw to the top right of the screen.
- Remove the screw using the screwdriver.

Step 4

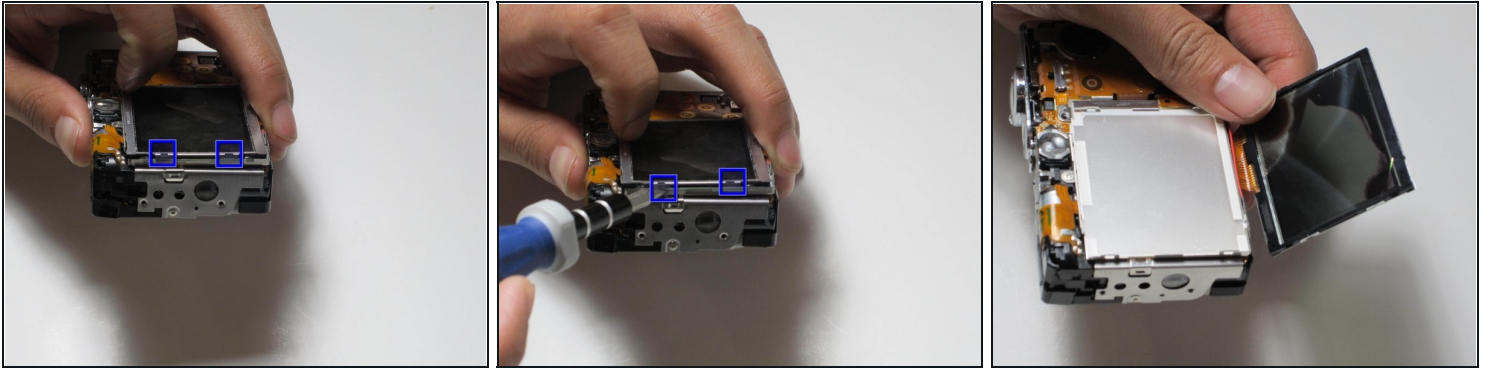

- Insert the flat-head screwdriver under the LCD screen into the two clips.
- Lift the LCD screen.

⚠ Potential for device damage Lift the screen gently and be careful not to rip the screen off.

To reassemble your device, follow these instructions in reverse order.