



HP Pavilion 17-f004dx CD Drive Replacement

This guide will show you how to replace your device's CD drive, also known as an optical drive.

Written By: Allan Soria



INTRODUCTION


Use this guide to remove and replace your CD drive. It is also a prerequisite to removing your [front panel](#).



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery

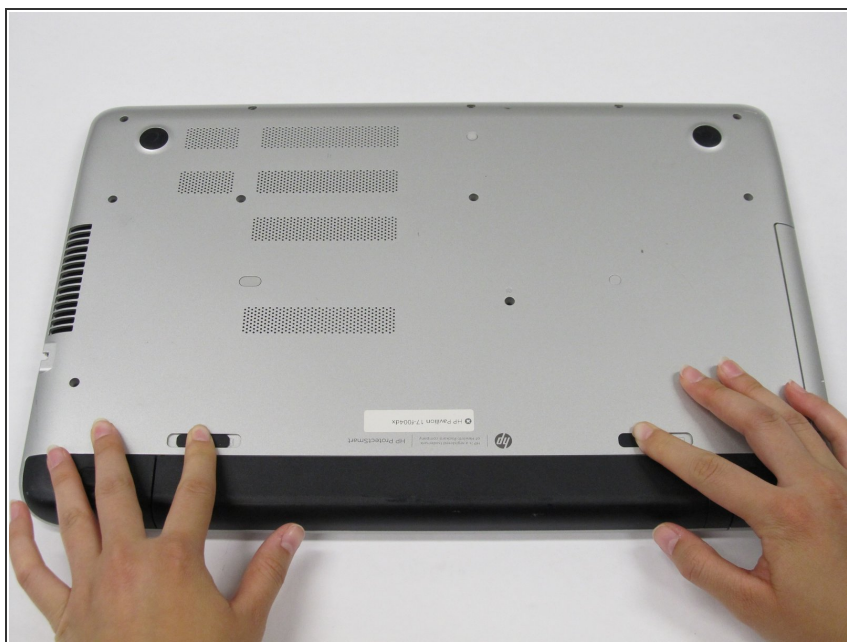

- ⚠ Before you remove the battery, make sure the laptop is powered off.
- Slide the black battery latches inward to remove the battery.

Step 2

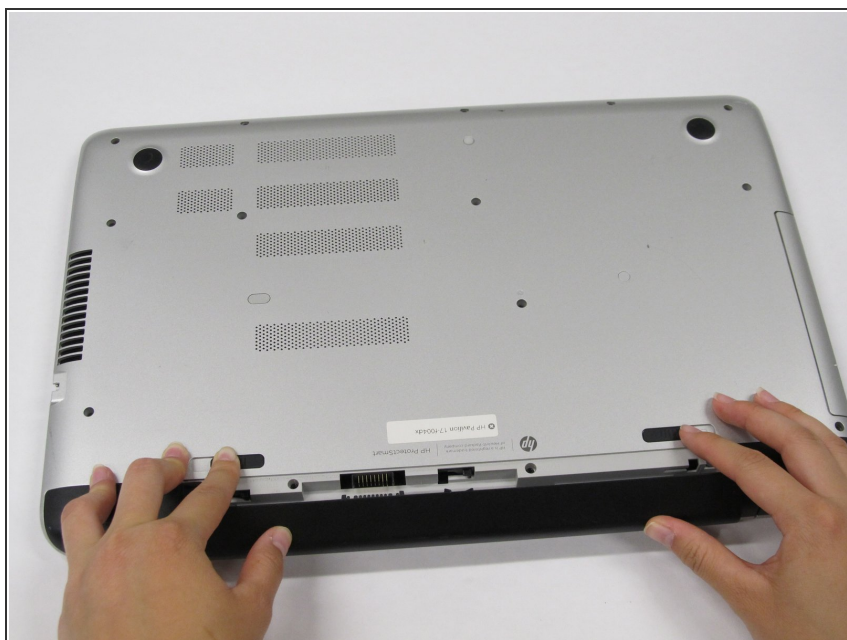



- Pull the battery out towards you while your fingers are still holding the latches in place.

Step 3 — CD Drive



- Remove one 7 mm screw with a Phillips #1 screwdriver.

Step 4

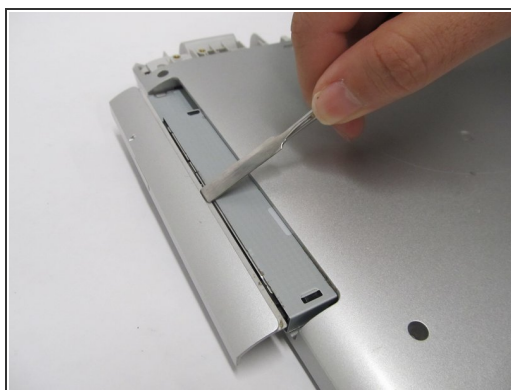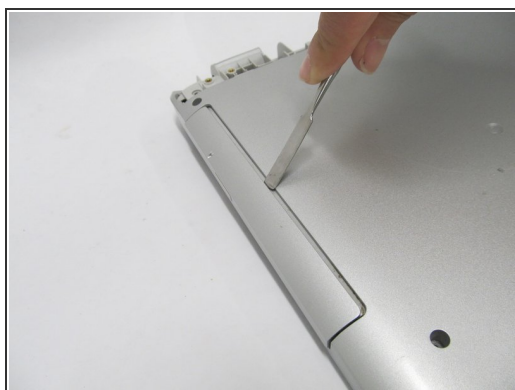

- Use a metal spudger to push the CD drive out of its slot for removal.

To reassemble your device, follow these instructions in reverse order.