



# Nikon Coolpix L32 Memory Card Replacement

Replacing the memory card from the Nikon Coolpix L32 to add storage.

Written By: Weston Phillips



## INTRODUCTION

The guide will show how to properly replace a memory card from the Nikon Coolpix L32 camera.

## Step 1 — Memory Card



- Slide the lock button on the battery compartment away from you while sliding the battery compartment door to the right to open the battery compartment door.

## Step 2



- Push in the memory card until you hear a “click” noise, remove the old one and install the new one
- When the new memory card is being installed make sure to hear a “click” noise once again

To reassemble your device, follow these instructions in reverse order.