



One Education Infinity:One Antenna

Prerequisite

This guide is a prerequisite demonstrating how to remove the antenna connection to the motherboard in your One Education Infinity:One laptop.

Written By: Taylor Bratsch



This document was generated on 2020-11-28 05:15:31 AM (MST).


INTRODUCTION

This guide is a prerequisite demonstrating how to disconnect the antenna connection to the motherboard in the One Education Infinity:One laptop.

TOOLS:


- [Jimmy](#) (1)
 - [Heavy-Duty Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery

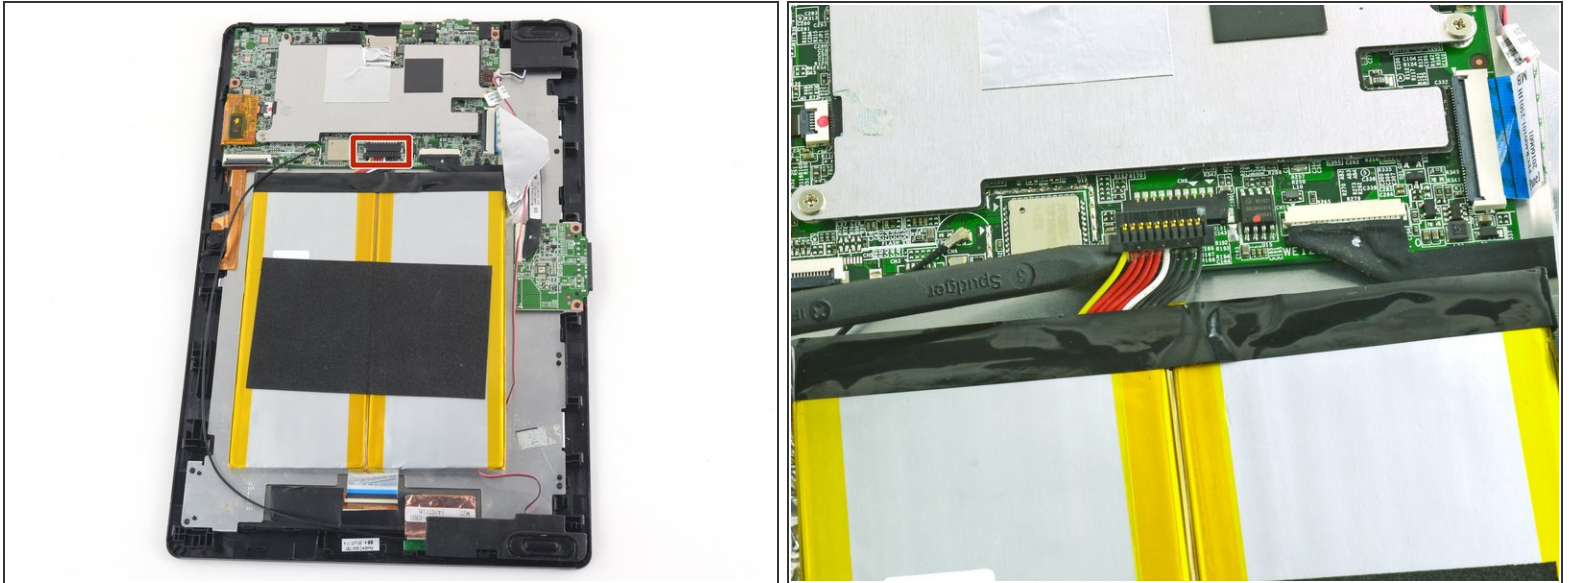


- Use a spudger to disconnect the black bundled cable connector from the motherboard.

Step 2

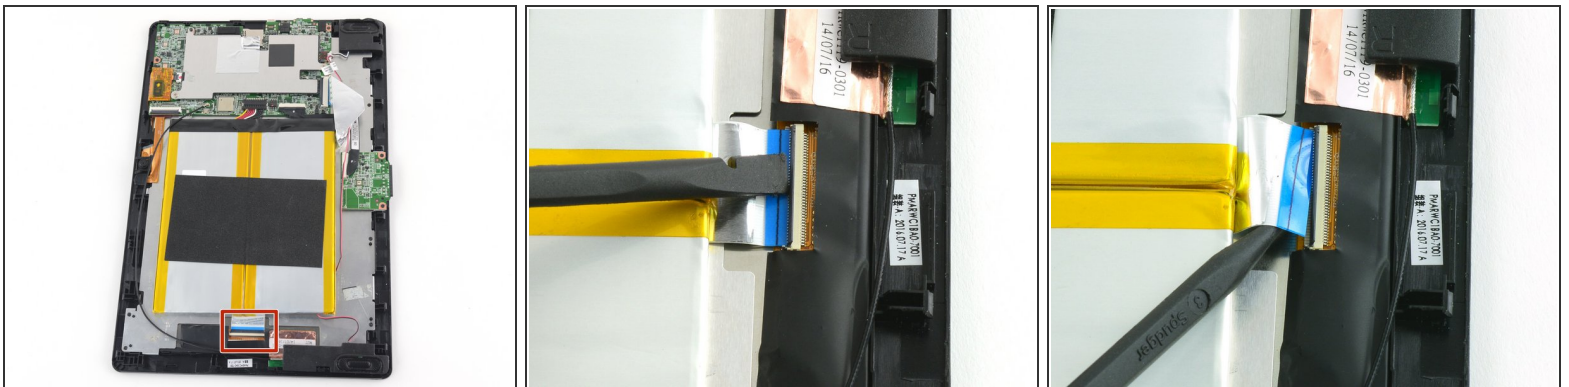


- Use a spudger to lift the black tab on top of the ZIF connector.
- Slide the ribbon cable out of the connector.

Step 3

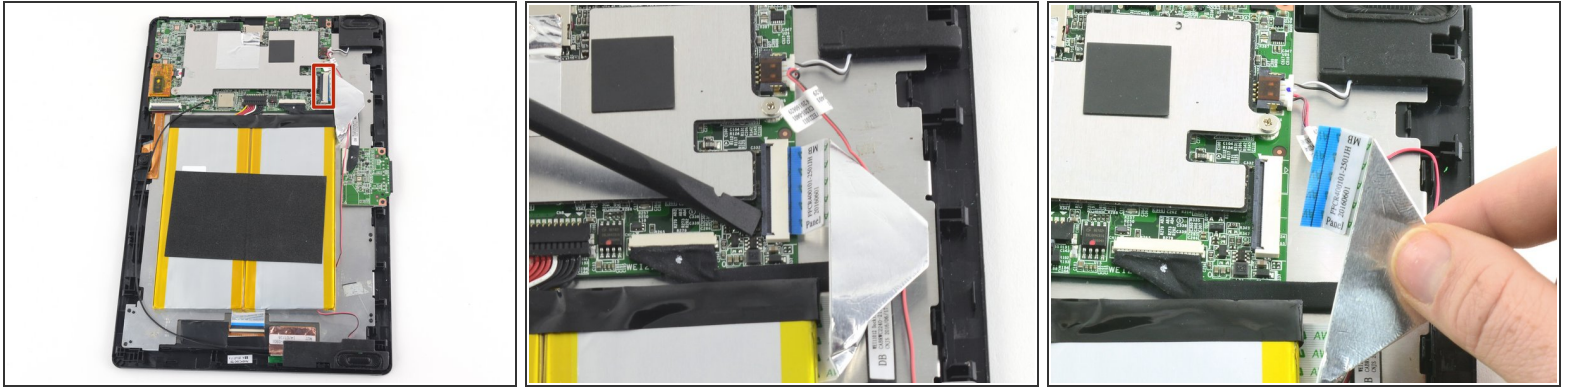



- Use a spudger to flip up the black retaining flap on the ZIF connector.
 - Pull the folded ribbon cable straight out of the connector.
- i** This ribbon cable must be disconnected before removing the battery because it is attached to the battery with adhesive.

Step 4

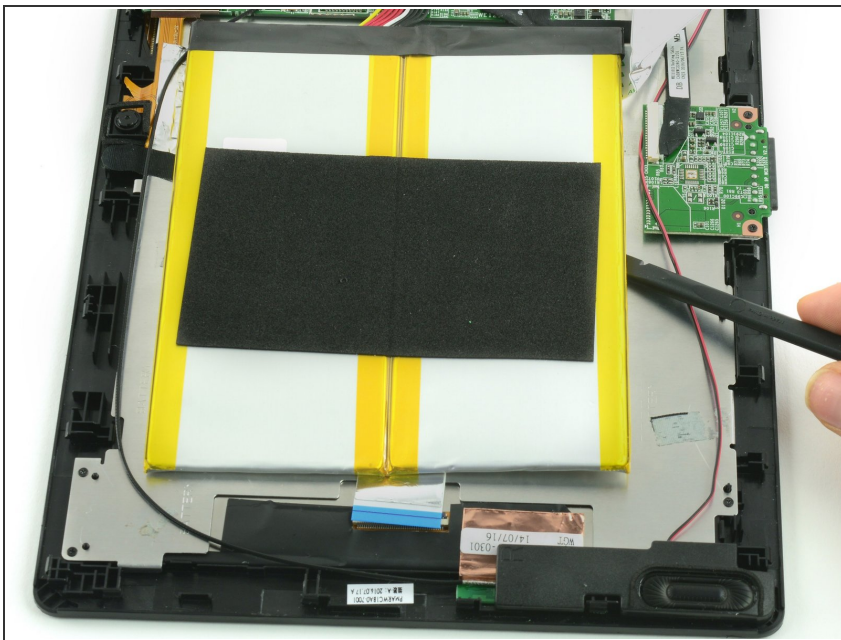

- Use a spudger to pry the battery away from the device.
- !** Always use ESD safe tools when working with delicate electrical components.

Step 5 — Antenna

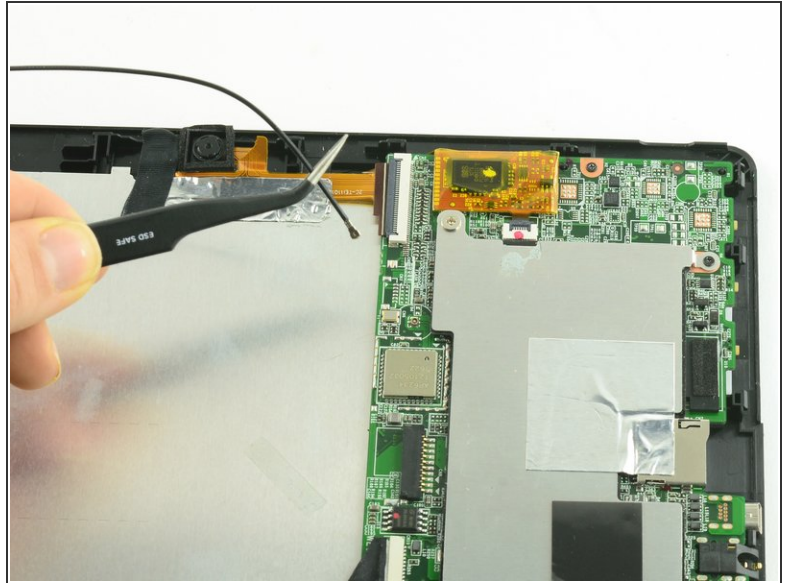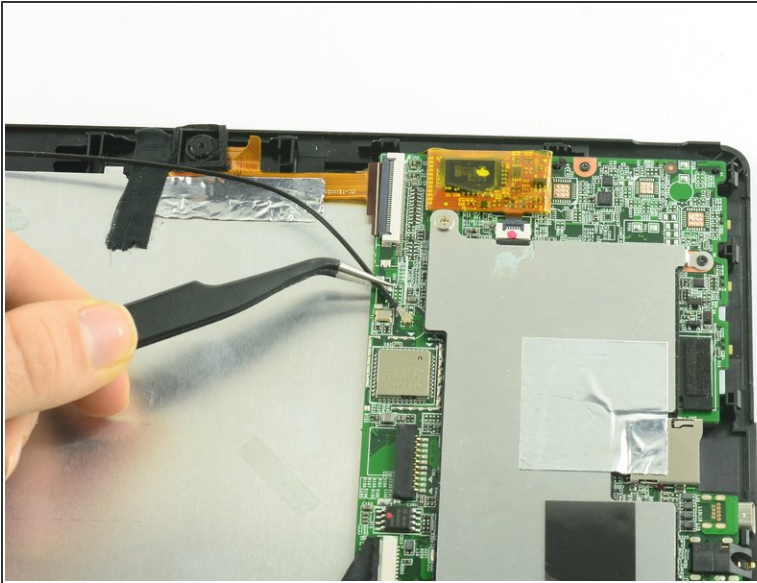

- Use ESD safe tweezers to disconnect the antenna from the motherboard.

To reassemble your device, follow these instructions in reverse order.