



# Visual Land Prestige Elite 7Q Digitizer / Front Screen Replacement

Complete the following guide to replace a...

Written By: Sabrina Scholten



# INTRODUCTION

Complete the following guide to replace a broken digitizer or front screen on your tablet.

## TOOLS:

[iFixit Opening Tool](#) (1)

[Metal Spudger Set](#) (1)

[Plastic Cards](#) (1)

[Phillips #000 Screwdriver](#) (1)

## Step 1 — Digitizer / Front Screen




- At the bottom of the tablet, remove the two 3.6mm screws with a Phillips #000 screwdriver.

## Step 2



- Wedge a plastic opening tool into the edges of the tablet to pry it open.



## Step 3

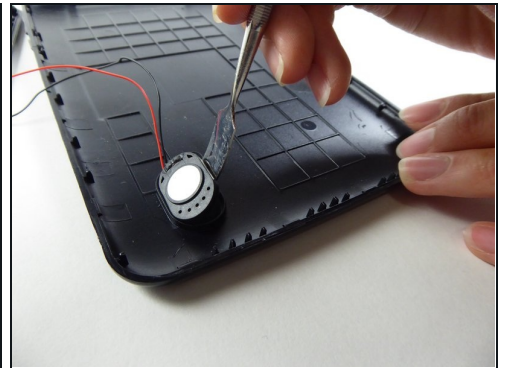

- Wedge a curved metal spudger under the speaker in order to remove it.
- ⓘ The speaker is held in place by an adhesive and can be difficult to remove.




## Step 4

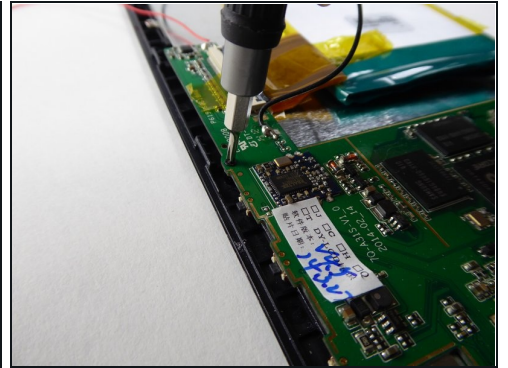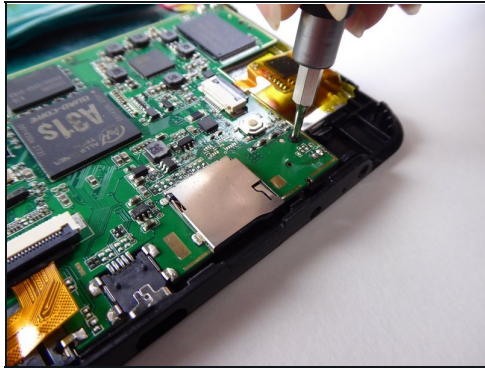



- Use a Phillips #000 screwdriver to remove the two 3.6mm screws.

## Step 5

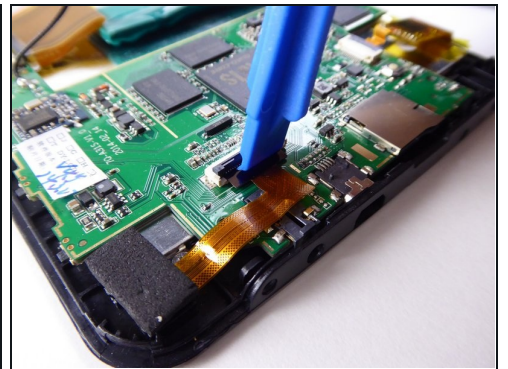


- Use a plastic opening tool to lift the black tab.

## Step 6

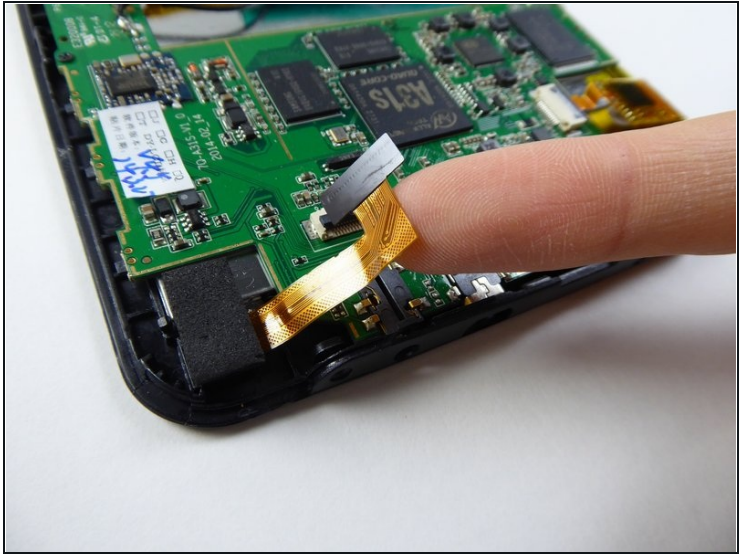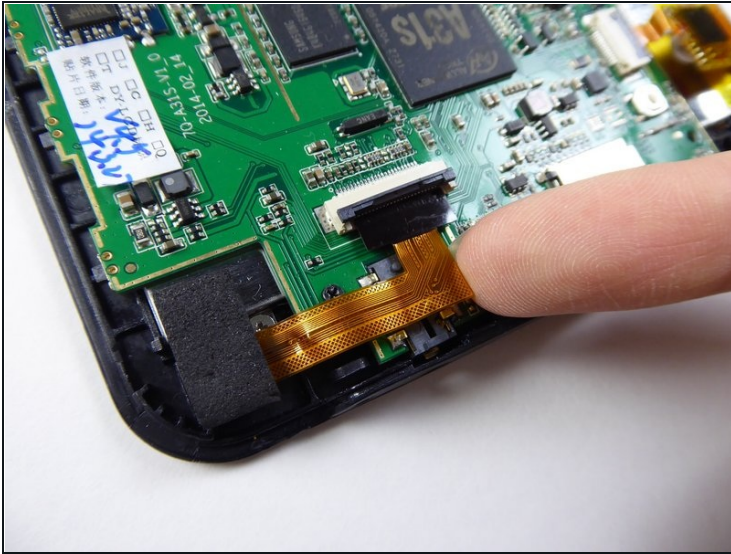

- Carefully lift and remove the ribbon cable from the black tab.

## Step 7

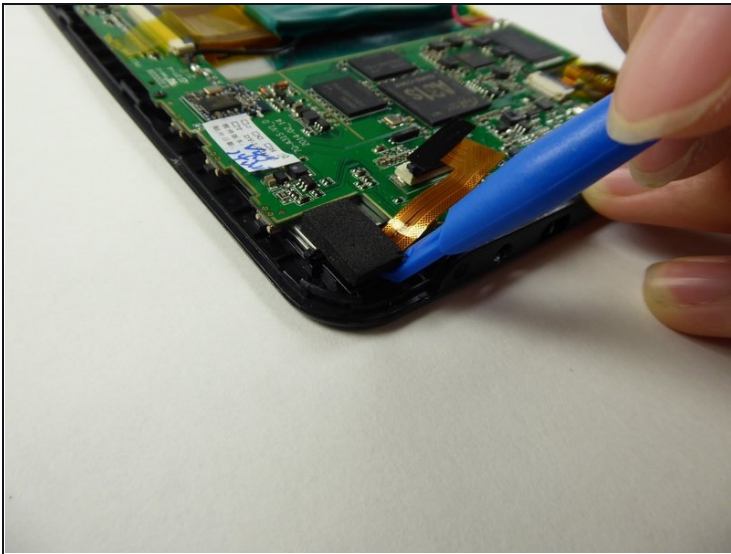

- Use a plastic opening tool to remove the camera.





## Step 8



- Use a Phillips #000 screwdriver to remove the 3.6mm screw.

## Step 9

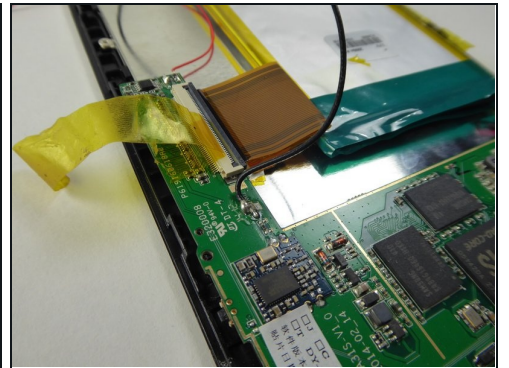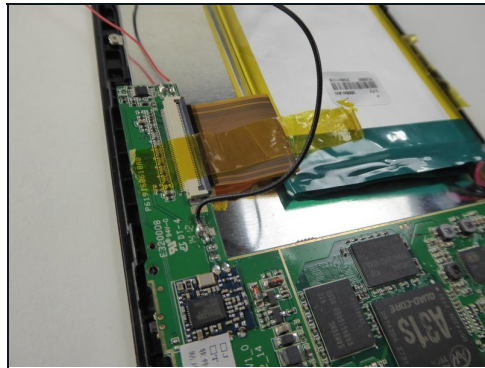




- Lift the tape holding down the battery.

## Step 10



- Wedge a [plastic card](#) underneath the battery to remove it.


## Step 11

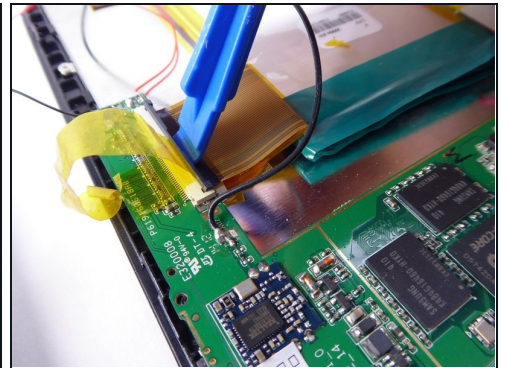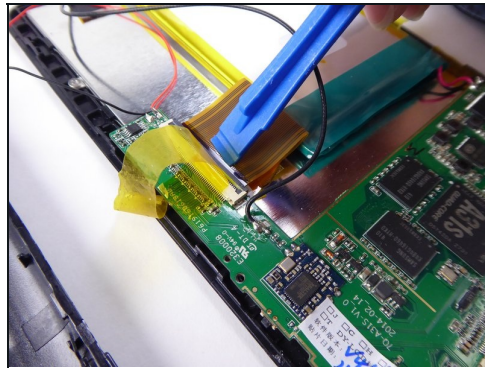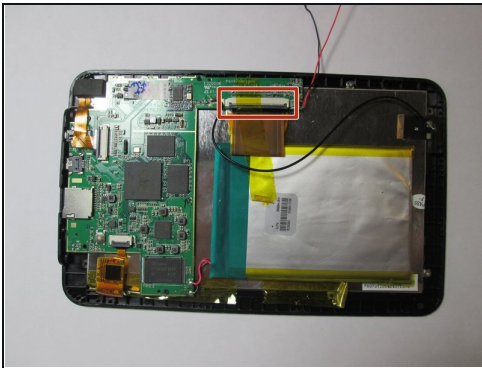

- Use a plastic opening tool to lift the black tab.




## Step 12

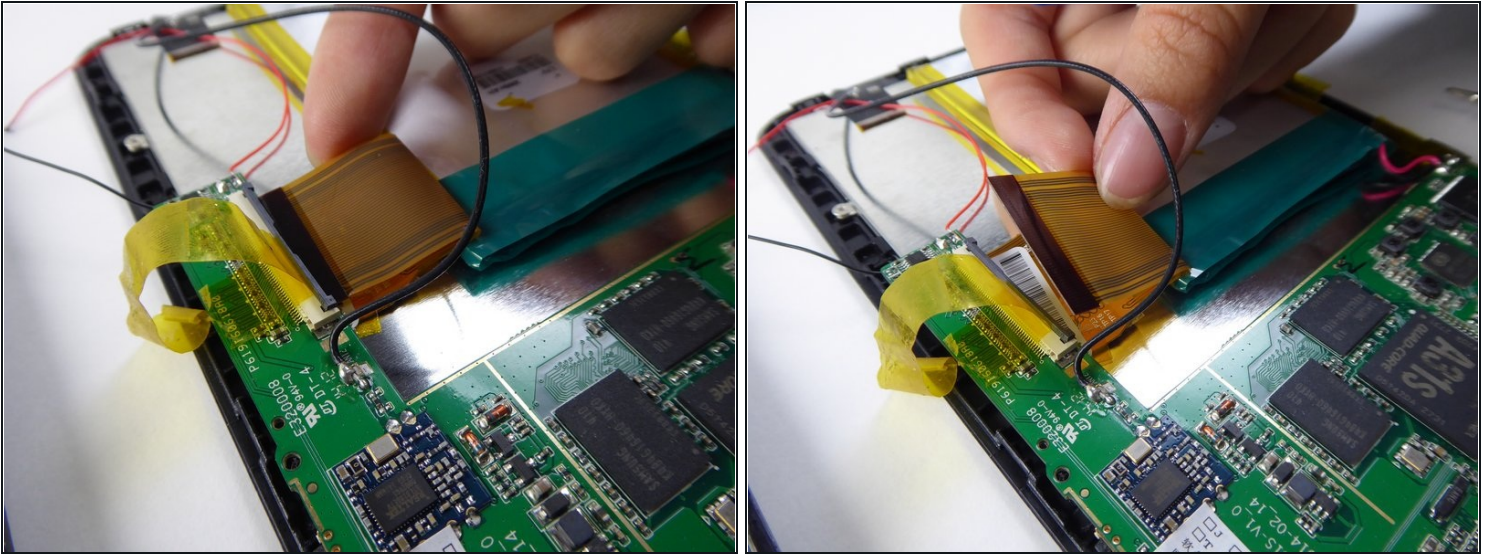

- Carefully lift and remove the ribbon cable from the black tab.

## Step 13

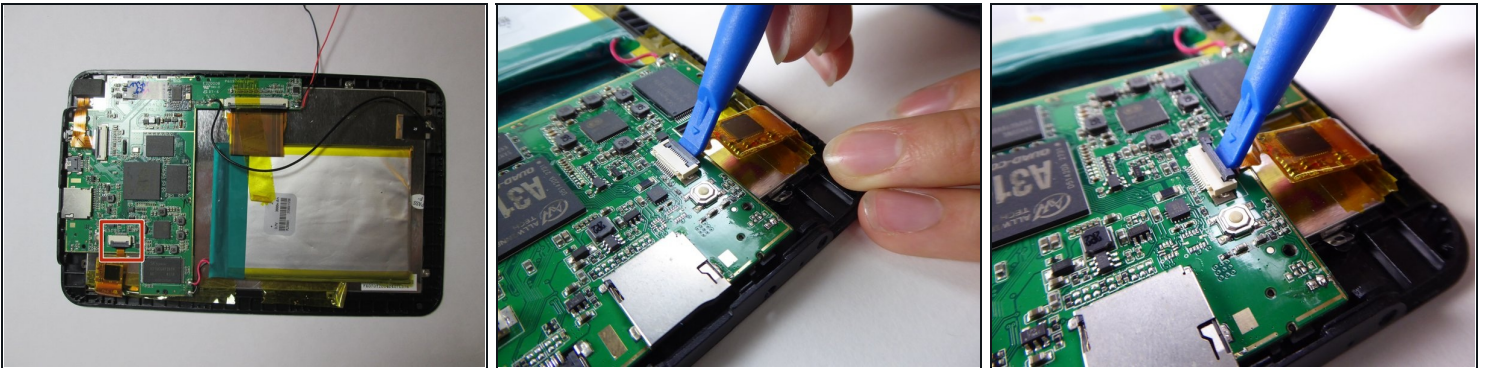

- Use a plastic opening tool to lift the black tab.




## Step 14



- Safely remove the battery and motherboard from the tablet.

## Step 15

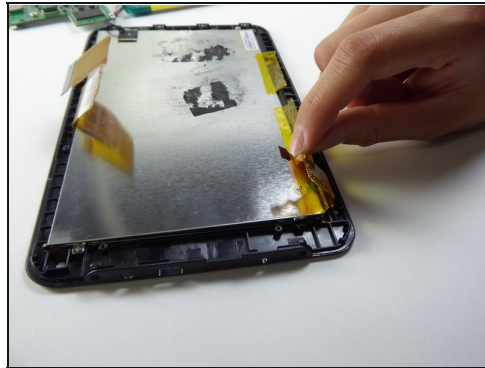




- Lift the tape on the sides.

## Step 16



- Use a Phillips #000 screwdriver to remove the three 2.5mm screws.

## Step 17

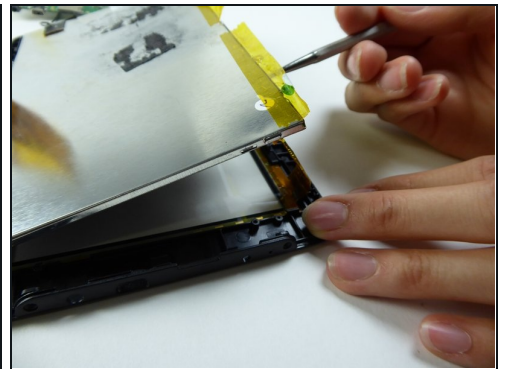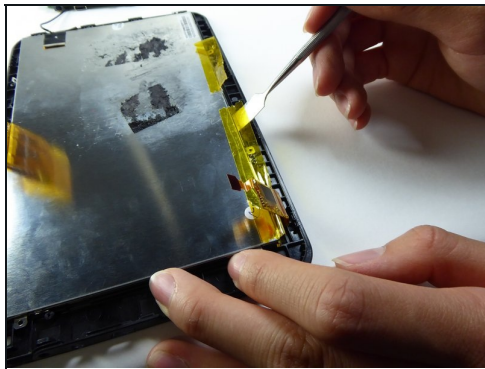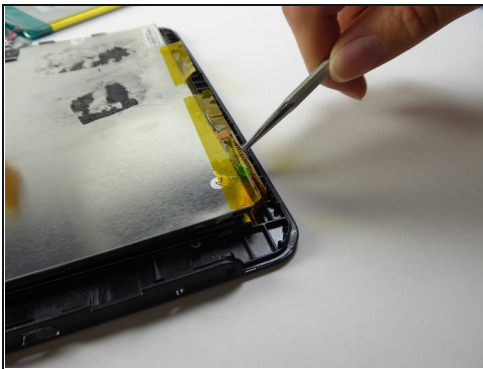

- Wedge a metal spudger underneath the LCD screen to remove it.



## Step 18



- Replace the front screen to replace the digitizer.

---

To reassemble your device, follow these instructions in reverse order.