



Insignia NS-B4111 Battery Replacement

The batteries will eventually run out of power and you will need to replace them for the device to continue working.

Written By: Ari



INTRODUCTION

This guide will teach you how to easily replace your batteries and keep your device running.

Step 1 — Battery



- Unplug and remove the power cord. Turn the boombox upside down.
- Grip the sides of the case and use your thumbs to pop open the battery cover.

Step 2



- Pry out the batteries with your fingers.

To reassemble your device, follow these instructions in reverse order. See this [manual](#) for battery placement.