



Samsung Galaxy View Kickstand Replacement

This guide will show you how to remove the kickstand off the back of the Samsung Galaxy View.

Written By: Jordan Thayer



INTRODUCTION

The removal of the kickstand does not require the device to be opened up. Removing the kickstand is an external replacement that will require the use of a spudger to open up latches. Removing the kickstand is a simple replacement that should require about 5 minutes to complete.



TOOLS:

- [Heavy-Duty Spudger](#) (1)
-

Step 1 — Kickstand



- Place the device on a hard flat surface with its screen facing downwards.
- Rotate the the kickstand so that the handle grip hole is up in the air and not touching the back of the tablet.

Step 2



- Stick the pointy end of the spudger into the circular opening of the leftmost metallic latch.
- With the spudger still inserted, pry the spudger to the right pushing the latch opening along with it.
- Once the latch is moved to the right, pull up on the left side of the kickstand, releasing it from the back of the tablet.
- Repeat the previous steps for the rightmost latch, and then lift the kickstand off the back of the tablet.

To reassemble your device, follow these instructions in reverse order.