



ASUS U52F-BBG6 Battery Replacement

This guide will show you how to replace the battery on your Asus U52F-BBG6 laptop.

 
Written By: Lindsey Baldwin



INTRODUCTION


The battery is made up of one large component on the back of the laptop. No tools were used in the process.

Step 1 — Battery

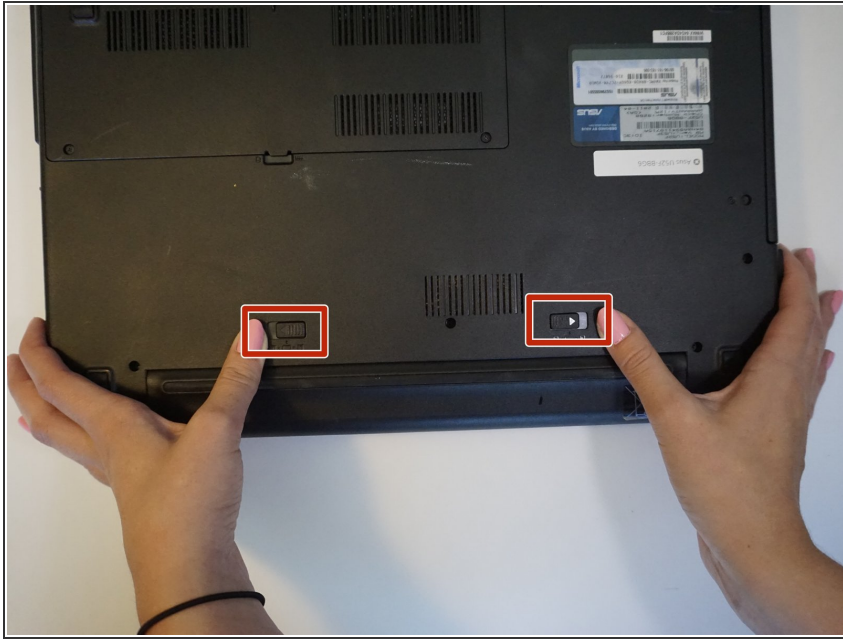

- Turn laptop over to the back. Then find the two latches.

 Step 2

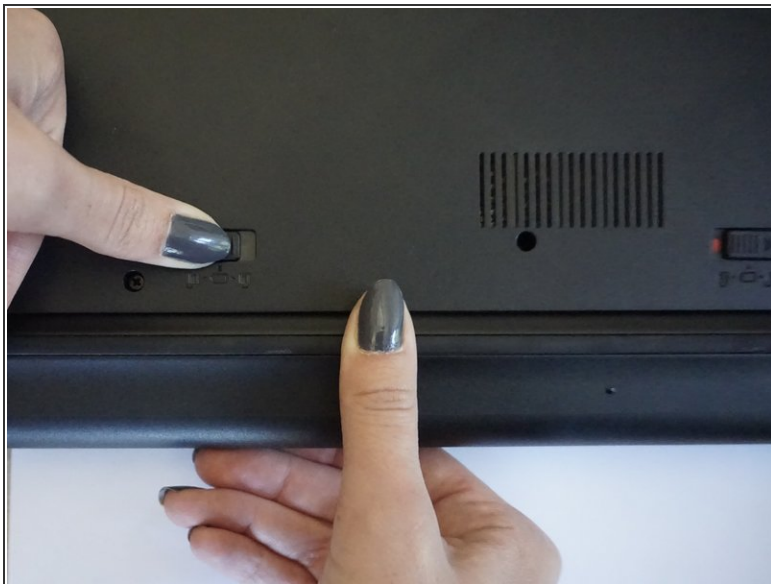

- Slide the right latch to unlock.
- Simultaneously slide the left latch outward while pulling the battery out.

To reassemble your device, follow these instructions in reverse order.