



HP eStation Zeen Speaker Replacement

Use this guide to replace the HP eStation Zeen's speakers.

Written By: Jack Clark



INTRODUCTION


After following the troubleshooting procedures and the device still has no sound it may be time to replace the speaker.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Speaker

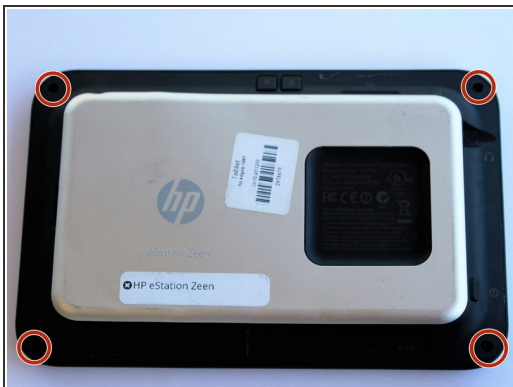


- Remove the rubber screw caps using a metal spudger.
- Remove the two 6mm screw using a Phillips #0 screwdriver.

Step 2



- Unclip each side by inserting the plastic opening tool and slide it along the edges.
- Remove the back panel by lifting the panel away from the device.


Step 3

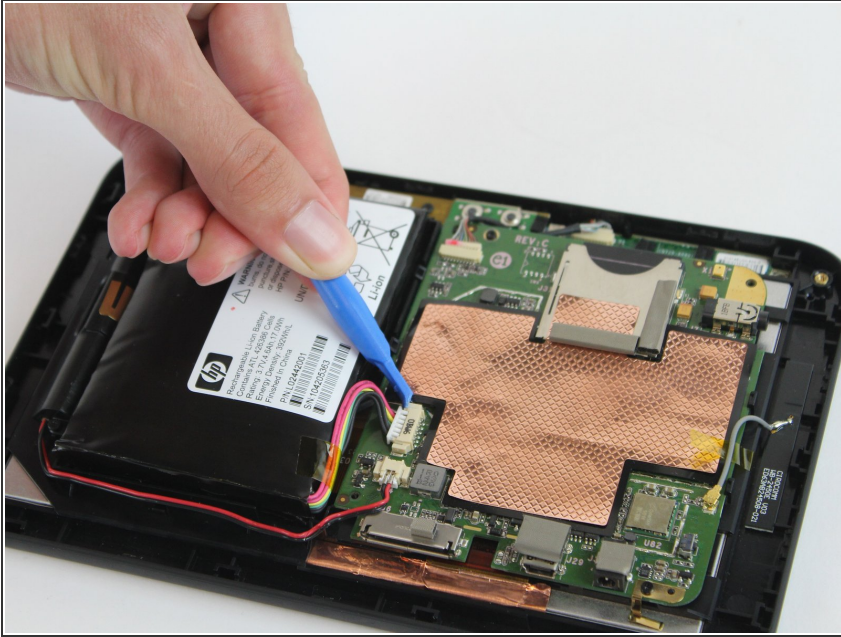

- Disconnect battery clip.

⚠ The clip is very fragile.


Step 4

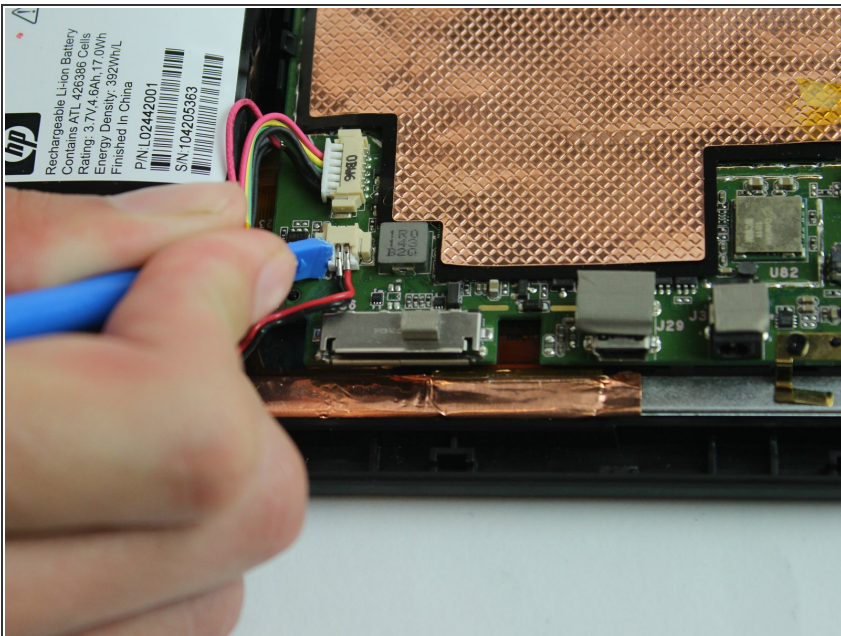

- Disconnect the speaker wires from the terminal using a plastic opening tool.

⚠ Be careful the plastic connector is fragile

Step 5

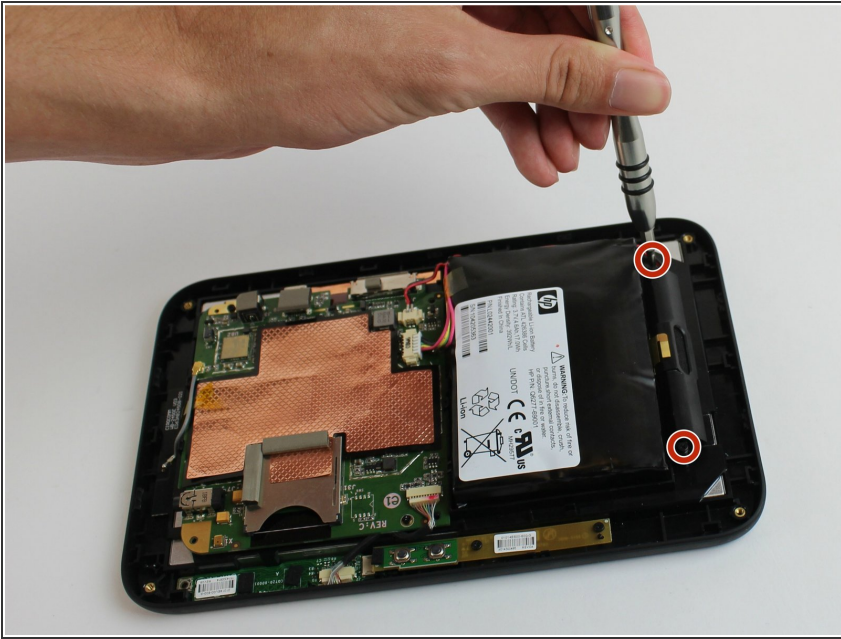

- Remove the two 6mm screws using a Phillips #0 screwdriver.

To reassemble your device, follow these instructions in reverse order.