


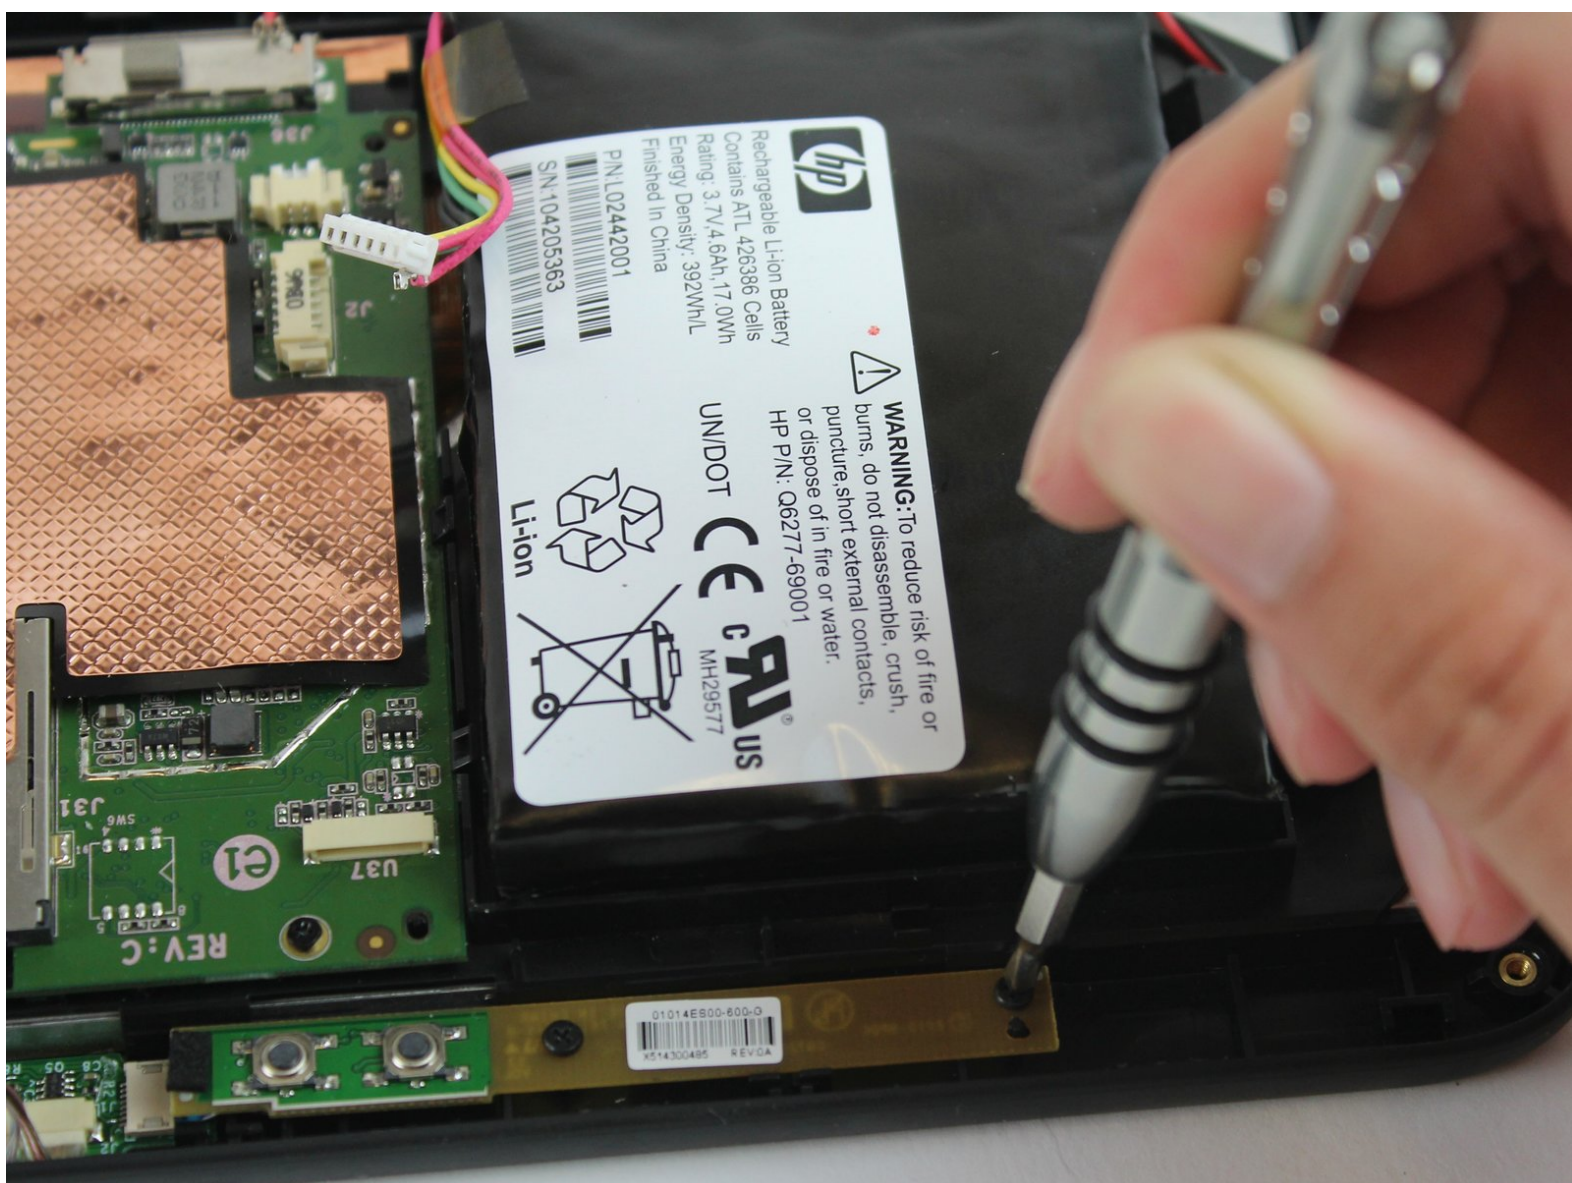

HP eStation Zeen Volume Buttons Replacement

Use this guide to replace the HP eStation Zeen's volume buttons.

Written By: dalton hale





INTRODUCTION

This guide demonstrates how to remove and replace the volume buttons of an HP eStation Zeen in order to preserve the function of the device.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Volume Buttons

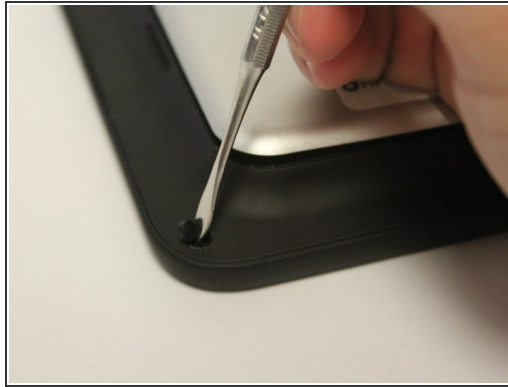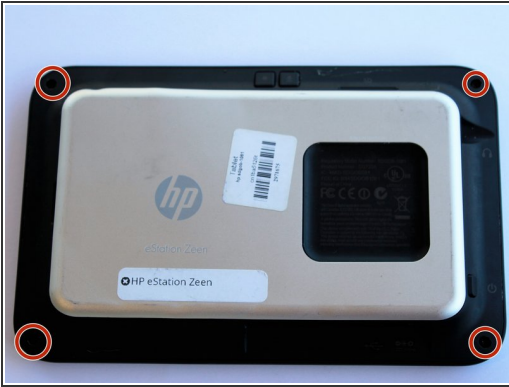

- Use a metal spudger to remove the four screw caps.
- Remove the four 6 mm screws using a Philips #0 screwdriver.

Step 2

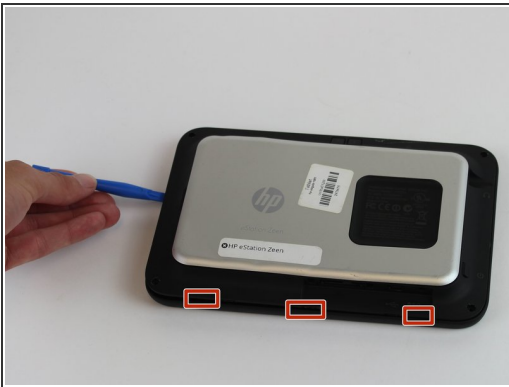


- Insert a plastic opening tool and slide it along the edge to open the back panel.
- Lift the back panel away from the device.

Step 3



- Disconnect the battery clip with a plastic opening tool.
- ⚠ Be gentle as the connector is fragile.

Step 4

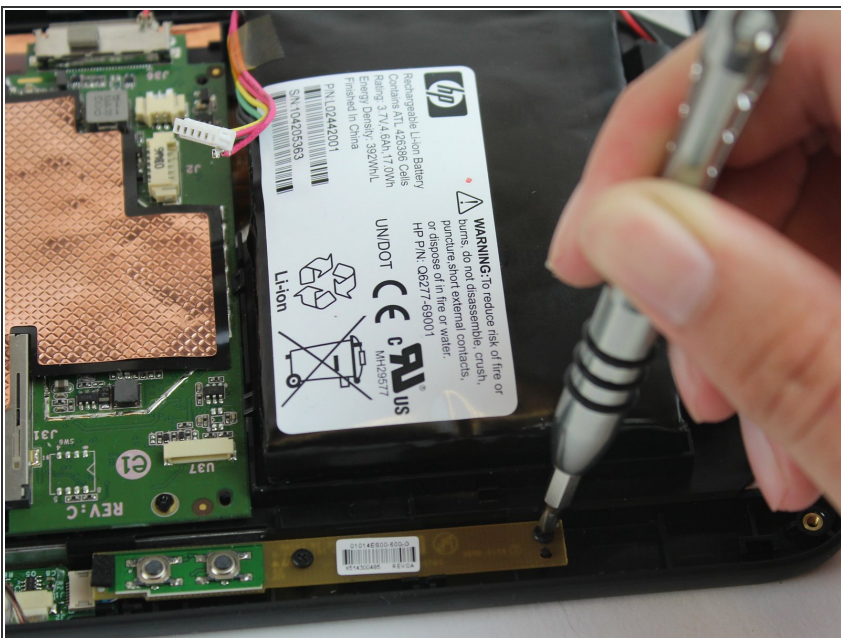

- Remove the two 6 mm screws using a Philips #0 screwdriver.

Step 5



- Pull the ribbon from the board.
- ⚠ Be gentle as the ribbon is fragile.

To reassemble your device, follow these instructions in reverse order.