



# Dell Inspiron 15R 5520 Keyboard Replacement

How to replace the keyboard on 5520

Written By: Joseph Simplicio



---

## INTRODUCTION

If some or all keys are not working, this replacement guide will help demonstrate how to replace keyboard.




### TOOLS:

- [Spudger](#) (1)
-


## Step 1 — Battery



 We are removing the battery to avoid the possibility of an electrical discharge when working with this system.


- Flip device on its back displaying the battery.

## Step 2

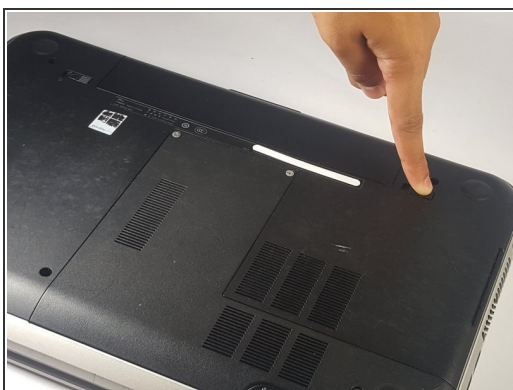




- Place a finger on both latches and push outwards.
- Grab by the lip and pull upwards to remove battery.

## Step 3 — Keyboard

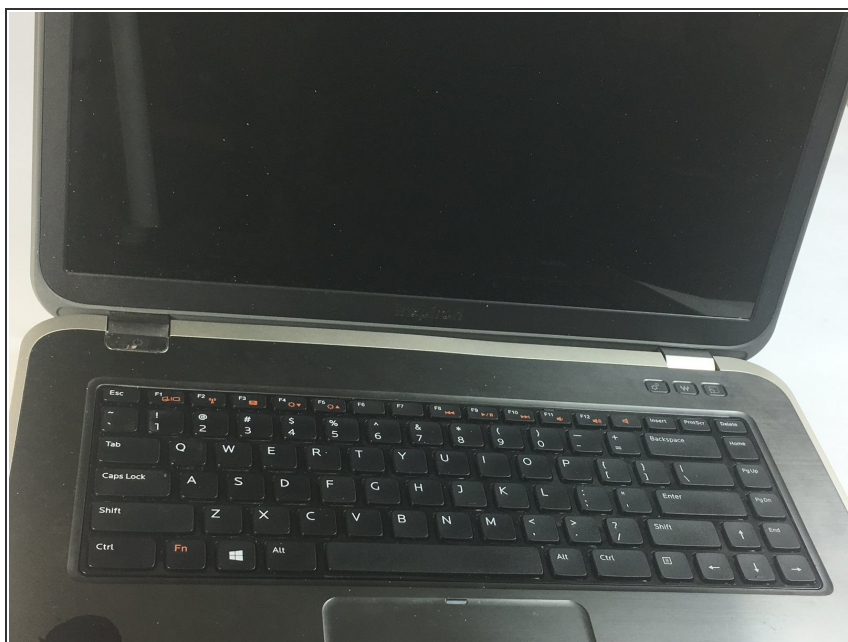


- Flip device and open.

## Step 4

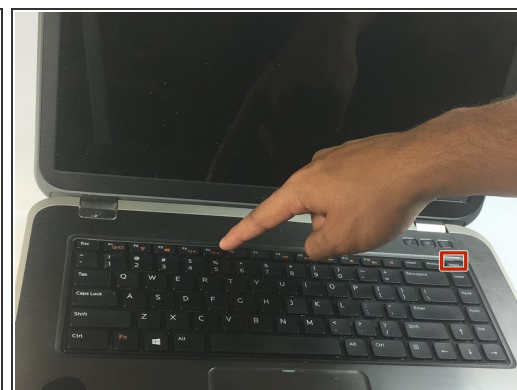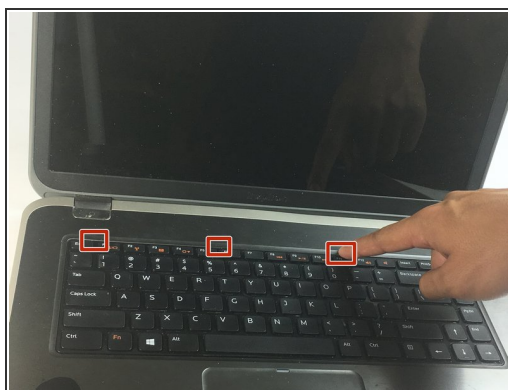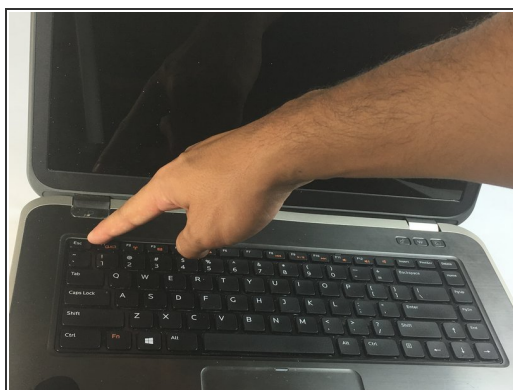

- Locate the keyboard lining (between the black and silver).
- Place your spudger between the keyboard lining behind the x icon and home keys and pull up.

## Step 5

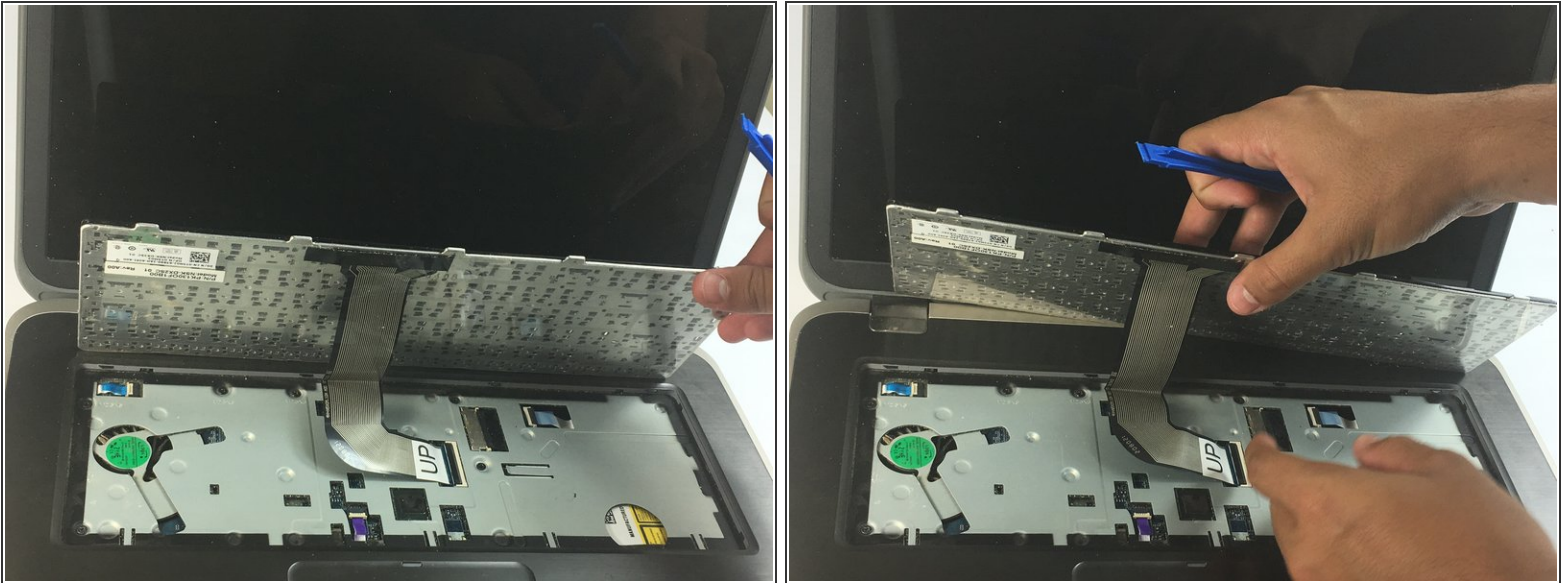

- Lift up on latch.

## Step 6



- Remove the keyboard cable.

To reassemble your device, follow these instructions in reverse order.